

REMINGTON®  
style

# Compact Diffuser 2000



D5005



REMINGTON

# Compact Diffuser 2000





# ENGLISH

Thank you for buying your new Remington® product.

Before use, please read the instructions carefully, and keep them in a safe place for future reference.



## PRODUCT FEATURES

- A 2000Watt Compact dryer
- B 3 heat/ 2 speed switch settings with  eco setting  
Using dryer on the mid heat setting (  eco ) saves more energy than using it on the high heat setting.
- C Ceramic-tourmaline grille for even heat, fast drying and frizz free shine
- D Cool shot – press and hold for cool shot of air
- E Removable easy-clean rear grille - Apply pressure to the sides of the rear grille and pull to remove. Line up the rear grille and push to re-attach.
- F Concentrator
- G Diffuser
- H Hang up loop
- I 1.8m cord

2 year guarantee



## INSTRUCTIONS FOR USE

### STEP 1 – WASH & CONDITION

- ▶ The condition of your scalp and hair is the secret to great looking hair.
- ▶ Choose the right balance of shampoo and conditioner to ensure your hair is kept in tip-top condition.

### STEP 2 – GET READY FOR STYLING!

- ▶ Squeeze out excess moisture with a towel and comb through.
- ▶ For straight or hard to style hair – Use a blow dry spray at the roots to create volume or throughout the lengths to create body, bounce and shine.

# ENGLISH

- ▶ Using the concentrator, remove excess moisture on medium heat/high speed setting.
- ▶ For straightening while drying, use the concentrator and a hairbrush (not included).
- ▶ To fix the style, apply cool air after styling.
- ▶ To enhance natural curls and waves, turn head upside down and using the diffuser attached to the hairdryer, gently place longer hair into the diffuser bowl and dry gently on the medium or high heat setting.
- ▶ To create extra volume at the roots, place the diffuser centre section against the head and gently rotate the hairdryer, allowing the diffuser fingers to massage the scalp gently. Be careful not to burn the scalp - use the hairdryer on a low heat setting.



## CLEANING AND MAINTENANCE

To maintain peak product performance and to prolong motor life, it is important to regularly remove dust and dirt from the rear grille and clean with a soft brush.

- ▶ Holding the dryer handle in one hand, press the chrome buttons on the sides of the dryer and pull away.
- ▶ To remove the filter, slide in an upwards motion. Use a small brush to remove any residue that has collected.
- ▶ To replace the filter, line the middle of the filter up with the runner on the dryer and slide back down to the original position.
- ▶ Line up the two holes on the sides of the dryer and snap into place.



## SAFETY CAUTIONS

**WARNING – FOR ADDITIONAL PROTECTION THE INSTALLATION OF A RESIDUAL CURRENT DEVICE (RCD) WITH A RATED RESIDUAL OPERATING CURRENT NOT EXCEEDING 30mA IS ADVISABLE. ASK AN ELECTRICIAN FOR ADVICE.**

**WARNING – THIS APPLIANCE MUST NOT BE TAKEN INTO A BATHROOM, IT SHOULD NOT BE USED NEAR BASINS OR OTHER VESSELS CONTAINING WATER OR OTHER LIQUIDS.**



This product is not suitable for use in bath or shower.

**THE HAIRDRYER SHOULD BE UNPLUGGED FROM MAINS SUPPLY WHEN NOT IN USE.**

## ENGLISH

- ▶ Do not leave the dryer unattended when switched on.
- ▶ Allow the dryer to cool down before storage.
- ▶ Do not immerse in water or other liquids.
- ▶ Do not wrap the cord around the unit. Check cord regularly for any sign of damage. Damaged cords can be dangerous.
- ▶ In use, take care that the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. Should this occur, switch off and allow the unit to cool down.
- ▶ Ensure the inlet grille is free from obstructions such as household fluff, loose hair etc.
- ▶ Do not place hairdryer on soft material e.g. carpet, bedding, towels, rugs etc.
- ▶ Do not leave the dryer switched on when you set it down.
- ▶ Always ensure the voltage to be used corresponds to the voltage stated on the unit.
- ▶ Do not direct the airflow towards the eyes or other sensitive areas.
- ▶ Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.
- ▶ Do not use any attachments with this hairdryer, other than those supplied by Remington®.
- ▶ Avoid allowing any part of the hairdryer to contact the face, neck or scalp.
- ▶ This appliance is not intended for commercial or salon use.
- ▶ If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- ▶ Special tools are required for any examination, adjustment or repair. Unqualified repair work could lead to hazardous conditions for the user.
- ▶ We do not accept responsibility for damage to the product, persons or other item(s), caused by misuse, abuse or non-compliance with these instructions.



### WIRING INSTRUCTIONS UK Plugs only

 
This product is fitted with a BS1363 plug fused at 13A. If the plug is unsuitable, it should be disconnected and an appropriate plug fitted as detailed below. If it is necessary to replace the plug fuse, use only fuses that are approved to BS1362, rated at 13A. If in doubt consult a qualified electrician.

# ENGLISH

The wires in the mains lead are coloured in accordance with following code:

BLUE - NEUTRAL

BROWN - LIVE



As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:  
The wire which is coloured BLUE must be connected to the terminal which is marked 'N' or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked 'L' or coloured RED. Never connect either of the wires to the big EARTH terminal marked 'E' or coloured GREEN or GREEN AND YELLOW.



## PROTECT THE ENVIRONMENT

Do not dispose of the product in household waste at the end of its life. Disposal can take place at the Remington® Service Centre or appropriate collection sites.



For further information on recycling see [www.remington-europe.com](http://www.remington-europe.com)

**2**  
years

## SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for the warranty period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the Remington® Service Center in your region.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required.

This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.



## REMINGTON® SERVICE HOTLINE

### **United Kingdom**

**+44 0800 212 438 (free call)**

**Spectrum Brands (UK) Limited**

**Fir Street**

**Failsworth**

**Manchester**

**M35 0HS United Kingdom**

**Email: [uk.service@remington.co.uk](mailto:uk.service@remington.co.uk)**

**[www.remington.co.uk](http://www.remington.co.uk)**





## Model No. D5005

09/UK/D5005 Version I I/I I Part No. T22-28906

REMINGTON® is a Registered Trade Mark of Spectrum Brands, Inc.,  
or one of its subsidiaries

VARTA Consumer Batteries GmbH & Co. KGaA

Alfred-Krupp-Str.9

73479 Ellwangen

Germany

[www.remington-europe.com](http://www.remington-europe.com)

© 2009 SBI

