

REMINGTON

REMINGTON®

 
 
 
 
 
 
 
 
 
 
 
360 FOIL SHAVER FLEX AND PIVOT TECHNOLOGY



**F4790/F5790
F6790/F7790**

09/UK/F4790/F5790/F6790/F7790 Version 02/09 Part No. T22-28024
Remington® Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.
VARTA Consumer Batteries GmbH & Co. KGaA
Alfred-Krupp-Str. 9
73479 Ellwangen
Germany
www.remington-europe.com
© 2009 SBI



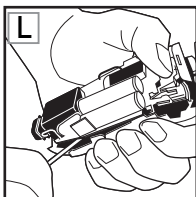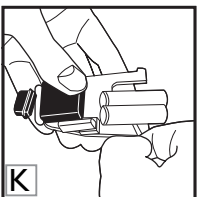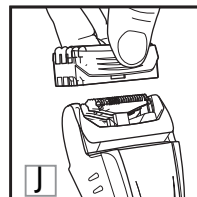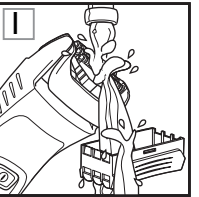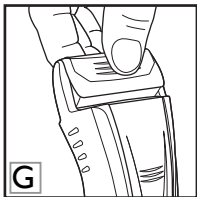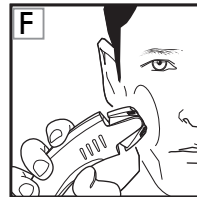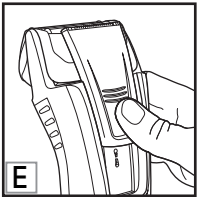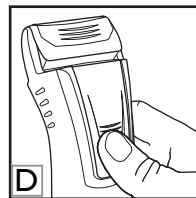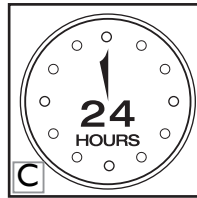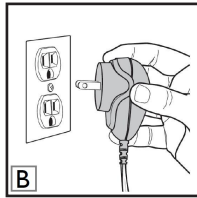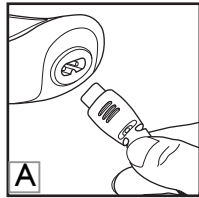

United Kingdom

+44 0800 212 438 (free call)

Rayovac Europe Ltd,
Watermans House, Kingsbury Crescent,
The Causeway, Staines, Middlesex,
TW18 3BA, UNITED KINGDOM

www.remington.co.uk

ENGLISH

REMINGTON

Thank you for choosing Remington®. Our products are designed to meet the highest standard of quality, functionality and design. We hope you enjoy using your new Remington® appliance. Please read the instructions for use carefully and keep in a safe place for future reference.



CAUTION

- ◆ Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington®.
- ◆ Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped into water.



DESCRIPTION

- 1 On/Off switch
- 2 Floating Hair pocket
- 3 Screens
- 4 Cutter assembly
- 5 Charging indicator
- 6 Pop up trimmer
- 7 Head guard
- 8 Power adaptor
- 9 Charging stand (Only for the F7790)
- 10 Cleaning brush

ENGLISH

Feature	F4790	F5790	F6790	F7790
Power System	Mains/ Rechargeable	Mains/ Rechargeable	Mains/ Rechargeable	Mains/ Rechargeable
Full Charge Time	2 hours	2 hours	2 hours	2 hours
Cordless Shave Time	60 mins	60 mins	60 mins	60 mins
Quick Charge	5 mins	5 mins	5 mins	5 mins
Indicators	Charge/recharge indicator	LED Fuel gauge	Digital battery level indicator	Digital battery level indicator
Low battery Indicator	Yes	Yes	Yes	Yes
Washable	Yes	Yes	Yes	Yes
Voltage Type	100-240V	100-240V	100-240V	100-240V



GETTING STARTED

For best shaving performance, it is recommended that you use your new shaver daily for up to four weeks to allow time for your beard and skin to become accustomed to the new shaving system.

- ▶ Ensure the product is switched off. Connect the shaver to the adapter (Fig. A), then to the mains (Fig. B) and charge for at least 24 hours when using for the first time (Fig C).
- ▶ **F7790-** Place your shaver in the charging stand, connect the charging adaptor to the stand and then to the mains.
- ▶ After the shaver batteries are fully charged, the charging indicator light will flash (**F4790**), the fuel gauge (**F5790**) or the LCD display (**F6790**, **F7790**) will indicate the shaver is fully charged.
- ▶ Use product until the battery is low. This is indicated by illuminated red light (**F4790**, **F5790**), or by the digital display (**F6790**, **F7790**).
- ▶ Fully recharge for 24 hours every 6 months to maintain battery condition.
- ▶ When empty, the battery will be fully charged around 2 hours for the **F4790**, **F5790**, **F6670** and the **F7790**, to provide 60 minutes (**F4790**, **F5790**, **F6790**, **F7790**) of shaving time.
- ▶ The shaver adapts automatically to a mains voltage between 100V and 240V.

■ CORDED USE

- ▶ Connect the shaver to the adapter, then to the mains and recharge for 5 min. before using.

◆ CAUTION:

Extended mains only use will result in the reduction of the battery life.



HOW TO USE

SHAVING

- ▶ Make sure your shaver is properly charged
- ▶ Begin by removing the protective head guard from your shaver.
- ▶ Switch the shaver on.
- ▶ Slide the pop-up trimmer up and use to remove long hair first. Then slide down when finished. (Fig. D-E)
- ▶ Stretch the skin with your free hand so the hairs stand upright.
- ▶ Hold the shaving head so all foils touch your skin simultaneously. The independently floating foils automatically adjust to the contours of your face. Only apply light pressure on the shaving head whilst shaving and use short, circular strokes. (Fig. F)
- ▶ To shave without the head pivoting system, slide the trimmer up to the first position.
- ▶ After shaving turn the shaver off.

TRIMMING

- ▶ Completely retracted (down), the trimmer is out of the way and off, for when you want to use the screens alone.
Press the trimmer button down with your thumb to get it into this position.
- ▶ In the middle position, the trimmer locks the pivoting head.
- ▶ Fully extended (up), the trimmer can be used to trim your sideburns and moustache.
It can also work with the screens, cutting the longer, hard-to-shave hairs so the screens can get extra close.

TIPS FOR BEST RESULTS

Ensure your skin is dry. Always hold the shaver at right angles to the skin so that both foils are touching the skin with equal pressure. Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line. **DO NOT** hold the shaver at an angle whereby only one foil is touching the skin. This will distort the foil and may cause the cutters to damage the foil. **DO NOT** press hard against the skin in order to avoid damage to the foil

ENGLISH



CARE FOR YOUR SHAVER

Care for your product to ensure a long lasting performance. We recommend you clean your shaver after each use. The easiest and the most hygienic way to clean the shaver is by rinsing the product head after use with warm water. Always keep the protective cap on the shaving head and keep the trimmer in the "off" position when the shaver is not in use.

■ DRY CLEANING

- ▶ Pull the foil assembly up to remove from the hair pocket. (Fig. G)
- ▶ Thoroughly blow out the stubble from the foils and cutters.
- ▶ Use the cleaning brush to sweep out the cutters. Do not use the cleaning brush on the foils. Damage may occur to the holes of the foils. (Fig. H)
- ▶ Replace head assembly

■ WASHABLE CLEANING

- ▶ Pull the foil assembly up to remove from the hair pocket. (Fig. G)
- ▶ Foils – do not use the brush to clean the foils. Instead, blow the shavings out or rinse the foils und cold water or warm water.
- ▶ Cutters & Trimmers – Use the cleaning brush to sweep any loose hairs from the cutter and trimmer. Rinse them in cold or warm water. Do not use hot water. (Fig. I)
- ▶ Do not submerge the shaver in water.
- ▶ After cleaning, replace the head assembly. (Fig. J)

◆ CAUTION:

Do not clean the shaving foil with the brush.
Do not remove or replace head assembly while shaver is running as it may cause damage to the unit's foils and cutters.

To clean the external surfaces of the shaver, use a damp cloth.

Do not use strong detergents or other chemicals.

To dry, wipe the surface of the shaver with a dry towel

■ REPLACING THE FOILS & CUTTERS

To ensure the continued highest quality performance from your shaver, we recommend that foils and cutters are replaced regularly.

Signs that your foils and cutters need replacing:

- ▶ Irritation: As foils get worn, you may experience skin irritation.
- ▶ Pulling: As the cutters wear, your shave may not feel as close and you may feel your cutter pulling your hair.
- ▶ Wear through: You may notice that the cutters have worn through the foils.

TO REPLACE THE FOIL

- ▶ Pull the foil assembly up to remove from the hair pocket.
- ▶ Insert new foil assembly in hair pocket until it snaps in place.

TO REPLACE THE CUTTERS

- ▶ Grasp cutter between thumb and forefinger and pull upward.
- ▶ Snap both new cutter assemblies into top of oscillator tips.

Spare Parts :

Replacement model F4790 :

F5790 :

F6790-F7790 :

SP-290

SP-390

SP-399

Note: Do not press on the cutter ends as this may cause damage.



IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- ▶ An appliance should never be left unattended when plugged in to a power outlet, except when charging. Keep the power adaptor and cord away from heated surfaces.
- ▶ Make sure the power adaptor and cord do not get wet.
- ▶ Do not plug or unplug the shaver with wet hands.
- ▶ Do not use the product with a damaged cord. A replacement can be obtained via the Remington® Service Center.
- ▶ Charge, use and store the product at a temperature between 15°C and 35°C.
- ▶ Always unplug from the mains when cleaning or when being used under running water.
- ▶ Only use parts supplied or recommended by Remington®
- ▶ Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance



TROUBLESHOOTING

- ▶ If your shaver battery is completely empty or the shaver has not been used for an extended period of time, the shaver may not start when operated using the cord. If this occurs, charge the shaver for approximately 15 sec. before shaving.
- ▶ Your shaver should be mainly used in cordless mode and only recharged when battery charge is low. Extended mains only use or continuous connection to the mains will result in the reduction of the battery life.

ENGLISH



PROTECT THE ENVIRONMENT

The shaver contains NiMH cell unit. This cell does not contain any harmful metals. Do not dispose the shaver in household waste at the end of its useful life. Disposal can take place at the Remington® Service Center or appropriate collection sites. However, if you prefer to dispose the cell unit yourself, please follow the instructions as shown in Fig. K-L .

⚡ CAUTION:

Do not put in fire or mutilate your battery packs as they may burst or release toxic materials.



For further information on recycling see www.remington-europe.com



BATTERY REMOVAL

When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver and be recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the shaver without the batteries.

⚡ CAUTION:

Do not put in fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns. Dispose of properly in accordance with your local and state requirements.

To Remove the Rechargeable Battery:

- 1 Using a small screwdriver, pry off the front panel.
- 2 Using Phillips screwdriver remove (4) screws from front of shaver , and remove the front housing.
- 3 Using Phillips screwdriver remove (8) screws from front of shaver
- 4 Remove and open the core from the shaver to expose the batteries.
- 5 Cut wires connecting batteries to the circuit board.
- 6 Remove batteries and dispose of properly. (Fig. K-L)

ENGLISH

REMINGTON



SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for a 2 year period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the Remington® Service Center in your region.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include shaving heads / foils and cutters which are consumable parts. Also not covered is damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.