



REMINGTON®
style inspirations



H0747





REMINGTON



B



C





ENGLISH

Thank you for purchasing your new Remington® product.

Before use, please read the instructions carefully, and keep them in a safe place for future reference.



PRODUCT FEATURES

- A** 12 wax filled rollers with ceramic ionic technology
 - 4 x 43mm rollers
 - 8 x 38mm rollers
- B** 12 colour coded clip
- C** 12 colour coded pins
- D** On indicator light
- E** Cool touch ends
- F** Storage case

3 year guarantee

ENGLISH



INSTRUCTIONS FOR USE

- ▶ Hair should be clean, dry and tangle free before styling.
- ▶ **IMPORTANT:** the rollers will begin to heat-up as soon as the power supply is switched on.
- ▶ The lid should be in the down position until the rollers are ready to use. The rollers will take approximately 10 minutes to attain the correct operating temperature.
- ▶ To Curl - Take a section of hair, about the width of the roller.
- ▶ Wrap the ends of the hair around the roller, keeping the hair at right angles to the scalp. Wind the roller right down to the roots.
- ▶ Secure the roller firmly in place with the correct size pin or clip, as near to the scalp as possible.
- ▶ Use the small rollers for tighter curls; the larger rollers give looser curls and waves.
- ▶ Remove the rollers from your hair by gently unwinding. Let the curl spring back into place and leave the hair to cool fully before styling. This ensures the optimum set.
- ▶ Unplug the unit after you have used all the rollers you need.

LONG AND WAVY

- ▶ For long, voluminous, smooth waves use the jumbo rollers or the super jumbo rollers.
- ▶ Roll the top, front layer of the hair back to your crown, using one roller.
- ▶ Next, use three other rollers to roll the remaining hair in three equal sections on the back and sides of the head.
- ▶ Roll the hair under, up the nape of the neck.

FLICKED OUT

- ▶ Use a jumbo or super jumbo roller on a large section of the hair on your crown to give height.
- ▶ Roll the hair back and under to the crown.
- ▶ Next, take large sections all around the sides of your head, and roll up so the hair will flip out.
- ▶ You should roll the curlers up to the level of the top of your ear. Leave the rollers in place for approximately ten minutes.
- ▶ Unroll the curlers in the order that you put them in, let the curl cool for a minute to set.
- ▶ Next, brush your hair out, using your hands to shape the flip outward.

ENGLISH



IMPORTANT INSTRUCTIONS

- ▶ Do not pour any hair lotions or conditioners into the rollers.
- ▶ The lid should be closed while the rollers are heating up.
- ▶ Ensure there is a roller on each slot while the unit is heating up and that each roller is properly inserted into the base unit.
- ▶ Care should be taken to avoid contact between the hot surface of the roller and the sensitive skin of the face and neck.
- ▶ DO NOT USE ON ARTIFICIAL HAIRPIECES OR WIGS.



CLEANING AND MAINTENANCE

- ▶ Make sure the unit is unplugged and cool.
- ▶ Rollers may be cleaned with a damp cloth and mild detergent or soap.
- ▶ Dry rollers completely before replacing in unit.



SAFETY CAUTIONS

WARNING – FOR ADDITIONAL PROTECTION THE INSTALLATION OF A RESIDUAL CURRENT DEVICE (RCD) WITH A RATED RESIDUAL OPERATING CURRENT NOT EXCEEDING 30mA IS ADVISABLE. ASK AN ELECTRICIAN FOR ADVICE.

WARNING – THIS APPLIANCE MUST NOT BE TAKEN INTO A BATHROOM. IT SHOULD NOT BE USED NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER OR OTHER LIQUIDS.



This product is not suitable for use in bath or shower.

THE ROLLERS SHOULD BE UNPLUGGED FROM MAINS SUPPLY WHEN NOT IN USE.

- ▶ Do not leave the rollers unattended when switched on.
- ▶ Allow heated rollers to cool down before storage.
- ▶ Do not immerse in water or other liquids.
- ▶ Do not wrap the cord around the unit. Check cord regularly for any sign of damage. Damaged cords can be dangerous.
- ▶ Do not place rollers on soft material e.g. carpet, bedding, towels, rugs etc.
- ▶ Always ensure the voltage to be used corresponds to the voltage stated on the unit.

ENGLISH

- ▶ Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.
- ▶ Avoid allowing any part of the rollers to contact the face, neck or scalp.
- ▶ This appliance is not intended for commercial or salon use.
- ▶ If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- ▶ Special tools are required for any examination, adjustment or repair. Unqualified repair work could lead to hazardous conditions for the user.
- ▶ We do not accept responsibility for damage to the product, persons or other item(s), caused by misuse, abuse or non-compliance with these instructions.




WIRING INSTRUCTIONS UK Plugs Only

This product is fitted with a BS1363 plug fused at 5A. If the plug is unsuitable, it should be disconnected and an appropriate plug fitted as detailed below. If it is necessary to replace the plug fuse, use only fuses that are approved to BS1362, rated at 5A. If in doubt consult a qualified electrician.

The wires in the mains lead are coloured in accordance with following code:

GREEN AND YELLOW - EARTH
BLUE - NEUTRAL
BROWN - LIVE

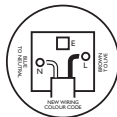

As these colours may not correspond with the coloured markings sometimes used to identify the terminals in a plug connect as follows:

The wire coloured Green and Yellow must be connected to the terminal marked E or by the earth symbol or coloured Green, or Green and Yellow. The wire coloured Blue must be connected to the terminal marked N or coloured Black. The wire coloured Brown must be connected to the terminal marked L or coloured Red.

ENGLISH



PROTECT THE ENVIRONMENT

Do not dispose of the product in household waste at the end of its life. Disposal can take place at the Remington® Service Centre or appropriate collection sites.



For further information on recycling see www.remington-europe.com



SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for the warranty period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the Remington® Service Center in your region.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.



REMINGTON® SERVICE HOTLINE

United Kingdom

 **+44 0800 212 438 (free call)**

Rayovac Europe Ltd,
Watermans House, Kingsbury Crescent,
The Causeway, Staines, Middlesex,
TW18 3BA, UNITED KINGDOM

www.remington.co.uk





Model No. H0747

I0/UK/H0747 Version I0/I0 Part No. T22-30565

REMINGTON® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries

VARTA Consumer Batteries GmbH & Co. KGaA

Alfred-Krupp-Str.9

73479 Ellwangen

Germany

www.remington-europe.com

© 2010 SBI

This product is not suitable for use in bath or shower.

