

REMINGTON®

PRO POWER



HC5800
HC5600
HC5400

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery

Visit www.productregister.co.uk/remington.
You must register within 28 days
of purchase.






Thank you for choosing Remington®. Our products are designed to meet the highest standard of quality, functionality and design. We hope you enjoy using your new Remington® product. Please read the instructions for use carefully and keep in a safe place for future reference. Claim your extra 1 year warranty by registering your product online. Simply go to: www.productregister.co.uk/remington

STOP IMPORTANT SAFEGUARDS

- 1 **WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:**
- 2 Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington®.
- 3 Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- 4 An appliance should never be left unattended when plugged in to a power outlet, except when charging.
- 5 Keep the power plug and cord away from heated surfaces.
- 6 Make sure the power plug and cord do not get wet.
- 7 Do not plug or unplug the appliance with wet hands.
- 8 Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- 9 Do not twist or kink the cable, and don't wrap it around the appliance.
- 10 Store the product at a temperature between 15°C and 35°C.
- 11 Only use the parts supplied with the appliance.
- 12 The appliance, including its cord, must not be used, played with, cleaned or maintained by persons under eight years old and should at all times be kept out of their reach.
- 13 Use, cleaning or maintenance of the appliance by children over eight or by anyone with a lack of knowledge, experience or with reduced physical, sensory or mental capabilities should only be undertaken after receiving appropriate instruction and under the adequate supervision of a responsible adult to ensure that they do so safely and that the hazards involved are understood and avoided.
- 14 Don't put the appliance in liquid, don't use it near water in a bath-tub, basin or any other vessel, and don't use it outdoors.
- 15 Suitable for cleaning under an open water tap. 

PRO POWER

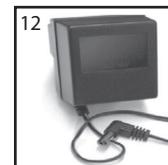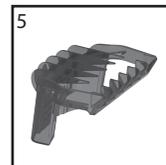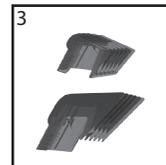

KEY FEATURES

- | | |
|------------------------------------|-----------------------------|
| 1 On / Off Switch | 6 Quick wash release button |
| 2 Blade set | 7 Charging indicator light |
| 3 2 attachment guide combs | 8 LED display (HC5800) |
| 4 Adjustable stubble comb (HC5800) | 9 Micro USB port |
| 5 1.5mm Stubble comb (HC5600) | 10 Micro USB cable |
| | 11 Charging stand (HC5800) |
| | 12 Adaptor |

GETTING STARTED

* CHARGING YOUR HAIRCLIPPER

- Before using your hairclipper for the first time, charge for 16-20 hours.
- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.
- If the product is not going to be used for an extended period time (2 – 3 months), unplug it from the mains and store.
- Fully recharge your product when you would like to use it again.
- Allow 16 hours for a full charge on the HC5400 and 4.5 hours on the HC5600 and HC5800.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 16-20 hours.
- ◆ This appliance should be charged by approved safety isolating adaptors PA-3215E (for HC5400 EU version) or PA-3215U (for HC5400 UK version) with the output capacity of 3.2V dc; 1500mA; and should be charged by approved safety isolating adaptors PA-4515E (for HC5600,HC5800 EU version) or PA-4515U (for HC5600,HC5800 UK version) with the output capacity of 4.5V dc; 1500mA .

* QUICK CHARGE (HC5600 & HC5800)

Quick charge time	10 minutes	30 minutes	1 hour	2 hours
Run time	5 minutes	15 minutes	30 minutes	40 minutes

* CHARGING VIA CHARGING STAND (HC5800)

- Ensure the product is switched off.
- Connect the charging adaptor to the charging stand and then to the mains.
- Allow 4.5 hours for a full charge.

* CHARGING VIA STANDARD ELECTRICAL SOCKET

- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.
- Allow 16 hours for a full charge on the HC5400 and 4.5 hours on the HC5600 and HC5800.

* USB

- Connect your USB cable to the USB port on your power source.
- Connect the USB cable to your appliance.

Note: charging may take longer when charging via USB.

* CORDED USE

- Connect the charging adaptor to the product then to the mains.
- When the cord is connected to the mains, a digital display will be displayed on the appliance (HC5800).

◆ **CAUTION:** Extended mains only use will result in the reduction of the battery life.

◆ **WARNING:** The appliance can not be operated in corded mode while connected to a PC via the USB port.

* CORDLESS USE

When the unit is switched on and fully charged, the product can be used in cordless mode for up to 60 minutes for the HC5400 and up to 120 minutes for the HC5600 & HC5800.

HOW TO USE

* BEFORE STARTING THE CUT

- Inspect the clipper making sure that it is free from hair and dirt.
- Seat the person so that their head is approximately at your eye level.
- Before cutting, always comb the hair so it is tangle free and dry.

Comb position	Adjustable stubble comb (HC5800)	Short comb	Long comb
1	1 mm	3 mm	24 mm
2	3 mm	6 mm	27 mm
3	5 mm	9 mm	30 mm
4	7 mm	12 mm	33 mm
5	9 mm	15 mm	36 mm
6	11 mm	18 mm	39 mm
7	13 mm	21 mm	42 mm

* TO ATTACH A COMB

- Hold the comb with its teeth upward.
- Slide it onto and along the clipper blade until the front of the comb firmly sits against the clipper blade.

* TO REMOVE THE COMB

- Holding the clipper with the blades facing away from you, firmly push the comb upward and away from the blades.

✳ EVERY SIX MONTHS

- At regular intervals the blade set should be removed and cleaned.
- Remove the 2 screws retaining the fixed blade with a screwdriver. Do not remove blade set.
- Brush out hairs from between the blades with soft cleaning brush. Do not remove the lubricating grease from the blades. It is not necessary to remove the small moving blade from the unit.
- If the moving blade has been removed this can be re-fitted by slotting the coated blade holder over the pin in the centre of the interior product head. The groove on the coated blade, just below the teeth, rests on a metal plate at the opposite side to the screw holes. The fixed blade is fitted with the raised profile pointing outwards and fixed with the 2 screws.
- Note that if the blades are not correctly aligned then cutting efficiency will be impaired.
- Place a few drops of cutter or sewing machine oil onto the blades. Wipe off excess oil.

✳ CLEANING CAUTIONS

- Ensure the appliance is switched off and unplug from the main outlet before cleaning
- Only the attachment guide combs and trimmer blade may be removed from the product for cleaning.
- Cleaning should be done with a soft brush, such as the brush supplied with the product.
- Do not rinse under water.
- Do not use harsh or corrosive cleaners on the units or their blades.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Ensure that the clipper is discharged of all power and disconnected from the mains.
- Remove the screw cover from back housing.
- Using a small screwdriver, remove (1) screw from the bottom of the clipper.
- Pry the front panel from the front housing and expose the inner housing .
- Using a small screwdriver, remove (4) screws from inner housing
- Pry the cover of inner housing and expose the PCB and batteries.
- Cut or break the wire stamps on the both end of the batteries and remove the batteries.
- The battery is to be disposed of safely.

➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Defects from repair by an unauthorized dealer are not covered.

Consumables are excluded.

Your statutory rights are not affected.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at

www.remington.co.uk/parts-accessories

➡ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 OHS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.



REMINGTON®

Model No. HC5800/HC5600/HC5400

13/UK/HC5800/HC5600/HC5400 T22-0001003 Version 01 /13

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2013 SBI

