

REMINGTON®

KERATIN THERAPY PRO



S8590



£10,000 prize draw
PLUS Free Rewards Gallery

Register online now to
collect your reward
See back for
details



Thank you for buying your new Remington® product.
Before use, please read these instructions carefully and keep them safe. Remove all packaging before use.

KEY FEATURES

- 1 Advanced Keratin Ceramic coated 110 mm plates
- 2 On-off switch
- 3 Heat Protection Sensor
- 4 Heat Protection Sensor on-off switch
- 5 Heat Protection Sensor on indicator icon
- 6 Temperature controls
- 7 Temperature display
- 8 Turbo boost function
- 9 Switch lock function
- 10 Heat resistant pouch
- 11 Swivel cord

PRODUCT FEATURES

- Keratin Protective Technology
- High heat 160°C to 230°C.
- 110mm longer length floating plate – for even pressure on the hair as you straighten.
- Fast heat up - ready in 15 seconds.
- Adjustable +/- temperature controls, provides precise heat control to suit hair type and length.
- Switch lock function - prevents accidentally changing the temperature settings while using the styler.
- Turbo boost function – automatically sets the highest temperature. Hold the 't' button for 2 seconds and the temperature will boost to 230°C
Please note, the highest temperature is not suitable for every hair type. Please select a temperature mode depending on your hair texture.
- Automatic safety shut off – This unit will switch itself off if no button is pressed or it is left on after 60 minutes
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.
- 5 year guarantee

SAFETY CAUTIONS

- 1 The appliance, including its cord, must not be used, played with, cleaned or maintained by persons under eight years old and should at all times be kept out of their reach. Use, cleaning or maintenance of the appliance by children over eight or by anyone with a lack of knowledge, experience or with reduced physical, sensory or mental capabilities should only be undertaken after receiving appropriate instruction and under the adequate supervision of a responsible adult to ensure that they do so safely and that the hazards involved are understood and avoided.
- 2 Do not put the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors.

- 3 Keep the hot straightening plates away from the skin.
- 4 Do not leave the appliance unattended while plugged in.
- 5 Only set the appliance down on a heat-proof surface.
- 6 Do not use attachments other than those we supply.
- 7 Do not twist or kink the cable, or wrap it round the appliance.
- 8 Do not use the appliance if it is damaged or malfunctions.
- 9 If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, in order to avoid hazard.
- 10 This appliance is not intended for commercial or salon use.
- 11 Let the appliance cool down before cleaning and storing away.



INSTRUCTIONS FOR USE

- 1 Before use, ensure the hair is clean, dry and tangle-free.
- 2 Section the hair prior to styling. Style the lower layers first.
- 3 Plug in the styler and press and hold the on button to switch on. When the styler is plugged in but not turned the lock symbol will be illuminated indicating styler is in stand by mode. The Heat Protection function will automatically be on when the styler is turned on – indicated by the pulsing indicator icon.
To turn this function off press and hold the Heat Protection Sensor on-off button.
- 4 Start styling on lower temperatures first. Select appropriate temperature for your hair type using the controls on the side of the straightener.

Recommended Temperatures:

Temperature	Hair Type
160°C - 180°C	Fine
180°C - 200°C	Medium
200°C - 230°C	Thick

- 5 The temperature display will stop flashing once the desired temperature is reached – this will be about 15 seconds.
- 6 Working on one section at a time run the straightener through the entire length of the hair, without stopping.
If the Heat Protection Sensor is on during styling it will monitor moisture in the hair and continually optimise the temperature to prevent damage without compromising on results. These changes are not displayed by the straightener and happen quickly and automatically during styling.
- 7 When finished press and hold the off button for two seconds to turn off and unplug the appliance.

Switch lock function

Set the desired temperature by pressing +/- buttons and lock the switch settings by pressing the ‘-’ button for 2 seconds. A ‘padlock’ symbol will appear next to the temperature.
To unlock the switch settings, press and hold the ‘-’ button again for 2 seconds.

Hinge lock for storage

Plates can be shut together for easy storage

Locked- Push the hinge lock up to the locked position

Unlocked- Pull the hinge lock down to the unlocked position

NOTE: Do not heat the unit in the locked position

CLEANING AND MAINTENANCE

Unplug the appliance and let it cool.

Wipe all surfaces with a damp cloth.

Don't use harsh or abrasive cleaning agents or solvents.

WIRING INSTRUCTIONS UK PLUGS ONLY

The product doesn't need an earth.


It has a 13A BS1362 fuse in a 13A BS1363 plug.

To replace the plug, fit the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable/moulded plug unless the fuse cover is in place.

If you remove the plug, dispose of it.

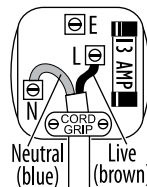

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➡ SERVICE AND GUARANTEE

This product has been checked and is free of defects.

We guarantee this product against any defects that are due to faulty material or workmanship for the guarantee period from the original date of consumer purchase.

If the product should become defective within the guarantee period, we will repair any such defect or elect to replace the product or any part of it without charge, provided there is proof of purchase.

This does not mean an extension of the guarantee period.

In the case of a guarantee simply call the Service Centre in your region.

This guarantee is offered over and above your normal statutory rights.

The guarantee shall apply in all countries in which our product was sold via an authorised dealer.

This guarantee does not include damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required.

This guarantee shall not apply if the product has been dismantled or repaired by a person not authorised by us.

If you ring the Service Centre, please have the Model No. to hand, as we won't be able to help you without it.

It's on the rating plate which can be found on the appliance.

UNITED KINGDOM

 +44 0800 212 432(free call)
Customer Services
Spectrum Brands(UK) Limited
Fir Street,
Failsworth,
Manchester
M35 0HS,
UK

www.remington.co.uk12/UK/S8590 Version 01/12 Part No. T22-33434
Remington® is a Registered Trade Mark of Spectrum Brands, Inc.,
or one of its subsidiaries
Spectrum Brands (UK) Ltd
Fir Street,
Failsworth,
Manchester
M35 0HS
www.remington.co.uk
© 2012 SBI



REGISTRATION AND PRIZE DRAW

Collect your free reward, and a chance to win £10,000.
Visit www.productregister.co.uk/remington