

REMINGTON®

EST. NEW YORK 1937




Cordless Bikini Trimmer BKT4000

 remington-europe.com


Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

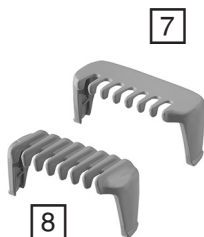

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
-  Suitable for use in a bath or shower.
- The body of this appliance is not washable or water resistant. Do not put the appliance in liquid.
- **WARNING:** Detach the device from the charging adapter before cleaning it in water.
- Do not use the product with a damaged cord.
- **WARNING:** For recharging the battery, only use the charger supplied with the appliance – type reference PA-0505U.
- Always replace a damaged adaptor with one of the original type.
- The battery in this device is not replaceable.
- Do not use the appliance if it is damaged or malfunctions.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|----------------------------|-------------------------|
| 1. Detail Trimmer | 6. Hang Up Loop |
| 2. Main Trimmer | 7. 2mm Comfort Comb |
| 3. Easy Clean Washout Area | 8. 4mm Comfort Comb |
| 4. On/Off Switch | 9. Beauty Bag |
| 5. Charging Indicator | 10. Adaptor (not shown) |
-

GETTING STARTED

- Note: It is recommended to fully charge your appliance before using for the first time. Please refer to the charge times shown in this book.
- Ensure the product is switched off.
- Connect the adaptor to the product and then to the mains.

CHARGE LEVEL INDICATORS

Charge Level	Indicator
Charging	LED will illuminate
Fully charged	LED will remain illuminated

- Run time from fully charged is up to 60 minutes.
- Charge time from empty is 4 hours.
- Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

INSTRUCTIONS FOR USE

- Select the desired trim length prior to trimming by attaching one of the comfort combs.
- If trimming longer hair, or if trimming for the first time, always start with the longest length comb (4mm) and work your way down to shorter lengths until you reach your desired style.
- Always ensure the trimmer is switched off before attaching or removing a comb.
- Switch the shaver on by pressing the on/off switch.

CHANGING THE ATTACHMENTS

- To attach a comb, place it on top of the trimmer with the teeth of the comb over the main trimmer. Slide the comb down until it clicks into place.
- To remove the comb, pull the sides of the comb where it connects to the trimmer out and lift the comb away from the trimmer.

- Note: Using the detail trimmer with no comb attached will trim down to 0.2mm.
- Using the main trimmer with no comb attached will trim hair to 1mm.
- Holding the main trimmer upright on the skin will trim hair to 0.4mm.

BIKINI

- Choose and attach the desired comfort comb.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair, against the direction of hair growth. As hair grows in different directions, you may wish to change direction where necessary.
- The comb will trim the hair to the same length, whichever direction you trim.
- CAUTION: Ensure that the trimmer blade is kept away from any sensitive areas.
- TIP: Use slow and even strokes and keep the skin nice and taut to ensure hairs are well trimmed.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off and remove the comb. Brush excess hair from the trimmer (dry use) or rinse the comb under water (wet use).

CLOSE TO SKIN TRIMMING AND SHAPING THE BIKINI AREA

- For close to skin trimming for the bikini area, remove the comb and use the detail trimmer. This will trim hair down to 0.2mm.
- To edge and shape the bikini area, remove the comb and use the main trimmer held upright on the skin to create the desired shape.
- This trimmer has been designed so that it can be used in the shower.
- Please do not store the trimmer in an area that constantly gets wet.
- Make sure you dry the trimmer after each use.

CARE FOR YOUR TRIMMER

- To ensure long lasting performance clean after each use.
- Ensure the appliance is switched off and unplugged from the mains before cleaning.
- The easiest and most hygienic way to clean the trimmer is under the tap.
- Allow the water to run through the washout area to help wash out any hair trimmings from the inside of the trimmer.

BATTERY REMOVAL

The battery must be removed from the appliance before it is scrapped.

The appliance must be disconnected from the supply mains when removing the battery.

TO REMOVE THE BATTERY:

1. Ensure the trimmer is discharged of all power.
 2. Pry the trimmer head out using a single sided screwdriver.
 3. Using a small screwdriver, unscrew 2 screws on the back housing of the trimmer.
 4. Pry the front of the trimmer away using a single side screwdriver.
 5. Pry the circuit board holder from the back using the single side screwdriver so you can see the circuit board and batteries.
 6. Destroy the circuit board using a wire cutter, cut the tabs on both ends of the battery assembly and remove the circuit board.
- The battery is to be disposed of safely.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

ADAPTER SPECIFICATIONS

Manufacturer address and registration number	Spectrum Brands (UK) Limited, Regent Mill, Fir Street, Failsworth, Manchester M35 0HS Company number: 02394603
Adapter model number	PA-0505U
Input voltage	100 - 240 V~
Input AC Frequency	50/60Hz
Output voltage	5.0 V ---
Output current	0.5 A
Output power	2.5 W
Average active efficiency	≥73.16%
Efficiency at 10%	-
No load power consumption	≤0.1W

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under

any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

☎ 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

productsupport@Remington.co.uk

IRELAND

☎ 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

productsupport@Remington.co.uk

Ref. No. BKT4000

Type No. RG026A

20/UK/ BKT4000 T22-7001543-B Version 07 /20

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

remington-europe.com

© 2020 Spectrum Brands, Inc.