

REMINGTON®

EST. NEW YORK 1937



PROluxe Rollers H9100

 remington-europe.com

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.



Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
 - ⊘ Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
 - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
 - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom*.
- * Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
 - Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
 - Do not allow any part of the appliance touch the face, neck or scalp.

- Keep the power plug and cord away from heated surfaces.
- Do not leave the appliance unattended while plugged in.
- Do not place the appliance on any soft furnishings.
- Do not use attachments other than those we supply.
- Do not set the appliance down while still on.
- Do not twist or kink the cable, or wrap it round the appliance.
- Do not use the appliance if it is damaged or malfunctions.
- Check the cord regularly for any sign damage.
- Always keep the lid closed while the rollers are heating.
- Ensure there is a roller on each slot while the unit is heating and that each roller is properly inserted into the base unit.
- **DO NOT USE ON ARTIFICIAL HAIRPIECES OR WIGS.**
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|--|-----------------------|
| 1. Velvety flocked rollers
8 x medium 25mm
12 x large 32mm | 3. Cool touch ends |
| 2. Ceramic heated hinged clips | 4. On indicator light |
| | 5. Base unit |

INSTRUCTIONS FOR USE

- Before use, ensure the hair is clean, dry and tangle-free.
- For extra protection use a heat protection spray.
- Hairsprays contain flammable material - do not use while using this product.
- Section the hair prior to styling. Style the lower layers first.
- Plug the product into the mains power supply.
- The on indicator light will glow once plugged in indicating that the rollers are on.
- **CAUTION:** the appliance will begin to heat-up as soon as the power supply is switched on.
- The lid should remain closed until the rollers are ready to use.
- Rollers will be ready in approximately 90 seconds. Allow 3 to 5 minutes for best results.
- When you feel your setters are ready, open the lid for 1 minute and begin use.

TO CURL

1. Starting with the lower sections of hair, take a section the width of a roller.
2. Start by using the medium sized rollers. Slide the roller up out of the base unit using the clip.
3. Remove the clip from the roller.

4. With the section of hair in one hand and the roller in the other, place the roller at the ends of the hair and wind the hair around the roller towards the root ensuring the hair is always taut.
5. Secure the hair in place using the clip.
6. Repeat steps 3-5 until all of your hair is in rollers.
7. Let the hair cool for approximately 5-10 minutes to achieve long lasting styles.
8. For best results ensure the large rollers are used on the top sections of hair.
9. Whilst the hair is cooling, unplug the rollers from the mains and allow to cool.
10. When you feel ready, remove the rollers from the hair, hold the roller in one hand and remove the clip with the other.
11. Gently and slowly unwind the hair from the roller.
12. Once the roller is removed from the hair, place the clip onto the roller and store back in the base unit.
13. Repeat this process until all rollers are removed.
14. Once all rollers are removed, gently tease out the curls with your hand or a brush for a more natural finish.
15. Once the unit has cooled, wrap the cord around the unit and store away.

CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.
- Dry rollers completely before replacing in the unit.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Product support:

productsupport@remington.co.uk

IRELAND

 142 951 40

Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

productsupport@remington.co.uk

Ref. No. H9100

Type No. H9100

21/UK/ H9100 T22-7002083 Version 04 /21

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.
Spectrum Brands (UK) Ltd

Fir Street,
Failsworth,
Manchester

M35 0HS
remington-europe.com

© 2021 Spectrum Brands, Inc.