

REMINGTON®

EST. NEW YORK 1937









X6 Power-X Series Hair Clipper HC6000

 remington-europe.com

Register online for an **EXTRA** year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

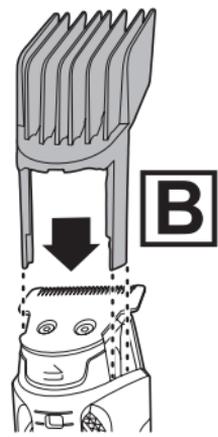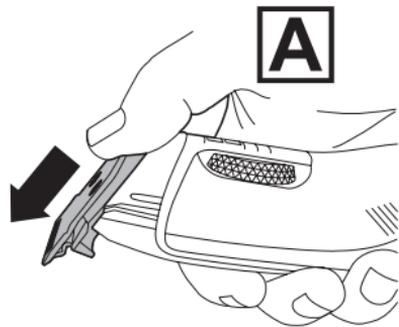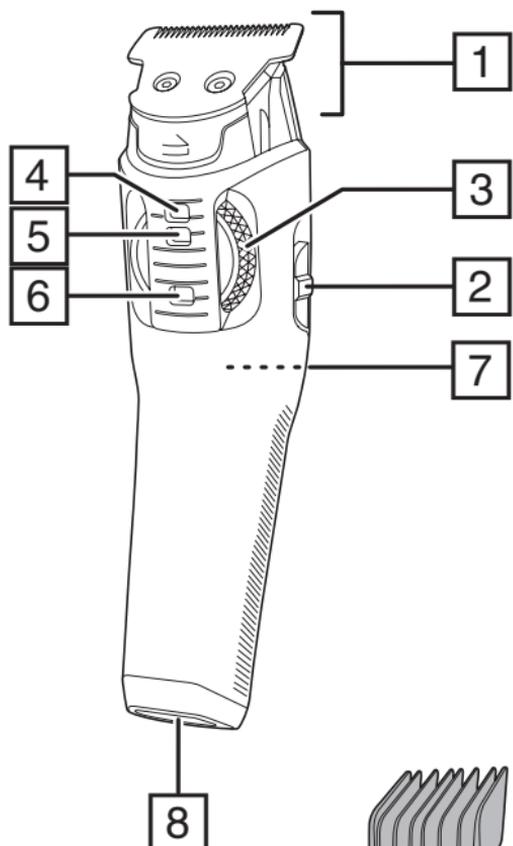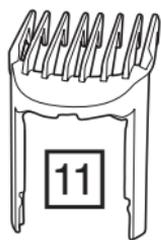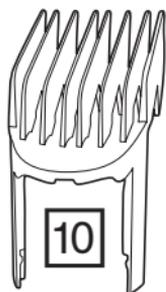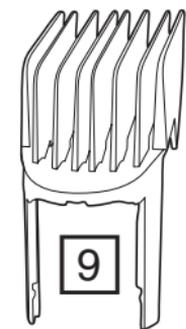

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.



- The device is suitable for cleaning under an open water tap.
- **WARNING:** Detach the device from the charging adaptor before cleaning it in water.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- **WARNING:** For recharging the battery, only use the charger supplied with the appliance - type reference PA-0510U.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|--|--------------------------------|
| 1. Blade set | 8. Charger connector |
| 2. On/Off/Turbo Switch | 9. 25 - 35 mm comb |
| 3. Length adjustment dial | 10. 14 - 24 mm comb |
| 4. Length setting window for 25 - 35 mm comb | 11. 3 - 13 mm comb |
| 5. Length setting window for 14 - 24 mm comb | 12. Micro fade adjustable comb |
| 6. Length setting window for 3 - 13 mm comb | Not Shown: |
| 7. Digital display | • Adaptor |
| | • Cleaning brush |
| | • Oil bottle |
-

GETTING STARTED

CHARGING YOUR APPLIANCE

- Before using your hairclipper for the first time, charge for 1 hour.
- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.
- If the product is not going to be used for an extended period of time (2 – 3 months), unplug it from the mains and store.
- Fully recharge your hairclipper when you would like to use it again.
- Allow 1 hour for a complete charge.

DIGITAL DISPLAY

- The device features a digital fuel gauge to show remaining charge and charging status:

During charging:	
When the unit is plugged in, the corded indicator icon will show (🔌). With the device turned off and connected to the charger, the display will light up in a rotating pattern during charging.	
Once charged the display will show 90 and the corded indicator icon (🔌).	

During corded use:	
When the unit is plugged in, the corded indicator icon will show (☎). Normal operating speed:	
When the unit is plugged in, the corded indicator icon will show (☎). Turbo mode:	
During cordedless use:	
The display will show the remaining run time in minutes. When the run time reaches 5 minutes it will flash.	
When in turbo mode, the display will be the same as above with the turbo symbols (>>>)	

- To preserve the life of your batteries, let them run out every 6 months then recharge for 1 hour.
- The clipper comes with a quick charge function, 10 minutes charging will give an emergency burst of run time.

CHARGING VIA STANDARD ELECTRICAL SOCKET

- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.

USB

- Connect Micro USB to the appliance, and the USB connector to any standard USB port or charger
- Product will only charge through USB and will not run in corded mode.

CORDED USE

- Connect the charging adaptor to the product then to the mains.

CAUTION Extended mains only use will result in the reduction of the battery life.

CORDLESS USE

- When the product is switched on and fully charged it can be used in cordless mode for up to 90 minutes.

INSTRUCTIONS FOR USE

BEFORE STARTING THE CUT

- Inspect the clipper making sure that it is free from hair and dirt.
- Seat the person so that their head is approximately at your eye level.
- Before cutting, always comb the hair so it is tangle free and dry.

TO ATTACH A COMB

- Hold the comb with its teeth upward.
- Align the legs of the comb with the holes in the top of the clipper on each side of the blade and slide the legs into the trimmer until they click (Fig B).
- To remove, firmly pull the comb straight up away from the clipper.

SETTING THE LENGTH OF CUT

- Your clipper comes with three adjustable combs 3 to 13 mm, 14 to 24 mm and 25 to 35 mm.
 - These provide a length of cut that can be adjusted between 3 and 35 mm in increments of 1 mm.
1. Select the comb that fits the range of cut you want to achieve.
 2. Fit the comb then rotate the length adjustment dial until the length you want appears in the length selection window for that comb.
 3. The length setting colour on the wheel matches the length marker colour on the comb.
 4. For example, if you want a cut length of 20 mm, fit the 14 to 24 mm comb then turn the dial until 20 appears in the length setting window for the 14 - 24 mm comb.
 5. Use the clipper without any fixed combs for trimming hair close to the skin.
 6. This will trim hair to 1mm, holding the clipper so the blades are perpendicular to the skin will trim hair to 0.5mm.

INSTRUCTIONS FOR CUTTING HAIR

- For even cutting, allow the comb attachment/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum comb attachment.

STEP 1 – NAPE OF THE NECK

- Set the comb to 3 mm or 6 mm.
- Hold the clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
- Slowly lift the clipper, working upwards and outwards through the hair, trimming just a little at a time.

STEP 2 – BACK OF THE HEAD

- With the comb set at 12 mm or 18 mm, cut the hair at the back of the head.

STEP 3 – SIDE OF THE HEAD

- With the comb set at 3 mm or 6 mm, trim sideburns. Then change to the longer 9 mm guide comb and continue to cut the top of the head.

STEP 4 – TOP OF THE HEAD

- Use the longer length comb attachment and set it to 24 mm or 27 mm then cut hair on top of the head against the direction in which the hair normally grows.
- For longer hair on top, use the longer length comb attachment (25 – 35 mm) to achieve the desired style.
- Always work from the back of the head.

STEP 5 – THE FINISHING TOUCHES

- Use the clipper without an attachment comb for close trimming around the base and sides of the neck.
- To produce a clean straight line at the sideburns, reverse the hair clipper.
- Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

MICRO FADE ADJUSTABLE COMB

The micro fade adjustable comb allows precision cutting in the 1 to 5 mm range.

Use the adjustment dial to set the comb to the desired length.

AUTO TURBO SYSTEM

- When switched on, your clipper runs in normal mode. The Auto Turbo feature will automatically activate when the clipper senses it needs more power.
- To run in Turbo mode, slide the on/off switch to the turbo position.

CARE FOR YOUR HAIRCLIPPER

- Your clipper is fitted with high quality blades.
- To ensure long lasting performance of your clipper, clean the blades and unit regularly.
- Always keep the attachment guide comb on the trimmer blade.

AFTER EACH USE

- Ensure the appliance is switched off and unplugged from the charger before cleaning.
- Brush the accumulated hair from the blades and body of the clipper. Do not submerge the clipper in water.
- To clean unit, wipe with a damp cloth and dry immediately.
- Place a few drops of cutter or sewing machine oil onto the blades. Wipe off excess oil.

WASHABLE BLADE CLEANING

- This clipper is fully washable and therefore can be rinsed under a running tap.
- To remove the blades ensure the unit is switched off. Push the blade set away from the clipper body using your thumb (Fig A).
- To reattach once the blades are cleaned and dry, align the bottom of the blade with the bottom blade housing tab and slide the cartridge back into place until you hear a click.

CLEANING CAUTIONS

- Do not use harsh or corrosive cleaners on the units or their blades.
- Ensure the appliance is switched off and unplugged from the main outlet before cleaning.

REMOVING THE RECHARGEABLE BATTERY

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The battery must be removed from the appliance before it is scrapped.
 - Disconnect the charging adapter before removing the battery.
1. Ensure that the battery is fully discharged. To do this, operate the device until it stops.
 2. Pry off and remove the top panel.
 3. Unscrew the 2 screws from the top housing.
 4. Pry off and remove the top housing.
 5. Unscrew the 3 screws on the inner housing then remove the inner housing.
 6. Remove the battery assembly.
 7. Cut the battery tabs and remove the battery from bracket.
- The battery must be disposed of at an appropriate official recycling/collection point.
 - Do not attempt to operate the trimmer once you have opened it.

ADAPTER SPECIFICATIONS

Manufacturer address and registration number	Spectrum Brands (UK) Limited, Regent Mill, Fir Street, Failsworth, Manchester M35 0HS Company number: 02394603
Adapter model number	PA-0510U
Input voltage	100 - 240 V~
Input AC Frequency	50/60Hz
Output voltage	5.0 V ---
Output current	1.0 A
Output power	5.0 W
Average active efficiency	≥73.7%
Efficiency at 10%	-
No load power consumption	≤0.1W

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK

www.remington.co.uk

Product support:

productsupport@remington.co.uk

IRELAND

 142 951 40

Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

productsupport@remington.co.uk

Ref. No. HC6000

Type No. HC18A

20/UK/ HC6000 T22-7001608 Version 10 /20

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

remington-europe.com

© 2020 Spectrum Brands, Inc.