

# REMINGTON®

EST. NEW YORK 1937




## The Works Hair Clipper Kit HC910

 [remington-europe.com](http://remington-europe.com)

**Register online for an EXTRA year guarantee**

Visit [uk.remington-europe.com/product-registration](http://uk.remington-europe.com/product-registration) You must register within 28 days of purchase.

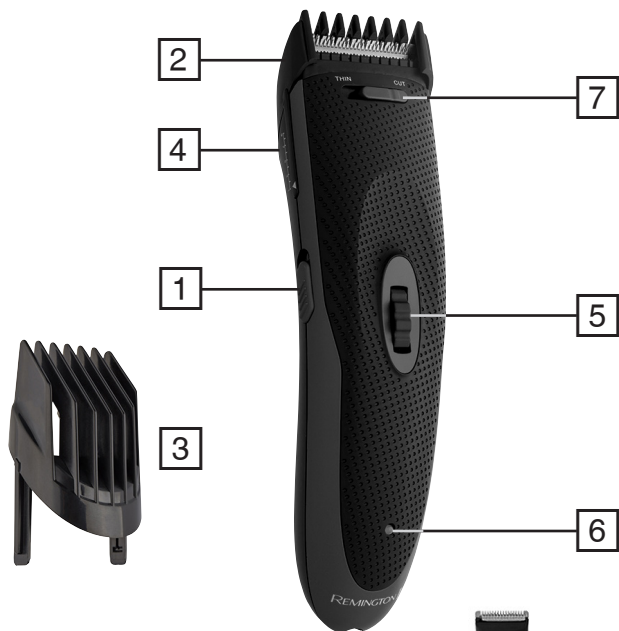

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## **IMPORTANT SAFEGUARDS**

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
- The body of this appliance is not washable or water resistant. Do not put the appliance in liquid.
- Do not use the product with a damaged cord.
- **WARNING:** For recharging the battery, only use the charger supplied with the appliance - type reference SW-030060BS.
- Always replace a damaged adaptor with one of the original type.
- The battery in this device is not replaceable.
- Do not use the appliance if it is damaged or malfunctions.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

---

## PARTS

---

- |                              |                         |
|------------------------------|-------------------------|
| 1. On/off switch             | 8. Rotary trimmer       |
| 2. Adjustable Comb (3-15mm)  | 9. Precision trimmer    |
| 3. Adjustable Comb (18-30mm) | 10. Battery compartment |
| 4. Length position indicator | Not Shown:              |
| 5. Zoom wheel                | • Adaptor               |
| 6. Charging indicator light  | • Cleaning brush        |
| 7. Hair texture switch       | • Oil bottle            |
- 

## GETTING STARTED

---

### CHARGING YOUR APPLIANCE

- Before using your hairclipper for the first time, charge for 16 hours.
- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.
- When charging, the charge indicator light will light up.
- If the product is not going to be used for an extended period of time (2 – 3 months), unplug it from the mains and store.
- Fully recharge your hairclipper when you would like to use it again.
- Allow 16 hours for a complete charge.
- Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

### CHARGING VIA STANDARD ELECTRICAL SOCKET

- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.

### CORDED USE

- Connect the charging adaptor to the product then to the mains.
  - When connected, the charge indicator light will light up.
- CAUTION Extended mains only use will result in the reduction of the battery life.

### CORDESS USE

- When the product is switched on and fully charged it can be used in cordless mode for up to 45 minutes.

---

## INSTRUCTIONS FOR USE

---

### BEFORE STARTING THE CUT

- Inspect the clipper making sure that it is free from hair and dirt.
- Seat the person so that their head is approximately at your eye level.
- Before cutting, always comb the hair so it is tangle free and dry.

## TO ATTACH A COMB

- Hold the comb with its teeth upward.
- Align the legs of the comb with the holes in the top of the clipper on each side of the blade and slide the legs into the trimmer until they click.
- To remove, firmly pull the comb straight up away from the clipper.

## COMB SETTINGS

Select the comb length by rotating the zoom wheel upwards to increase the length and downwards to decrease the length. Please see the table below for the different length increments.

| MARK | Cutting Length (mm) |               |
|------|---------------------|---------------|
|      | Comb 1 - Short      | Comb 2 - Long |
| 1    | 3                   | 18            |
| ●    | 4.5                 | 19.5          |
| 3    | 6                   | 21            |
| ●    | 7.5                 | 22.5          |
| 5    | 9                   | 24            |
| ●    | 10.5                | 25.5          |
| 7    | 12                  | 27            |
| ●    | 13.5                | 28.5          |
| 9    | 15                  | 30            |

## INSTRUCTIONS FOR CUTTING HAIR

- For even cutting, allow the comb attachment/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum comb attachment.

### STEP 1 – NAPE OF THE NECK

- Set the comb to 3 mm or 6 mm.
- Hold the clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
- Slowly lift the clipper, working upwards and outwards through the hair, trimming just a little at a time.

### STEP 2 – BACK OF THE HEAD

- With the comb set at 9 mm or 12 mm, cut the hair at the back of the head.

### STEP 3 – SIDE OF THE HEAD

- With the comb set at 9 mm or 12 mm, trim sideburns.

#### **STEP 4 – TOP OF THE HEAD**

- Use the longer length comb attachment and set it to 30 mm then cut hair on top of the head against the direction in which the hair normally grows.
- Always work from the back of the head.

#### **STEP 5 – THE FINISHING TOUCHES**

- Use the clipper without an attachment comb for close trimming around the base and sides of the neck.
- To produce a clean straight line at the sideburns, reverse the hair clipper.
- Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

---

### **CARE FOR YOUR HAIRCLIPPER**

---

- Your clipper is fitted with high quality blades.
- To ensure long lasting performance of your clipper, clean the blades and unit regularly.
- Always keep the attachment guide comb on the trimmer blade.

#### **AFTER EACH USE**

- Ensure the appliance is switched off and unplugged from the charger before cleaning.
- Brush the accumulated hair from the blades and body of the clipper. Do not submerge the clipper in water.
- To clean unit, wipe with a damp cloth and dry immediately.
- Place a few drops of cutter or sewing machine oil onto the blades. Wipe off excess oil.

#### **EVERY SIX MONTHS**

- Hold the hair clipper in one hand so that the blades are at the top, and the front of the hair clipper is facing you.
- Place your thumb of the opposite hand underneath the blades at the front of the unit, hold the back of the blade set with your fore finger and middle finger and firmly press upwards with your thumb. The blade set will detach from the hair clipper.
- Brush the accumulated hair from the hair pocket and blades.
- Replace the blade set by inserting the notch (on the inside at the bottom of the blade set) into the groove of the hair pocket and firmly push down with the palm of your hand until you hear an audible 'click' and the blade set is locked into place.

---

## REMOVING THE RECHARGEABLE BATTERY

---

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The rechargeable battery must be removed from the appliance before it is scrapped.
- Disconnect the charging adapter before removing the battery.
- 1. Ensure that the battery is fully discharged. To do this, operate the device until it stops.
- 2. Remove the blade assembly.
- 3. Remove the 4 screws from rear housing.
- 4. Pry open the top housing.
- 5. Pry and open the top housing.
- 6. Take out the inner assembly to expose the batteries.
- 7. Disconnect the battery from the circuit board.
- The battery must be disposed of at an appropriate official recycling/collection point.
- Do not attempt to operate the device once you have opened it.

---

## PRECISION TRIMMER, AND NOSE AND EAR TRIMMER

---

### INSERTING BATTERIES

- Both trimmers require 1 'AA' alkaline battery (first one included).
- Ensure the product is switched off.
- To open the battery compartment, turn the base of the unit approximately 1cm counter-clockwise and pull it off.
- Insert the battery into the unit, positive end first.
- Replace the base and turn it 1cm clockwise to lock it into place.

Note: Your trimmer will not work if the batteries are inserted incorrectly.

---

## INSTRUCTIONS FOR USE

---

Note: Do not apply excessive pressure as this damages the trimmer head and may cause skin injury.

### TO REMOVE HAIR FROM NOSE

- Select the nose and ear trimmer.
- Insert trimmer's cutting unit gently into the nostril.
- Gently move the trimmer in and out of the nostril and at the same time rotate the trimmer.
- Avoid inserting the cutting unit more than 6mm into your nostril.

### **TO TRIM SIDEBURNS**

- Select the precision trimmer.
- Turn the trimmer on.
- Gently guide the cutting unit to your sideburns holding the unit horizontally at a 90 degree angle to the sideburns.
- Trim the sideburns moving the trimmer slowly and carefully, to ensure that you do not accidentally cut hairs that you do not intend to trim.
- Note: It is not recommended that you use the trimmer to define or trim the eyebrows.

### **TO REMOVE HAIR FROM EAR**

- Select the nose and ear trimmer.
- Insert the cutting unit gently into the outer ear canal opening.
- Gently rotate the trimmer in a circular motion.
- Avoid inserting the cutting unit more than 6mm into your ear canal.

---

## **CARE FOR YOUR TRIMMER**

---

- Care for your product to ensure a long lasting performance. We recommend that you clean your trimmer after each use.
- For best results, keep trimmer running while running it under the tap.
- Dry off excess water.
- Do not submerge in water as damage will occur.

### **TROUBLESHOOTING**

- The trimmer is not running but has battery power left:
- If the trimmer is not running it may need cleaning; look for and remove any dried debris from the cutting blades.

### **AFTER EACH USE**

- Rinse the accumulated hair from the cutters as noted above. Ensure all debris is removed from between the blades and shake off excess water.

---

## **BATTERY REMOVAL**

---

- The battery must be removed from the appliance before it is scrapped.
- Rotate the battery compartment cap approximately ¼ turn anti-clockwise then pull off.
- Remove the battery from the battery compartment.
- Place the cap back on the unit opposite to how it came off and rotate clockwise until the cap snaps into place.
- The battery is to be disposed of safely.



---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under

any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: **<https://uk.remington-europe.com/product-registration>**

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.


\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

---

## SERVICE CENTRE

---

### UNITED KINGDOM

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd


Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

[productsupport@Remington.co.uk](mailto:productsupport@Remington.co.uk)

### IRELAND

 142 951 40

Remington Consumer Products,  
Unit B12, Ballymount Corporate Park,  
Ballymount, Dublin 12

<https://ie.remington-europe.com>

[productsupport@Remington.co.uk](mailto:productsupport@Remington.co.uk)

# **Ref. No. HC910** Includes HC900, NE910, PG910 **Type No. HC9000/PG-018**

21/UK/ HC910 T22-7001911 Version 01 /21

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[remington-europe.com](http://remington-europe.com)

© 2021 Spectrum Brands, Inc.