

REMINGTON®

Nano Series Nose and Ear Trimmer



NE3850
NE3870

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery



Visit www.remington.co.uk/productregister
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe.
Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Suitable for use in shower.
- 3 Do not disassemble the cutter assembly.
- 4 Always remember to turn the trimmer on before you insert it into your nose or ear to avoid injury.
- 5 This appliance is not intended for commercial or salon use.

BATTERY SAFETY

- ★ Note: Remove batteries if the unit is not in use for long periods.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the appliance before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Do not short circuit the battery contacts.
- Used batteries must be removed from the appliance, recycled or disposed of in an environmentally friendly way (see ENVIRONMENTAL PROTECTION).



KEY FEATURES

- 1 On/Off switch
- 2 Vertical trimmer
- 3 Rotary trimmer (NE3850)
- 4 Detail trimmer (NE3870)
- 5 5 setting guide comb for detail trimmer (NE3870)
- 6 Vertical trimmer attachment combs
- 7 Battery compartment
- 8 Active BladeClean system button
- 9 Wash out feature

GETTING STARTED

INSERTING BATTERIES

- Your NE3850 requires 1 'AA' alkaline battery (first one included).
- Your NE3870 requires 1 'AA' lithium battery (first one included).
- We recommend that you use VARTA® batteries.
- Ensure the product is switched off.
- Rotate the battery compartment cap approximately ¼ turn anti-clockwise then pull off.
- Insert the battery so that the (+) and (-) marks on the batteries face the same mark in the battery compartment.
- Place cap back on unit using the alignment marks and rotate clockwise until the cap snaps into place.
- ★ Note: Your trimmer will not work if the batteries are inserted incorrectly.
- ★ Note: Remove the batteries if the appliance is not in use for long periods.

EXCHANGING THE ATTACHMENTS

- Ensure the product is switched off.
- Remove the head by turning it anti-clockwise and pull off.
- Attach the other head by placing it on the top of the unit and turning it clockwise to lock into position.

TURNING ON THE TRIMMER

- The On/Off switch is integrated into the battery cap.
- Rotate the battery cap clockwise to turn on.
- To turn off, simply rotate the battery cap anti-clockwise to the off position.

INSTRUCTIONS FOR USE

- ★ Note: your trimmer has been designed to be used in the shower if desired. Do not submerge trimmer when in use. It can be rinsed, or used in the shower, but not underwater.

TO REMOVE HAIR FROM NOSE

- The vertical trimmer or rotary trimmer (NE3850) can be used for trimming the nose hair.
- Insert trimmer's cutting unit gently into the nostril.
- Gently move the trimmer in and out of the nostril and at the same time rotate the trimmer.
- Avoid inserting the cutting unit more than 6mm into your nostril.

✱ TO REMOVE HAIR FROM EYEBROWS

- Attach the vertical linear trimmer.
- For trimming, attach one of the attachment combs onto the vertical linear trimmer.
- Gently guide the cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.
- To remove the hairs completely, remove the attachment comb and lower the trimmer onto the skin and move over the desired area.
- Use slow and well-controlled movements.

✱ TO REMOVE HAIR FROM EAR

- The vertical trimmer or rotary trimmer (NE3850) can be used for trimming ear hair.
- Insert the cutting unit gently into the outer ear canal opening.
- Gently rotate the trimmer in a circular motion.
- Avoid inserting the cutting unit more than 6mm into your ear canal.
- ✱ Note: Do not apply excessive pressure as this damages the trimmer head and may cause skin injury.

✱ TO SHAPE SIDEBURNS AND BEARD LINES (NE3870)

- Hold trimmer with detail trimmer blade (NE3870) facing you.
- Start with edge of beard/moustache line and gently lower the trimmer blade onto your skin. Use motions towards edge of beard/moustache line to trim to desired locations in facial area and away from beard in neck area.

✱ TO TRIM SIDEBURNS AND OTHER FACIAL HAIR AREAS (NE3870)

- The detail trimmer (NE3870) comes with an adjustable comb to trim sideburns and other facial hair areas to any length between 1 and 5mm.
- To attach the comb onto the detail trimmer (NE3870), ensure the trimmer blade is facing away from you and then slide the guide comb over the back of the trimmer blade until fitted securely.
- Hold the trimmer with cutting blade facing you.
- Use a small comb to lift the hairs. Hold the comb at the desired beard or moustache length.
- Move the trimmer along the comb to cut the hairs. Use light pressure and well-controlled movements to trim hair.

CARE FOR YOUR TRIMMER

- Care for your product to ensure a long lasting performance. We recommend that you clean your trimmer after each use.
- For best results, keep trimmer running while running it under the tap. Allow water to run through the washout port and over the blades. Press the Active BladeClean system button while rinsing to flush water through the blades.
- Dry off excess water.
- Do not submerge in water as damage will occur.

TROUBLESHOOTING

- The trimmer is not running but has battery power left:
- If the trimmer is not running it may need cleaning; look for and remove any dried debris from the cutting blades and then press the Active BladeClean system button whilst rinsing the trimmer under running water.

AFTER EACH USE

- Rinse the accumulated hair from the cutters as noted above. Ensure all debris is removed from between the blades and then press the Active BladeClean system button and shake off excess water.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- Rotate the battery compartment cap approximately $\frac{1}{4}$ turn anti-clockwise then pull off.
- Remove the battery from the battery compartment.
- Place the cap back on the unit opposite to how it came off and rotate clockwise until the cap snaps into place.
- The battery is to be disposed of safely.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.


Defects from repair by an unauthorized dealer are not covered.


If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at
www.remington.co.uk/parts-accessories

➡ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.ie.remington-europe.com

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. NE3850 / NE3870

17/UK/ NE3850 / NE3870 T22-0004814 Version 02 /17

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.
Spectrum Brands (UK) Ltd

Fir Street,
Failsworth,
Manchester
M35 0HS

www.remington.co.uk

© 2017 Spectrum Brands, Inc.