

REMINGTON

smooth&silky®



**BATTERY OPERATED
LADY SHAVER**





REMINGTON®



ENGLISH

Thank you for choosing Remington®. Our products are designed to meet the highest standard of quality, functionality and design. We hope you enjoy using your new Remington® product. Please read the instructions for use carefully and keep them in a safe place for future reference.



CAUTION

- ⚠ Use this appliance only for its intended use as described in this manual.
- ⚠ Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped into water.



DESCRIPTION

1. Head assembly
2. Head release button
3. On/Off button
4. 2 hypoallergenic flexing shaver foils
5. Bikini trimmer comb guard
6. Flexible trimmer
7. Battery compartment
8. Massage strip
9. Cleaning brush

2 year guarantee

ENGLISH



GETTING READY

Be patient when first using your lady shaver, as with any new product, it may take a little while to familiarise yourself with the product. Take the time to acquaint yourself with your shaver, as we are confident you will receive years of enjoyable use and complete satisfaction.

■ INSERTING BATTERIES

- ▶ Your shaver requires 2 'AAA' alkaline batteries (first set included). We recommend that you use VARTA® batteries.
- ▶ Make sure the product is turned off.
- ▶ Rotate the battery compartment cap approximately 1/4 turn anti-clockwise then pull off.
- ▶ Insert 2 "AAA" alkaline battery, so that the (+) and (-) marks on the battery face the same mark in the battery compartment.
- ▶ Place cap back on unit using the alignment marks and rotate clockwise until the cap snaps into place.

⚡ **NOTE:** Your shaver will not work if the batteries are inserted incorrectly.

⚡ **NOTE:** Remove batteries if the unit is not in use for long periods.

ENGLISH



HOW TO USE



Your lady shaver is suitable for legs, underarms and the bikini area. It can be used dry or in the shower.

■ FOR REGULAR SHAVING

- ▶ Remove protective cap before shaving.
- ▶ Turn the lady shaver on.
- ▶ Hold the lady shaver at a right angle to your skin and move the shaver against the direction of the hair growth.
- ▶ After shaving, turn shaver off.

◆ Note: Before dry shaving, make sure that the area is clean, dry and free from creams or oils

■ FOR LONGER HAIRS

If you have not shaved for a while, use the trimmer before shaving. This will help you achieve a more effective shaving result.

- ▶ Hold the shaver with the trimmer facing your leg and slightly tilted towards you (approximately at a 45° angle).
- ▶ Move the trimmer slowly against the direction of the hair growth.



ENGLISH

■ TRIMMING AND SHAPING

- ▶ Attach the bikini trimmer attachment.
- ▶ Hold the shaver at a right angle to your skin and press down gently.
- ▶ Edge and shape the areas as desired.

■ FOR BEST SHAVING PERFORMANCE

- ▶ We recommend that you use your new shaver daily for two or three weeks to allow time to find the optimum shaving methods for your particular type of hair growth patterns.

⚠ CAUTION

- ▶ If your skin is easily irritated by shaving, or you suffer from skin allergies, you should test a section of your arm or leg before using the shaver.



CARE FOR YOUR SHAVER

To ensure long lasting performance of your shaver, clean the head assembly regularly. The easiest and the most hygienic way to clean the shaver is by rinsing the shaving head after use with warm water. Always keep the protective cap on the shaving head when the shaver is not in use.

■ AFTER EACH USE

- ▶ Ensure the shaver is turned off.
- ▶ Press the side release button to slip open the head assembly.
- ▶ Blow any loose debris from the foil.





ENGLISH

- ▶ Brush or rinse the accumulated hair from the main body of the shaver, head assembly and cutter assembly.
- ▶ Leave the head assembly open to let the shaver dry completely.

◆ NOTE:

- ▶ The lady shaver is suitable for use in the bath or shower.
- ▶ Do not rinse with water hotter than 70°C.
- ▶ Do not completely submerge the lady shaver in water.
- ▶ Ensure that the lady shaver is turned off and when cleaning.
- ▶ Do not clean the shaving foils with the brush.
- ▶ At regular intervals, put a drop of sewing machine oil onto the foils and cutter heads.

■ REPLACING YOUR FOILS AND CUTTERS

To ensure the continued highest quality performance from your shaver, we recommend that the foil and cutter are replaced every 6 months. These can be obtained from our nearest Remington® Service Centre.

Signs that your foils and cutters need replacing:

- ▶ Irritation: As foils get worn, you may experience skin irritation.
- ▶ Pulling: As the cutters wear, your shaver may not feel as close and you may feel the cutter pulling your hair.
- ▶ Wear through: You may notice that the cutters have worn through the foils.

ENGLISH

■ TO REPLACE THE FOIL

- ▶ Ensure the lady shaver is switched off.
- ▶ Gently push the small plastic area at either end of the foil. The foil should then easily detach from the head assembly.
- ▶ To reassemble, slide the foils into foil brackets and click into position.
- ▶ Close the head assembly.

⚠ CAUTION

- ▶ Only hold the plastic to prevent damage to the foil.
- ▶ Do not press on the foil when replacing.

■ TO REPLACE THE CUTTERS

- ▶ Ensure the shaver is switched off and open the head assembly (as above).
- ▶ To remove cutter, grasp cutter between thumb and forefinger and pull upward.
- ▶ To reassemble cutter, place cutter onto oscillator tip. Gently push down clicking into position.

STOP

IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- ▶ An appliance should never be left unattended when plugged in to a power outlet, except when charging.
- ▶ Make sure the product and battery compartment do not get wet.
- ▶ Do not use the product with a damaged cord. A replacement can be obtained via the Remington® Service Centre.

ENGLISH

- ▶ Store the product at a temperature between 15°C and 35°C.
- ▶ Only use the parts supplied with this appliance. Use of non Remington® parts with this product may give rise to a hazardous condition.
- ▶ This product is batteries operated only.
- ▶ Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.
- ▶ Always turn off when cleaning or when being used under running water.



PROTECT THE ENVIRONMENT

The product uses alkaline batteries. Do not dispose this product in household waste at the end of its useful life. Disposal can take place at an appropriate collection sites.

- ⚠ **CAUTION:** Do not put in fire or mutilate your battery packs as they may burst or release toxic materials.



For further information on recycling see www.remington-europe.com

ENGLISH

2
years

SERVICE & WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for a 2 year period from the original date of consumer purchase.

If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the REMINGTON® Service Centre in your region.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include shaving heads / foils and cutters which are consumable parts. Also not covered is damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.



REMINGTON® SERVICE HOTLINES

United Kingdom

 **+44 0800 212 438 (free call)**

Rayovac Europe Ltd,
Watermans House, Kingsbury Crescent,
The Causeway, Staines, Middlesex,
TW18 3BA, UNITED KINGDOM

www.remington.co.uk





All technical modifications reserved. I0/I0 TSC I0.0822



Model no. WDF4815

I0/UK/WDF4815 Version I0/I0 Part No.T22-30445

Remington® is a Registered Trademark of Spectrum Brands, Inc., or one of its subsidiaries.

VARTA Consumer Batteries GmbH & Co. KGaA

Alfred-Krupp-Str. 9

73479 Ellwangen

Germany

www.remington-europe.com

© 2010 SBI

