

REMINGTON

smooth & silky®



6in1 CORDLESS
GROOMING SET



Model No. WPG250

09/UK/WPG250 Version 07/09 Part No. T22-28170
REMINGTON® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries
VARTA Consumer Batteries GmbH & Co. KGaA
Alfred-Krupp-Str.9
73479 Ellwangen
Germany
www.remington-europe.com
© 2009 SBI



CE



➔ REMINGTON® SERVICE HOTLINES

United Kingdom

☎ +44 0800 212 438 (free call)

Rayovac Europe Ltd,
Watermans House, Kingsbury Crescent,
The Causeway, Staines, Middlesex,
TW18 3BA, UNITED KINGDOM

www.remington.co.uk

ENGLISH

Thank you for choosing REMINGTON®. Our products are designed to meet the highest standard of quality, functionality and design. We hope you enjoy using your new REMINGTON® product. Please read the instructions for use carefully and keep in a safe place for future reference.



CAUTION

- ◆ Use this appliance only for its intended use as described in this manual.
- ◆ Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped into water.



DESCRIPTION

- 1 Precision trimmer attachment
- 2 Adjustable comb attachments
- 3 Fine trimmer attachment
- 4 MiniScreen shaver attachment
- 5 On/Off button
- 6 Charging indicator light
- 7 Mains adaptor
- 8 Cleaning brush

ENGLISH



GETTING STARTED

Be patient when first using your trimmer, as with any new product, it may take a little while to familiarise yourself with the product. Take the time to acquaint yourself with your trimmer, as we are confident you will receive years of enjoyable use and complete satisfaction.

INSTRUCTIONS FOR CHARGING

Always ensure that your hands, trimmer and mains adaptor are dry before charging.

Before using your REMINGTON® trimmer for the first time charge for **24** hours. For subsequent uses, charge for **14-16** hours before use. One full charge allows **30** mins of cordless usage time.

- ▶ Ensure the product is switched off and attach the mains adaptor to the trimmer.
- ▶ Connect the mains adaptor to the mains. The charging indicator will illuminate.
- ▶ Charge for the time indicated above.
- ▶ Use the product until the battery is low. This is indicated by the trimmer running distinctly slower.

◆ **NOTE:** This product is for cordless use only. Do not use your trimmer whilst it is plugged into the mains.

Your trimmer cannot be overcharged. However, if the product is not going to be used for an extended period time (2-3 months), unplug it from the mains and store. Fully recharge your trimmer when you would like to use it again.

To preserve the life of your batteries, let them run out every six months then recharge for 14-16 hours.

■ CHARGING CAUTIONS

- ▶ Do not attach the mains adaptor to the mains with wet hands.
- ▶ Always charge the trimmer in a cool, dry place.
- ▶ Do not charge the trimmer in close proximity to water.
- ▶ The trimmer can be attached to an electrical outlet voltage of 220V – 240V

YOUR TRIMMER ATTACHMENTS

Your trimmer has 5 different attachments to meet all your trimming needs: a precision trimmer, a fine trimmer and a miniscreen shaver. Accompanying these attachments are 2 combs to enable you to adjust the hair lengths. Please see the 'How to use' section for guidance on which attachments to use for each area.

■ EXCHANGING THE ATTACHMENTS

Just place the attachment on the trimmer and turn it clockwise until the lock symbols align/ you hear an audible 'click'.

■ ATTACHING THE ADJUSTABLE COMB TO THE PRECISION TRIMMER

The precision trimmer has 2 adjustable comb attachments can be adjusted to give 8 different trim lengths.

- ▶ To fasten the comb attachment, slide it onto the precision trimmer from front to back until it lock into place
- ▶ Press the button and push forward to back to select the length you require.
- ▶ To remove, push the button down and gently push towards the front of the trimmer head.



Combs attachment settings :

| Position | Length |
|----------|--------|
| 1 | 1 mm |
| 2 | 2 mm |
| 3 | 3 mm |
| 4 | 4 mm |
| 5 | 5 mm |
| 6 | 6 mm |
| 7 | 7 mm |
| 8 | 8 mm |

If you are trimming for the first time, start with the maximum trimming length setting.



HOW TO USE



This trimmer is a wet trimmer, the hand-held part of which may be used in a bath or shower.

■ BIKINI

To trim the length

- ▶ Attach the precision trimmer.
- ▶ Place one of the comb attachment on the trimmer, select the desired length.
- ▶ Place the flat top of the comb against the skin and slowly slide the trimmer through the hair in the direction of hair growth.

◆ CAUTION: Ensure that the trimmer blade is kept away from any sensitive areas.

Edging and shaping

- ▶ Attach the fine trimmer.
- ▶ Hold the trimmer at a right angle to your skin and press down gently.
- ▶ Edge and shape the area as desired.
- ▶ Attach the miniscreen shaver and move over any trimmed areas for a smoother result.

■ UNDERARMS

- ▶ Attach the miniscreen shaver.
- ▶ Gently move the shaver against the hair growth.

◆ NOTE: If hair length is more than 1mm use the precision trimmer first.

■ EYEBROWS AND FACIAL HAIR

To reduce the length

- ▶ Attach the fine trimmer.
- ▶ This attachment can be used for trimming unwanted eyebrow hair, facial hair, nose and ear hair, or any stray body hair.

ENGLISH

Tips for best results

- After trimming, lightly go over the trimmed areas with the miniscreen shaver to get a smooth clean finish. Position the trimmer at a 45° angle so that the plastic area before the foil is touching your skin.
- Since all hairs do not grow in the same direction, you may want to try trimming in different directions (i.e. upwards, downwards or across) for better results.

◆ **NOTE:** The miniscreen shaver is designed to shave small detailed areas. It was not designed to shave large surfaces. For a close comfortable shave of these areas use one of REMINGTON®'s female shavers.

REPLACING THE FOILS & CUTTERS

To ensure the continued highest quality performance from your shaver, we recommend that foils and cutters are replaced regularly.

Signs that your foils and cutters need replacing:

- ▶ **Irritation:** As foils get worn, you may experience skin irritation.
- ▶ **Pulling:** As the cutters wear, your shave may not feel as close and you may feel your cutter pulling your hair.
- ▶ **Wear through:** You may notice that the cutters have worn through the foils.



CARE FOR YOUR TRIMMER

Care for your product to ensure a long lasting performance. We recommend you clean your trimmer after each use. The easiest and the most hygienic way to clean the shaver is by rinsing the product head after use under warm water. Always keep trimmer in the off position when not in use.

AFTER EACH USE

To clean the attachment precision and fine trimmers

- ▶ Brush the accumulated hair from the cutting assembly.

To clean the miniscreen foil

- ▶ Hold the trimmer in one hand, with the other press the foil release buttons and gently pull the foil assembly off the trimmer.
- ▶ Blow any loose debris from the foil.
- ▶ Brush the accumulated hair from the cutter assembly.
- ▶ To replace the foil assembly, hold either side of the foil and push down until you hear a click and it is firmly attached. Do not press down on the foil.



◆ CAUTION:

- ▶ Only use the light-grade oil supplied or sewing machine oil on the blades.
- ▶ Do not use harsh or corrosive cleaners on the units or their cutters.
- ▶ Do not apply pressure or hard objects to cutters.
- ▶ Do not disassemble cutter assembly.
- ▶ Do not submerge completely in water as damage will occur.
- ▶ Always store this appliance and cord in a moisture-free area.



IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- ▶ An appliance should never be left unattended when plugged in to a power outlet.
- ▶ Keep the power plug and cord away from heated surfaces.
- ▶ Make sure the power plug and cord does not get wet.
- ▶ Do not plug or unplug the trimmer with wet hands.
- ▶ Do not use the product with a damaged cord. A replacement can be obtained via the Remington® Service Center.
- ▶ Store the product at a temperature between 15°C and 35°C.
- ▶ Always unplug from the mains when cleaning or when being used under running water.
- ▶ Only use the parts supplied with the appliance.
- ▶ Do not wrap the cord of the charging adaptor around the appliance.
- ▶ This product is for cordless use only. Do not use your trimmer while it is plugged into the mains
- ▶ Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.



PROTECT THE ENVIRONMENT

This appliance contains a rechargeable Nickel Metal-Hydride (NiMH) battery. To protect the environment, do not dispose of the appliance or the battery in the household waste as restrictions exist in most countries. Adhere to any national or local regulations for collection and disposal that apply to your specific location.

- ◆ CAUTION: Do not put in fire or mutilate your battery packs as they may burst or release toxic materials.



For further information on recycling see www.REMINGTON®-europe.com

ENGLISH



BATTERY REMOVAL

◆ CAUTION:

The battery must be removed from the appliance before it is scrapped.
The appliance must be disconnected from the supply mains when removing the battery.

To remove the rechargeable battery :

- ▶ Unplug the trimmer.
- ▶ Run the trimmer until the motor stops.
- ▶ Open the head attachment by turning it anticlockwise and pulling out the head attachment.
- ▶ Using a flat-head screwdriver, gently pry apart the outside housing.
- ▶ Pry the latch of inside housing and pull the battery out.
- ▶ The battery is to be disposed of safely.

2

SERVICE & WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for a 2 year period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the REMINGTON® Service Center in your region.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include shaving heads / foils and cutters which are consumable parts. Also not covered is damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.