

REMINGTON®

Bikini Trimmer



WPG4010C




Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery

Visit www.remington.co.uk/product/register
You must register within 28 days
of purchase.

ENGLISH

Thank you for buying your new Remington® product.
Please read these instructions carefully and keep them safe.
Remove all packaging before use.

⚠ IMPORTANT SAFEGUARDS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/ instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Do not use attachments other than those we supply.
- 3 Do not use the appliance if it is damaged or malfunctions.
- 4 Store the product at a temperature between 15°C and 35°C.
- 5 This appliance is battery operated only.
- 6 This product uses alkaline batteries. At the end of their life the batteries must be removed from the appliance and be recycled or disposed of properly in accordance with your state and local requirements.
- 7 Do not put in fire or mutilate your batteries when disposing as they may burst and release toxic materials.
- 8 Do not short circuit as it may cause burns.
- 9 Turn off when cleaning.
- 10 Suitable for use in shower. 
- 11 This appliance is not intended for commercial or salon use.

ENGLISH



👁 KEY FEATURES

- 1 Trimmer head
- 2 Adjustable comb
- 3 On/off switch
- 4 Battery compartment

👁 GETTING STARTED

- Be patient when first using your trimmer. As with any new product, it may take a little while to familiarise yourself with the product.

ENGLISH

✱ INSERTING BATTERIES


- Your appliance requires 1 'AAA' alkaline battery (first one included). We recommend that you use VARTA® batteries.
- Ensure the product is switched off.
- To open the battery compartment, turn the base of the unit approx. 1cm anti-clockwise and pull off. Insert the battery into the unit, positive end first.
- Replace the base and turn it approx. 1cm clockwise to lock into place.
- ✱ NOTE: Your trimmer will not work if the batteries are inserted incorrectly.
- ✱ NOTE: Remove the batteries if the unit is not in use for long periods.

❗ INSTRUCTIONS FOR USE

- Turning the Trimmer On:
- Push the on/off button to turn on.
- Push the on/off button to turn off.
- The bikini trimmer is for wet or dry use and is suitable for use in a bath or shower.

✱ ADJUSTABLE COMB ATTACHMENT

- The precision trimmer has an adjustable and removable comb. The comb has 3 length settings - 2mm, 4mm, 6mm.
- To attach the comb, simply slide it onto the trimmer as shown in fig. 1.
- To adjust the comb length, grip the sides of the comb and pull up or push down fig. 1 and 2.
- To remove the comb, grip the sides of the comb and pull up fig. 1.
- ✱ Tip: if you are trimming long hairs or you are trimming for the first time, start with the maximum trimming length and work your way to shorter lengths until the desired length is achieved.

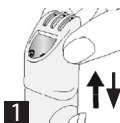

ENGLISH

✦ TRIMMING TIPS

- Place the flat top of the trimmer comb against the skin.
- Slide the trimmer slowly through the hair. As hair grows in different directions, you may wish to change the direction of trimming where necessary.
- If hair builds up in the trimmer during use, turn the trimmer off, take off the comb and either brush off the hair (dry use) or run the trimmer head under water (wet use).
- For close to skin trimming (approx. 0.8mm) remove the adjustable comb attachment and repeat the above steps.

✦ PRECISE SHAPING AND STENCILS

- If you wish to create a specific shape or style, remove the adjustable comb attachment and use the trimmer head.
- Hold the trimmer head against the skin and use the trimmer head.
- Hold the trimmer head against the skin and trim slowly against the direction of hair growth.
- Shape the area as desired.
- ✦ Tip: Hold the skin taught with your free hand whilst trimming.

✦ This bikini trimmer also includes three stencils to personalise your style.

- To use the stencils:
- Trim all the hair to an even length using the adjustable comb attachment.
- Choose the stencil you wish to use.
- Hold the stencil in the area you would like the shape to be, use the trimmer head to trim around the shape following the shape of the stencil as you go.
- Remove the stencil and use the trimmer head to trim away any excess hair around the shape and bikini area just leaving behind your desired style.

👁 AFTER EACH USE

- To ensure long lasting performance of your bikini trimmer, clean the head assembly regularly.
- The easiest and the most hygienic way to clean the appliance is by rinsing the appliance head after use with warm water.
- Keep the switch in the "off" position when not in use.
- Leave the comb attachment off and let the trimmer dry completely.

☀ NOTE:

- Do not rinse with water hotter than 70°C.
- Do not submerge the appliance.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➡ SERVICE CENTRE

United Kingdom

Tel 0800 212 438 (free call mainland UK)

+44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. WPG4010C

15/UK/ WPG4010C T22-0003723 Version 07 /15

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2015 SBI