

REMINGTON®

CORDLESS BODY AND BIKINI KIT



WPG4030



£10,000 prize draw
PLUS Free Rewards Gallery
Register online now to
collect your reward
See back for
details



Thank you for buying your new Remington® product.

Before use, please read these instructions carefully and keep them safe. Remove all packaging before use.



CAUTION

- Use this appliance only for its intended use as described in this manual.
- Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped into water.



KEY FEATURES

- 1 Precision Trimmer Attachment with Comfort Tips
- 2 Adjustable Comb Attachment
- 3 Arc Detail Trimmer Attachment
- 4 MiniScreen Shaver Attachment
- 5 On/Off Switch
- 6 Hang Hook
- 7 Charging Indicator Light
- 8 Cleaning Brush (not shown)
- 9 Storage Pouch (not shown)



GETTING STARTED

Be patient when first using your trimmer, as with any new product, it may take a little while to familiarise yourself with the product. Take the time to acquaint yourself with your trimmer, as we are confident you will receive years of enjoyable use and complete satisfaction.



INSTRUCTIONS FOR CHARGING

Always ensure that your hands, trimmer and mains adaptor are dry before charging.

Before using your REMINGTON® trimmer for the first time charge for 24 hours. For subsequent uses, charge for 14-16 hours before use. One full charge allows 30 minutes of cordless usage time.

- Ensure the product is switched off and attach the mains adaptor to the trimmer.
- Connect the mains adaptor to the mains. The charging indicator will illuminate.
- Charge for the time indicated above.
- Use the product until the battery is low. This is indicated by the trimmer running distinctly slower.

NOTE: This product is for cordless use only. Do not use your trimmer whilst it is plugged into the mains.

Your trimmer cannot be overcharged. However, if the product is not going to be used for an extended time period (2-3 months), unplug it from the mains and store. Fully recharge your trimmer when you would like to use it again.

To preserve the life of your batteries, let them run out every 6 months then recharge for 14-16 hours.

CHARGING CAUTIONS

- Do not attach the mains adaptor to the mains with wet hands.
- Always charge the trimmer in a cool, dry place.
- Do not charge the trimmer in close proximity to water.
- The trimmer can be attached to an electrical outlet voltage of 220V – 240V

YOUR TRIMMER ATTACHMENTS

Your trimmer has 4 different attachments to meet all your trimming needs: an arc detail trimmer, a precision trimmer and a mini screen shaver. Accompanying these attachments is a comb to enable you to adjust the hair length. Please see the 'How to use' section for guidance on which attachments to use for each area.

EXCHANGING THE ATTACHMENTS

Just place the attachment on the trimmer and turn it clockwise until the lock symbols align/ you hear an audible 'click'.

ATTACHING THE ADJUSTABLE COMB TO THE PRECISION TRIMMER

- The precision trimmer has 1 adjustable comb attachment which can be adjusted to give 3 different trim lengths.
- To fasten the comb attachment, slide it onto the precision trimmer from front to back until it locks into place.
- To adjust the comb length, grip the sides of the comb, slide the comb off, adjust to align into desired slots and slide back into locked position.
- To remove, grip the sides of the comb and slide off.

Combs attachment settings :

Position	Length
No comb	0.8mm
1	2mm
2	4mm
3	6mm

 If you are trimming for the first time, start with the maximum trimming length setting.

HOW TO USE



This trimmer is a wet trimmer, the hand-held part of which may be used in a bath or shower .

Bikini

To trim the length

- Attach the precision trimmer.
- Place the comb attachment onto the trimmer, select the desired length.
- Place the flat top of the comb against the skin and slowly slide the trimmer through the hair in the direction of hair growth.

 **CAUTION:** Ensure that the trimmer blade is kept away from any sensitive areas.

Edging and shaping

- Attach the arc detail trimmer .
- Hold the trimmer at a right angle to your skin and press down gently.
- Edge and shape the area as desired.
- Attach the mini screen shaver and move over any trimmed areas for a smoother result.

Underarms

- Attach the mini screen shaver.
- Gently move the shaver against the hair growth.

NOTE: If hair length is more than 1mm use the precision trimmer first.

Tips for best results

- After trimming, lightly go over the trimmed areas with the mini screen shaver to get a smooth clean finish. Hold the groomer so the mini screen shaver is gently touching the skin. Avoid holding the groomer at an angle.
- Since all hairs do not grow in the same direction, you may want to try trimming in different directions (i.e. upwards, downwards or across) for better results.
- Use your free hand to stretch the skin for easier trimming.

Note: The miniscreen shaver is designed to shave small detailed areas. It was not designed to shave large surfaces. For a close comfortable shave of these areas use one of REMINGTON®'s female shavers.

REPLACING THE FOILS & CUTTERS

To ensure the continued highest quality performance from your shaver, we recommend that foils and cutters are replaced regularly.

Signs that your foils and cutters need replacing:

Irritation: As foils get worn, you may experience skin irritation.

Pulling: As the cutters wear, your shave may not feel as close and you may feel your cutter pulling your hair.

Wear through: You may notice that the cutters have worn through the foils.

Replacement parts and accessories available to buy at <http://www.remington.co.uk/parts-accessories>

CARE FOR YOUR TRIMMER

Care for your product to ensure a long lasting performance. We recommend you clean your trimmer after each use. The easiest and the most hygienic way to clean the shaver is by rinsing the product head after use under warm water. Always keep trimmer in the off position when not in use.

AFTER EACH USE

To clean the precision and arc detail trimmers attachments:

- Brush the accumulated hair from the cutting assembly.

To clean the mini screen foil

- Hold the trimmer in one hand, with the other press the foil release buttons and gently pull the foil assembly off the trimmer.
- Blow any loose debris from the foil.
- Brush the accumulated hair from the cutter assembly.
- To replace the foil assembly, hold either side of the foil and push down until you hear a click and it is firmly attached. Do not press down on the foil.

Note: Rinsing the groomer under water or using when in the shower may require lubricating the cutter blades periodically.

CAUTION

- Only use light-grade oil or sewing machine oil on the blades.
- Do not use harsh or corrosive cleaners on the units or their cutters.
- Do not apply pressure or hard objects to cutters.
- Do not disassemble cutter assembly.
- Do not submerge completely in water as damage will occur.

IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- Do not leave the appliance unattended while plugged in.
- Keep the power plug and cord away from heated surfaces.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.

- Store the product at a temperature between 15°C and 35°C.
 - Only use the parts supplied with the appliance.
 - Do not wrap the cord of the charging adaptor around the appliance.
 - This product is for cordless use only. Do not use your trimmer while it is plugged into the mains.
 - Always unplug from the mains when cleaning or when being used under running water.
 - The appliance, including its cord, must not be used, played with, cleaned or maintained by persons under eight years old and should at all times be kept out of their reach.
- Use, cleaning or maintenance of the appliance by children over eight or by anyone with a lack of knowledge, experience or with reduced physical, sensory or mental capabilities should only be undertaken after receiving appropriate instruction and under the adequate supervision of a responsible adult to ensure that they do so safely and that the hazards involved are understood and avoided.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.

To remove the rechargeable battery:

- Unplug the trimmer.
- Run the trimmer until the motor stops.
- Open the handle by placing a flat head screwdriver between the handle and hang hook.
- Gently pry apart the hang hook from the handle.
- Gently pull out the inner bracket of the battery.
- Cut the connect plates of the battery and take out the battery.
- The battery is to be disposed of safely.

➡ SERVICE AND GUARANTEE

This product has been checked and is free of defects.

We guarantee this product against any defects that are due to faulty material or workmanship for the guarantee period from the original date of consumer purchase.

If the product should become defective within the guarantee period, we will repair any such defect or elect to replace the product or any part of it without charge, provided there is proof of purchase.

This does not mean an extension of the guarantee period.

In the case of a guarantee simply call the Service Centre in your region.

This guarantee is offered over and above your normal statutory rights.

The guarantee shall apply in all countries in which our product was sold via an authorised dealer.


This guarantee does not include damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required.

This guarantee shall not apply if the product has been dismantled or repaired by a person not authorised by us.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it.

It's on the rating plate which can be found on the appliance.

UNITED KINGDOM

 +44 0800 212 438 (free call)

Customer Service
Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester M35 0HS

12/UK/WPG4030 Version 07/12 Part No T22-0000397
Remington® is a Registered Trade Mark of Spectrum Brands, Inc.,
or one of its subsidiaries
Spectrum Brands (UK) Ltd
Fir Street,
Failsworth,
Manchester
M35 0HS
www.remington.co.uk

© 2012 SBI

REGISTRATION AND PRIZE DRAW

Collect your free reward, and a chance to win £10,000.
Visit www.productregister.co.uk/remington