

REMINGTON®

EST. NEW YORK 1937

VOLUME PLUS AIR STYLER



**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE

To register your product go to
www.remington-products.com.au
www.remington.co.nz

2 YEAR WARRANTY

AS500AU

IMPORTANT SAFEGUARDS

Warning: When the air styler is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the styler is switched off.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

KEEP AWAY FROM WATER

DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

- Always unplug the appliance immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, AND FIRE, OR INJURY TO PERSONS.

- An appliance should never be left unattended when plugged in to a power outlet.
- When an appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep the appliance and the power cord away from the

edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.


- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of this hot air brush is damaged it must only be replaced by a qualified electrical tradesperson.
- Keep the cord away from heated surfaces.
- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- Do not direct hot air towards the eyes or other heat sensitive areas.
- Attachments, where provided, may be hot during and after use. Allow them to cool before handling.
- When using the appliance, keep your hair away from the air inlet grille. Do not let your hair get drawn into the appliance.

SAVE THESE INSTRUCTIONS

AS500AU VOLUME PLUS AIR STYLER

USE & CARE INSTUCTION MANUAL

Thank you for purchasing your Remington® Volume Plus Air Styler, the perfect styler to dry your hair while creating volume, waves and styles.

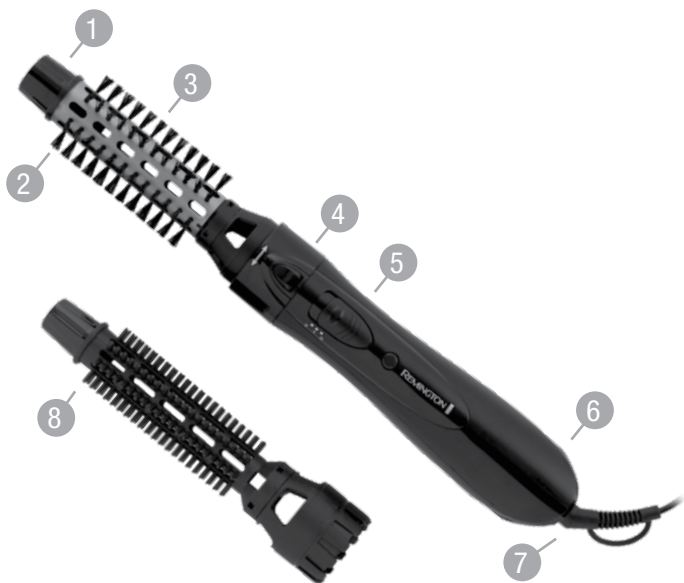

KEY PARTS

- | | |
|----------------------------|----------------------|
| 1. Cool tip | 6. Air inlet |
| 2. 25mm bristle brush | 7. Salon swivel cord |
| 3. Air outlet | 8. 19mm round brush |
| 4. Curl release button | |
| 5. Heat and speed settings | |
| 0- Off | |
| 1- Low heat/speed | |
| 2- High heat/speed | |

BASIC HAIR CARE INSTRUCTIONS

The Volume Plus Air Styler is designed to quickly and easily style your hair with added volume and professional results.

For optimal results, please ensure hair is free of hair spray, mousse or gel. Shampoo and condition your hair prior to styling, then towel dry and brush or comb to prevent tangling.

Note: The Volume Plus Air Styler is not suitable for use on synthetic wigs or hair extensions.

HOW TO CHANGE THE BRUSHES

Your Volume Plus Air Styler comes with a 19mm round brush and a 25mm soft bristle brush. To interchange the brushes, take either the round brush or the soft bristle brush and insert into the top of the handle unit until it clicks in to place. To remove, hold the brush at the neck near the handle and firmly pull. Ensure brushes are cool before removing. Both brushes can be removed from the handle for compact storage.

HOW TO USE YOUR REMINGTON® VOLUME PLUS AIR STYLER

Ensure your hair is damp, but not soaking wet.

Plug the styling brush into any household (230/240V AC) outlet, and select either setting 1 (low heat/speed) or setting 2 (high heat/speed)

When drying/styling ensure that you do not cover the air inlet with your hand.

The styling brush is sensational for quick touch-up styling, but your hair should be clean and free of hair spray, mousse or gel.

The swivel cord ensures ease of use preventing the cord from getting tangled when twirling the unit around your hair.

The curl release button ensures that you do not tangle your hair when styling it. Wrap your hair around the brush, and to remove your hair, simply press the curl release button so that the brush rotates freely. This enables easy removal of your hair from the brush without undoing the style that you have created.

HOW TO STYLE YOUR HAIR

To curl your hair use the 19mm round brush or the soft round bristle brush. Separate a section of hair approximately 5-6 cm wide. Spread your hair evenly over the surface of the brush. The tightness of the curl is determined by how tightly you wrap your hair around the styling brush, and how long you hold the brush in place. The 19mm round brush will give you the tightest curls and the soft bristle brush will help to give a boost of volume to your hair.

Use setting 2 for thicker hair and setting 1 for finer hair. To remove the hair from the brush, simply press the curl release button and unroll the hair from the styling brush.

To make a flick out, start at the end of the section of your hair. Hold the styling brush over your hair for a flick out or under your hair for a bob.

To shape or wave your hair, place the brush just below the area you want shaped and push up. Remove the styling brush quickly and hold the wave in place with your hand until the hair has cooled.

To give your hair extra volume, brush hair against the natural direction of growth using the soft bristle brush. Use slow, gentle strokes, until the desired volume is achieved.

USER INSTRUCTIONS

This appliance is equipped with a thermostat that will cycle 'OFF' if the temperature exceeds the comfort level due to a partially blocked air inlet or air outlet opening. In the event that the appliance stops working during use, turn off the switches and allow the appliance to cool down so that the thermostat can automatically reset. Once cooled down to room temperature (approximately 10 to 15 minutes), switch on again and use. During use, do not block the air inlet grille.

MAINTENANCE AND STORAGE

Your appliance is designed for household use and is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the appliance from the power source and wipe the exterior with a damp cloth. Do not immerse in water.

When not in use, unplug the unit. Allow the appliance to cool and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at plug connections.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

As with all electrical appliances, the power cord must be regularly checked for wear and tear. Immediately cease using this product if the power cord shows any signs of damage.

This product conforms to radio frequency interference requirements.
Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON®
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

①Australia 1800 623 118 (toll free)

②New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

©2019 Spectrum Brands Inc.

Rev. 01/19

Part No. T22-0004520-B

Type: AS500

