

## **Edging and Shaping or Close Trim**

- Remove the trimmer comb attachment.
- Hold the trimmer at a right angle to your skin and press down gently.

## **Tips for Best Results**

- For an even closer and smoother close to skin trim use the main trimmer blade without the attachment comb and then use the detail trimmer blade to trim hairs back further. This will give you a clean shaven look without the irritation shaving can cause.
- Avoid using lotions before using your trimmer.
- If you are trimming for the first time start with the maximum comb length setting until you are familiar with your body trimmer and how it works.

**Note:** This trimmer has been designed so that it can be used in the shower for greater ease and convenience. Do not store the trimmer in an area that constantly gets wet and make sure you dry the trimmer after use in the shower.

## **CLEANING AND MAINTENANCE**

- • Ensure the appliance is switched off and unplugged from the mains.
- • The easiest and most hygienic way to clean the appliance is by rinsing the appliance head under the tap after use while the blades are running.

Rinsing under water requires re-lubricating the cutting blades once a month. Use only light grade oils, such as the one supplied (sewing machine oil can also be used). Spread 1-2 drops of oil over the cutters with your fingertip. Wipe away all excess oil.

Use only light-grade oils as these will not evaporate or slow down the speed of the cutting blades.

Do not use hair oil, grease, or any oil mixed with kerosene or solvent as these too will evaporate.

## STORAGE

When not in use, unplug the appliance and store it out of reach of children in a safe dry place. Never wrap the cord around the appliance as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the plug connections.

## BATTERY REMOVAL

NOTE: The battery is not intended to be removed or replaced under normal use. The only time the battery should be removed or the unit opened or disassembled, is at the end of the product's useful life before it is discarded.

The BHT4200AU contains a lithium nickel manganese cobalt oxide battery. Once the shaver has reached the end of its life, to ensure proper disposal of the product, please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.

For more information about recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

**CAUTION! Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns.**

We suggest you use local waste management centres to recycle this product at end of life.



**Suitable for use in bath or shower.**

This appliance conforms to radio frequency interference requirements.  
Any product purchased and used commercially carries a limited 90 Day Warranty.

# Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

## WARRANTY AGAINST DEFECTS

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We or us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

### Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

#### **Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

#### **Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)

**REMINGTON®**  
EST. NEW YORK 1937

#### **REMINGTON SERVICE HOTLINE**

①Australia 1800 623 118 (toll free)

②New Zealand 0800 736 776 (toll free)

® Registered Trade Mark of Spectrum Brands Inc., or one of its subsidiaries

Made in China to the Specifications of Spectrum Brands, Inc.

© 2021 Spectrum Brands Inc.

Rev. 06/21

Part No. T22-7001433

Type: RG004A



PLEASE  
RECYCLE

# REMINGTON®

EST. NEW YORK 1937

## TURBO PRO

BODY GROOMER

**USE & CARE  
MANUAL**

PLEASE READ  
PRIOR TO USE



To register your product go to  
[www.remington-products.com.au](http://www.remington-products.com.au)  
[www.remington.co.nz](http://www.remington.co.nz)

**2 YEAR WARRANTY**

**BHT4200AU**

## **IMPORTANT SAFETY INSTRUCTIONS**

**When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:**

**READ ALL INSTRUCTIONS BEFORE USING**

**KEEP THE POWER ADAPTOR AWAY FROM WATER**

**For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.**

**WARNING - TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS**

**DANGER - As with most electrical appliances, electrical parts are electrically live even when the switch is off.**

- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of the appliance is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. It cannot be repaired. Keep the cord away from heated surfaces.
- Charge, use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Unplug this appliance before cleaning it.
- Do not use an extension cord or a voltage converter with this appliance.
- Although this appliance is designed to be used around and with water, do not fully submerge the appliance or any of its attachments in water or any other liquid.
- Switch off this appliance before changing attachments.
- Do not wrap the cord of the power adaptor around the unit.
- Do not use this appliance with damaged or broken attachments, as injury may occur.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep the appliance away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- This appliance is not a toy. Children should be supervised to ensure they do not play with this appliance.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this appliance.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not plug or unplug the appliance with wet hands.
- This appliance is not intended for commercial or salon use.
- For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance PA-0505A.



**SAVE THESE INSTRUCTIONS**



## BHT4200AU TURBO PRO BODY GROOMER USE AND CARE MANUAL

Thank you for purchasing your new Remington® Turbo Pro Body Groomer. This trimmer features innovative dual sided trim shave technology, which trims to 0.2mm for a shaved look.



### KEY PARTS

- |                             |                            |
|-----------------------------|----------------------------|
| 1. On/Off button            | 6. Travel lock (not shown) |
| 2. Main blade               | <b>Also includes:</b>      |
| 3. Detail blade             | • - Premium storage bag    |
| 4. Adjustable comb (1-15mm) | • - Lubricating oil        |
| 5. Fuel gauge               | • - Cleaning brush         |

## BHT4200AU SPECIFICATIONS

Power System	Cordless (rechargeable)
Initial Charge Time	24 Hours
Full Charge Time	4 Hours
Runtime	90 Minutes
Quick Charge	Yes
Indicators	Charging & Low Battery
Voltage Type	Worldwide

## CHARGING

**Please ensure to read over all instructions before your first use.**

- Before using your trimmer for the first time, charge it for 24 hours. Note during this charge ignore the electronic indicators as they are in “start-up cycle”.
- Plug the adaptor into your trimmer and then plug the charging adaptor unit into a 100-240 volt domestic power outlet. The fuel gauge will flash indicating that the groomer is charging.
- The batteries cannot be overcharged, but it is recommended that charging be discontinued and the trimmer stored away if it will not be used for an extended period of time (2-3 months).
- The trimmer will be fully charged in 4 hours.
- Use the trimmer only with the charging adaptor supplied.

**Note:** This product is for cordless use only, it cannot be used while it is connected to the mains power outlet or while it is charging. The product will only charge when the travel lock, found on the back of the product is disabled.

CHARGE LEVEL INDICATORS	
Charge Level	Indicator
Charging	LED flashes
Low battery	LEDs flash red
Fully charged	LEDs show solid

When in use;

- 3 Blue LEDs indicate 70% - 100% charge remaining.
- 2 Blue LEDs indicate 40% - 70% charge remaining.
- 1 Blue LED indicates 10% - 40% charge remaining.
- 1 Red LED indicates 5% - 10% charge remaining. 1 Red flashing LED indicates less than 5% charge remaining as noted in the above section on low battery charge level indicator.
- Run time from fully charged is up to 90 minutes when not operated in turbo mode.
- Charge time from empty is 4 hours.
- The trimmer has a 5 minute quick charge feature that will provide enough charge for 1 grooming session.

## TRAVEL LOCK

- The groomer features a travel lock which when in use, enables the battery to hold it's charge.
- To enable the travel lock (between uses) slide the travel lock switch down.

**Note:** The product will only charge when the travel lock, found on the back of the product is disabled (slide the lock upwards).

## ATTACHING THE COMB

**Note:** Before attaching or removing the comb please ensure the unit is Off.

- Attach the adjustable comb by placing the comb above the groomer so that the back of the adjustable comb sits above the detail blade. Slide the comb down onto the groomer body so that the comb rails slot into the recesses found either side of the groomer body until it clicks into place.
- To remove the comb make sure the comb is set at the minimum length setting. Grasp the comb and pull firmly upwards and away from groomer, whilst pushing upwards with your other thumb.

Note: Using the detail blade side of trimmer with no combs attached will trim hair down to 0.2mm. Using the main trimmer blade with no comb attached will trim hair to 1mm.

## **INSTRUCTIONS FOR USE**

### **Delicates Trimming**

- Attach the adjustable comb if desired and select the trimming length.
- Select the comb length by pressing the comb length adjustment button and pushing upwards to increase the length setting or downwards to decrease the length on the adjustable comb. The length setting can be seen on the length position indicator on the back of the comb.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair, against the direction of hair growth.
- For hair around your delicates, lift your delicate parts to get a clear view of the area you are trimming. Trim from any direction which feels comfortable, however it is recommended to go against the direction of the hair growth.
- Use slow and even strokes and keep the skin nice and taut to ensure hairs are well trimmed.
- For close and more precise shaping, remove the fixed comb and trim the hairs.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off and remove the fixed trimmer comb. Brush the trimmer/rinse comb.

**Note:** Take your time when trimming delicate areas by using slow and even strokes.

### **Body Trimming**

- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair, against the direction of hair growth.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off and remove the fixed trimmer comb. Brush the trimmer/rinse comb.
- For a closer more precise shaping, remove the adjustable trimmer comb and trim the hairs along the outer edges.