

**REMINGTON®**  
EST. NEW YORK 1937

# BEAUTY TRIM BIKINI TRIMMER



**USE & CARE  
MANUAL**

PLEASE READ  
PRIOR TO USE

To register your product go to  
[www.remington-products.com.au](http://www.remington-products.com.au)  
[www.remington.co.nz](http://www.remington.co.nz)

**1 YEAR WARRANTY**

**BKT1004FAU/PAU**

# **IMPORTANT SAFETY INSTRUCTIONS**

## **READ ALL INSTRUCTIONS BEFORE USING**

### **WARNING**

- Do not submerge or use under running water, while bathing or in the shower. This trimmer is not watertight.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Keep away from flammable materials.
- To prevent accidents keep the appliance away from hair on your head, your eyelashes as well as clothes, brushes and wire.
- Never drop or insert any object into any opening.
- Do not use this trimmer with a damaged or broken cutting unit.
- Always store your trimmer in a moisture-free area.
- For household use only.

### **CAUTION**

- Do not use this appliance with a damaged or broken cutting unit, as injury may occur.
- For hygiene reasons do not let another person use your trimmer. It is recommended for use by one person only.

## **SAVE THESE INSTRUCTIONS**

# **BKT1004FAU/PAU BEAUTY TRIM BIKINI TRIMMER**

## **USE & CARE INSTRUCTION MANUAL**

Thank you for purchasing your new Remington® Beauty Trim Bikini Trimmer. Inside this manual you will find tips on using and caring for your trimmer.



### **KEY PARTS**

- |   |                                    |
|---|------------------------------------|
| 1. Removable, adjustable, trimmer comb attachment | 4. 5 Position “thumb-wheel”        |
| 2. Cutter assembly (underneath comb)              | 5. On/Off switch                   |
| 3. Length position indicator                      | 6. Battery compartment (not shown) |

## ABOUT YOUR TRIMMER

### BKT1004FAU/PAU SPECIFICATIONS

Power System	Cordless (battery operated)
Voltage Type	2x AAA batteries (not included)

## BEFORE USING YOUR TRIMMER

Note: This product is not suitable for use in the bath or shower. The cutter assembly can only be rinsed with water once it is removed from the main trimmer.

- The hair that you intend to trim should be dry. Avoid using lotions before using your trimmer.
- Be certain the trimmer comb is at the desired setting. When first using, you may want to begin on a higher setting - #5 (longest hair setting) – to prevent trimming off too much hair initially.
- For first time use, insert 2 'AAA' alkaline batteries.
- Clean the cutter blades regularly – refer to Cleaning and Maintaining section.
- Never use the trimmer with a damaged or broken cutter unit.

## INSERTING THE BATTERIES

Your Trimmer requires 2 'AAA' alkaline batteries.

1. Make sure your trimmer is switched off.
2. Hold the trimmer, with the battery compartment towards you. Open the battery compartment door by pressing its tab in towards the door. Lift the door to gain access to the battery compartment.
3. Insert the batteries so that the (+) and (-) marks on the batteries face the same marks in the battery compartment.
4. Replace the battery cover by inserting the end opposite to the tab and then press on the tab until it clicks into place.

Note: The Trimmer will not operate if the batteries are inserted incorrectly.

Note: The battery cover will fit only one way. If the cover does not go on correctly, turn it around.

**HAIR LENGTH SELECTOR AND REMOVABLE TRIMMER COMB ATTACHMENT**

The Trimmer Comb must be attached to the Trimmer in order to use the hair length selector.

The hair length selector and adjustable trimmer comb attachment ensures precise trimming and has five adjustable positions:

SETTINGS	HAIR LENGTH
1	3mm
2	5mm
3	7mm
4	9mm
5	12mm

Roll the ‘Thumb Wheel’ anti-clockwise to adjust for a longer length. Roll it clockwise to adjust for a shorter length. The wheel will click into one of five positions.

Begin trimming at one of the longest settings - #4 or #5 – to avoid accidentally trimming hair too short. As you become familiar with the settings, you can then select your desired length setting.

**TRIMMER COMB ATTACHMENT**

Remove the adjustable trimmer comb attachment if you are defining hairline edges for shaping and trimming, or if you want to clean the cutter assembly.

To remove:

1. Be sure that the trimmer switch is in the off position.
2. While holding the trimmer in one hand with your thumb on the ‘Thumb Wheel’ to prevent it from turning, gently pull the trimmer comb attachment away from the trimmer. The comb can be removed and replaced on any setting.

To replace:

1. Be sure that the trimmer switch is in the off position.
2. While holding the trimmer in one hand with your thumb on the ‘Thumb Wheel’ to prevent it from turning, slide the comb over the top of the trimmer until it ‘clicks’ into position.

Note: The trimmer comb attachment can only be placed on the trimmer one way; if it does not fit properly, remove and reverse it.

## HOW TO USE

1. Hair should be dry.
2. Ensure that the batteries are installed correctly.
3. Set the 'Thumb Wheel' to the desired length setting – suggest start at #4 or #5.
4. Turn trimmer on.
5. Place the flat top end of the trimmer comb against the skin.
6. Slowly slide the trimmer through the hair to be trimmed. The hairs will feed right into the comb tines.
7. Repeat this trimming motion as necessary, adjusting to approach the desired area from different directions.
8. If, during the trimming process, hair builds up in the trimmer comb, shut the unit off, pull off the adjustable trimmer comb and brush it off.
9. For an even closer look and precise shaping, remove the adjustable trimmer comb and trim the hairs along the outer edge of the intended area.
10. When finished, turn the trimmer off and clean.

## TROUBLESHOOTING

If the trimmer does not work when turned on:

- Check that the batteries have been installed correctly. Trimmer will not operate if batteries are incorrectly installed.
- If the battery power has been depleted, replace with 2 'AAA' Alkaline batteries.

If trimmer cutters do not move:

- The cutting unit may be dirty and clogged. Clean the unit as directed in the Cleaning and Maintaining section.

## **CLEANING, CARE & MAINTENANCE**

Your trimmer is fitted with high quality hardened steel cutting blades that are permanently lubricated. Cleaning should be done only with a soft brush, such as the brush supplied with the unit. Clean your trimmer regularly to ensure that the unit's operating life is not shortened.

- Do not apply pressure or hard objects to the cutters.
- Do not use liquid cleaners on the cutters or harsh or corrosive chemicals on the unit's body.

### **WEEKLY**

1. Trimmer should always be shut off.
2. Remove trimmer comb attachment from trimmer. Shake or blow out any accumulated hairs.
3. Remove the blade cutter assembly, by pushing upward on the top of the cutter assembly. The blade cartridge will slide up.
4. Blow or use the brush provided to sweep any accumulated hair from the back of the cutter. You can now rinse the cutter assembly under the tap with cool or warm water (never use hot water).

Note: The cutter assembly can only be rinsed with water once it is removed from the main trimmer.

- Do not rinse the trimmer body – it is not watertight.
- Do not use any liquid cleaners or harsh chemicals. Do not disassemble the cutter set.

The trimmer blades are permanently lubricated. If you do rinse the attachment with cool or warm water (never use hot water) then it will need to be re-lubricated with light-grade oil or sewing machine oil (1-2 drops over the cutters).



**This product is not suitable for use in the bath or shower.**

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.



# Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

## WARRANTY AGAINST DEFECTS

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We or us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of one (1) year from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

### Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

#### **Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

#### **Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)

**REMINGTON®**  
EST. NEW YORK 1937

#### **REMINGTON SERVICE HOTLINE**

☎Australia 1800 623 118 (toll free)

☎New Zealand 0800 736 776 (toll free)

#### **AUTHORISED REPAIR CENTRES**

Visit [www.remington-products.com.au](http://www.remington-products.com.au) for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2019 Spectrum Brands Inc.

Rev. 03/19

Part No. T22-0005202-B

Type: BKT1000

