

# REMINGTON®

EST. NEW YORK 1937

## PROLUXE SALON STRAIGHTENING BRUSH



**PRO**heat Intelligent PROheat Technology delivers optimum heat for salon results that last all day\*



**USE & CARE  
MANUAL**

PLEASE READ  
PRIOR TO USE

To register your product go to  
[www.remington-products.com.au](http://www.remington-products.com.au)  
[www.remington.co.nz](http://www.remington.co.nz)

\*Style shown to last 24 hours in laboratory trials

**5 YEAR WARRANTY**

**CB7480AU**

## IMPORTANT SAFEGUARDS

**WARNING:** When the straightening brush is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the straightening brush is switched off.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING**

**KEEP AWAY FROM WATER**

**DANGER:** As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately.  
Do not reach into the water.

**WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION, and FIRE, OR INJURY TO PERSONS.**

- Your straightening brush should never be left unattended when plugged in to a power outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Keep the appliance and the power cord away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.

- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agents or similarly qualified persons in order to avoid a hazard.
- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- The bristles will be very hot during use. Do not let bare skin touch heated surfaces.
- Do not place the heated straightening brush on any soft surface such as a bed, carpet or a towel. Place only on a hard, flat, heat resistant surface.

For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrical contractor for advice.

## **SAVE THESE INSTRUCTIONS**

## **CB7480AU PROLUXE SALON STRAIGHTENING BRUSH**

### **USE & CARE INSTRUCTION MANUAL**

Thank you for purchasing your new Remington® PROLUXE Salon Straightening Brush. The PROLUXE Salon Straightening Brush features Intelligent PROheat Technology providing consistent heat for salon results that last all day\*



### **KEY PARTS**

- |   |  |
|---|--|
| 1. Ultimate glide ceramic heated plate        | 5. Temperature display                   |
| 2. Ultimate glide ceramic heated bristle tips | 6. Temperature button                    |
| 3. Non-heated outer bristles                  | 7. On/off button                         |
| 4. Anti-static ion release port               | 8. Salon swivel cord                     |
|   | 9. PROLUXE heat protective storage pouch |

\*Style shown to last 24 hours in laboratory trials

## **BASIC HAIR CARE INSTRUCTIONS**

For optimal results, shampoo and condition your hair prior to straightening, then dry your hair thoroughly and make sure that it is tangle free.

Note: The PROLUXE Salon Straightening Brush is not suitable for use on synthetic wigs or hair extensions.

## **WHAT IS ULTIMATE GLIDE CERAMIC?**

Ultimate Glide Ceramic features 15x more ceramic<sup>†</sup> on the plate and bristles for high and even heat. It's 5x smoother<sup>†</sup> for effortless glide and silky smooth results, and 5x longer lasting<sup>†</sup> ensuring durability.

## **WHAT IS ANTI-STATIC IONIC TECHNOLOGY?**

The PROLUXE Salon Straightening Brush releases anti-static ions to reduce frizz.

Note: The buzzing noise you can hear while the straightening brush is in use is normal, it is the sound of the anti-static ions being generated and released from the port. Do not worry if this noise fluctuates, this is normal.

## **AUTOMATIC SAFETY SHUT OFF**

If the straightening brush is not used for a period of 60 minutes (temperature is constant) it will automatically shut off.

## **AUTOMATIC WORLDWIDE VOLTAGE**

The PROLUXE Salon Straightening Brush features automatic voltage adjustment for international use. Plug the unit into any domestic power outlet and it will adjust automatically to the voltage being supplied.

Note: Some countries will require the use of a plug adaptor that is not included with your straightening brush.

<sup>†</sup>vs. standard Remington ceramic coating

## HOW TO USE YOUR REMINGTON® PROLUXE SALON STRAIGHTENING BRUSH

1. Carefully place the straightening brush on a flat, hard, heat resistant surface ensuring the bristles of the straightening brush are facing upwards.
2. Plug in to any household (120/240V AC) power outlet.  
Press and hold the on/off button to turn the straightening brush on. The temperature indicator dots will light up and flash while the straightening brush is heating up to the temperature selected. To select a higher temperature press the temperature button and scroll through the 3 heat settings until you have reached your desired temperature. To return back to the lowest temperature, press the temperature button repeatedly until all temperatures have been scrolled through, where you will return back to the lowest setting. The temperatures that can be selected are:
  - 150°C: one temperature indicator dot will illuminate
  - PRO+ (185°C): ideal temperature for 24 hours lasting salon results\*; two temperature indicator dots will illuminate
  - 230°C: three temperature indicator dots will illuminate
3. The temperature indicator dots will stop flashing when the desired temperature is reached.
4. After use, press and hold the on/off button for 2 seconds until all the indicator lights turn off, then unplug the appliance.

\*Style shown to last 24 hours in laboratory trials

## TO STRAIGHTEN YOUR HAIR

- Ensure your hair is completely dry.
- To make styling easier, part the hair either in the middle or to the side and use clips to section your hair; top, sides and back.
- You may need to comb through your hair before using the straightening brush to ensure that it is tangle free.
- Start at the nape of the neck and brush the underneath sections of hair first. When the underneath sections of hair are complete, move to the next layers, finishing with the hair around the part line.
- Take about a 5cm section of hair and pull taut and down and away from the scalp. Holding the straightening brush with the other hand, start at the roots and slowly glide the straightening brush through the hair, from root to tip. It is important to glide the straightening brush slowly through the hair to ensure it has maximum contact with the ceramic bristles.
- The anti-static ions will be released onto the hair with every glide.

Note: The buzzing noise you can hear while the straightening brush is in use is normal, it is the sound of the anti-static ions being generated and released from the port. Do not worry if this noise fluctuates, this is normal.

Expert tip: Brush from both the inner and outer sides of the hair for complete contact and super straight results.

- Repeat until the desired amount of straightening has been achieved.

## MAINTENANCE

This appliance is designed for household use and is virtually maintenance free. If cleaning becomes necessary, disconnect the unit from the power outlet, allow it to cool, and then wipe the exterior surface and the bristles with a soft damp cloth. Do not immerse the unit in any liquid. Do not use an abrasive cleaning fluid or material to clean the ceramic coated bristles as this will scratch the surface.

## STORAGE

When not in use, always unplug the straightening brush from the power outlet. Allow the straightening brush to cool and store out of the reach of children in a safe dry place. Never wrap the power cord around the straightening brush since this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the plug connections. If the cord becomes twisted in use, periodically straighten it.

## DISPOSAL/RECYCLING

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.



**WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**

**As with all electrical appliances, the power cord must be regularly checked for wear and tear. Immediately cease using this product if the power cord shows any signs of damage.**

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

We suggest you use local waste management centres to recycle this product at end of life.



# Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

## WARRANTY AGAINST DEFECTS

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We or us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of five (5) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

### Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

#### **Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

#### **Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)

**REMINGTON®**  
EST. NEW YORK 1937

#### **REMINGTON SERVICE HOTLINE**

☎Australia 1800 623 118 (toll free)

☎New Zealand 0800 736 776 (toll free)

#### **AUTHORISED REPAIR CENTRES**

Visit [www.remington-products.com.au](http://www.remington-products.com.au) for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

©2022 Spectrum Brands Inc.

Rev. 10/21

Part No. T22-7002611

Type: CB7480

