

# REMINGTON®

EST. NEW YORK 1937

## PEARL SHINE CONICAL WAND

**USE & CARE  
MANUAL**

PLEASE READ  
PRIOR TO USE



To register your product go to  
[www.remington-products.com.au](http://www.remington-products.com.au)  
[www.remington.co.nz](http://www.remington.co.nz)

**2 YEAR WARRANTY**

**CI5505AU**

## IMPORTANT SAFEGUARDS

**Warning: When the styler is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the styler is switched off.**

**When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:**

**READ ALL INSTRUCTIONS BEFORE USING**

**KEEP AWAY FROM WATER**

**DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.**

To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrical contractor for advice.

**WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, and FIRE, OR INJURY TO PERSONS.**

- Do not use on wet hair.
- Your styler should never be left unattended when plugged in to a power outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and the power cord away from the edge of table or countertops and out of reach of children and persons with

reduced physical, sensory or mental capabilities.

- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
- Burn hazard - Keep appliance out of reach from young children, particularly during use and cool down.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Do not operate this appliance with a damaged cord/plug or after the appliance has malfunctioned, or been dropped or damaged in any manner.
- There are no user serviceable parts. If power cord is damaged, it must be replaced by the manufacturer or similarly qualified person in order to avoid a hazard.
- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- The barrel will be very hot during use. Do not let bare skin touch heated surfaces.
- Do not place the heated styler on any soft surface such as a bed, carpet or a towel. Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
- Please check the voltage ratings on the product prior to use to ensure it matches the voltage of the local area.

**SAVE THESE INSTRUCTIONS**

## CI5505AU PEARL SHINE CONICAL WAND

### Use & Care Instruction Manual

Thank you for purchasing your new Remington® Pearl Shine Conical Wand with Real Pearl. The Pearl Shine Conical Wand features Advanced Ceramic Coated barrel for beachy, natural looking curls and deep waves.



### KEY PARTS

- |                                                     |                                                                 |
|-----------------------------------------------------|-----------------------------------------------------------------|
| 1. Cool tip                                         | 7. Power on/off button                                          |
| 2. Advanced ceramic coating infused with real pearl | 8. Digital temperature display with variable heat 130°C - 210°C |
| 3. 25mm – 38mm barrel                               | 9. Salon swivel cord                                            |
| 4. Protective stand                                 | 10. Heat protective glove                                       |
| 5. + Temperature increase button                    |                                                                 |
| 6. – Temperature decrease button                    |                                                                 |

## **BASIC HAIR CARE INSTRUCTIONS**

For optimal results, shampoo and condition your hair prior to styling, then dry your hair thoroughly and make sure that it is tangle free.

NOTE: The Pearl Shine Conical Wand is not suitable for use on synthetic wigs or hair extensions.

## **ADVANCED CERAMIC COATED BARREL**

Advanced Ceramic is an exclusive layer of CeraSol Ceramic. Advanced Ceramic Coated barrel is proven to have 10x more ceramic\* for superior high even heat across the barrel with no hot spots.

\*vs. standard Remington ceramic coating

## **TURBO BOOST FUNCTION**

The Pearl Shine Conical Wand features a turbo boost function which will automatically select the highest temperature of 210°C. To operate the turbo boost function press and hold the '+' temperature increase button for 2 seconds.

## **TEMPERATURE LOCK**

The Pearl Shine conical wand has a temperature lock to prevent the selected temperature from being accidentally altered during use. When the selected temperature has been reached, simply press and hold the '-' temperature decrease button for 2 seconds. This will lock the current heat setting and a padlock icon will be seen in the digital display window. To unlock the temperature lock, simply press and hold the '-' temperature button for 2 seconds.

## **AUTOMATIC SAFETY SHUT OFF**

If the conical wand is not used for a period of 60 minutes (temperature is constant) it will automatically shut off.

## **AUTOMATIC WORLDWIDE VOLTAGE**

The Pearl Shine Conical Wand features automatic voltage adjustment for international use. Plug the unit into any domestic power outlet and it will adjust automatically to the voltage being supplied.

NOTE: Some countries will require the use of a plug adaptor that is not included with your conical wand.

## **HOW TO USE YOUR REMINGTON® PEARL SHINE CONICAL WAND**

Place the conical wand on a flat, hard, heat resistant surface ensuring the sides of the barrel do not come into contact with the surface. Plug in to any household (120/240V AC) power outlet. Press and hold the on/off switch for

1 second. The LCD digital display window will light up, and the temperature setting will default to 190°C. The bars in the right of the digital display window will flash while the barrel is heating to the temperature selected. When the temperature selected has been reached the bars in the right of the window will be steady. To select a higher temperature press the ‘+’ temperature increase button. To select a lower temperature press the ‘-’ temperature decrease button.

The conical wand will be ready to use in 10 seconds depending on the temperature selected.

Take extra care when using the conical wand, as it can get very hot. It is important to establish the correct temperature for your hair type prior to use, to prevent over drying or damage to your hair. If in doubt, start with the low temperature setting first, and increase the temperature gradually by pressing the “+” temperature increase button.

## RECOMMENDED TEMPERATURES

Temperature	Hair type
130°C - 150°C	Thin/fine, damaged or bleached hair.
150°C - 190°C	Normal, healthy hair.
190°C - 210°C	Thick and difficult to style hair.

## HOW TO CREATE NATURAL CURLS AND WAVES

- Before starting, put on the heat protective glove on the hand that you will be using to curl.
- Separate small sections of hair (about 5cms wide).
- Hold the section of hair at a vertical angle starting at the thicker portion of the barrel, and wrap around the conical barrel until the entire length of hair has been wrapped around.
- Use the cool tip if you need to get a better grip of the unit without having to grip the heated barrel. The swivel cord ensures you can turn the unit easily without getting tangled.
- Hold the length of hair around the barrel at the cool tip for 10 to 20 seconds, depending on the texture and length of your hair.
- To release the curl, simply unravel the length of hair around the barrel. The advanced ceramic coating will ensure that the hair slides smoothly from the tong.
- Allow the curls to cool fully after styling each section.

- For medium curls, loosen the curls with your finger tips. For natural looking waves, brush curls out using a paddle brush.
- Complete your style with a finishing balm or spray.

## **MAINTENANCE**

This conical wand is designed for household use and is virtually maintenance free.

If cleaning becomes necessary, disconnect the conical wand from the power outlet, allow it to cool, and then wipe the exterior surface with a soft damp cloth.

Do not immerse the appliance in any liquid. Do not use an abrasive cleaning fluid or material to clean the ceramic barrel as this will scratch the surface.

## **STORAGE**

When not in use, always unplug the conical wand from the power outlet. Allow the conical wand to cool and store out of the reach of children in a safe dry place. Never wrap the power cord around the conical wand as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the power plug and conical wand connections. If the cord becomes twisted in use, periodically straighten it.



**WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**

**As with all electrical appliances, the power cord must be regularly checked for wear and tear. Immediately cease using this product if the power cord shows any signs of damage.**

This product conforms to radio frequency interference requirements.  
Any product purchased and used commercially carries a limited 90 Day Warranty.  
We suggest you use local waste management centres to recycle this product at end of life.



# Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

## WARRANTY AGAINST DEFECTS

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We or us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

### Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

#### **Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

#### **Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)

**REMINGTON®**  
EST. NEW YORK 1937

#### **REMINGTON SERVICE HOTLINE**

①Australia 1800 623 118 (toll free)

②New Zealand 0800 736 776 (toll free)

#### **AUTHORISED REPAIR CENTRES**

Visit [www.remington-products.com.au](http://www.remington-products.com.au) for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

©2019 Spectrum Brands Inc.

Rev. 11/19

Part No. T22-7001288

Type: CI96X1

