

# REMINGTON®

EST. NEW YORK 1937

## STYLING PRO HAIR DRYER



**USE & CARE  
MANUAL**

PLEASE READ  
PRIOR TO USE

To register your product go to  
[www.remington-products.com.au](http://www.remington-products.com.au)  
[www.remington.co.nz](http://www.remington.co.nz)

**2 YEAR WARRANTY**

**D5950XAU**

## IMPORTANT SAFEGUARDS

**Warning: When the hair dryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair dryer is switched off.**

**When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:**

**READ ALL INSTRUCTIONS BEFORE USING**

**KEEP AWAY FROM WATER**

**DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.**

To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately.  
Do not reach into the water.

For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrical contractor for advice.

**WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, AND FIRE, OR INJURY TO PERSONS.**

- An appliance should never be left unattended when plugged in to a power outlet.
- The appliance must be switched off at all times other than when actually being used to dry hair.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given close supervision or instruction concerning use of the appliance by a person responsible for their safety.

- This appliance is not a toy.
- Children should be supervised to ensure they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agents or similarly qualified persons in order to avoid a hazard.
- Never block the air openings of this hair dryer or place it on a soft surface, such as a bed or couch, where the air openings may become blocked. Keep the air openings free of lint, fluff and hair.
- Do not use on people who are sleeping.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- Do not direct hot air towards the eyes or other heat sensitive areas.
- Attachments, where provided, may be hot during and after use. Allow them to cool before handling.
- When using the appliance, keep your hair away from the air inlet grille. Do not let your hair get drawn into the appliance.
- This appliance is not recommended for use on heavily treated/bleached hair, synthetic wigs or hair extensions.

## **SAVE THESE INSTRUCTIONS**

## D5950XAU STYLING PRO HAIR DRYER

### USE AND CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® Styling Pro Hair Dryer. The Styling Pro Hair Dryer is the perfect styling tool for a smooth salon finish.



### KEY PARTS

- |                                  |                   |
|----------------------------------|-------------------|
| 1. Concentrator                  | 8. Speed settings |
| 2. Removable filter              | ○ Off             |
| 3. Air inlet grille              | ⌘ Low speed       |
| 4. Air outlet                    | ⌘ High speed      |
| 5. Ceramic – ionic coated grille | 9. Hang loop      |
| 6. Cool shot                     | 10. Diffuser      |
| 7. Heat settings                 |                   |
| └ Low heat                       |                   |
| ≡ Medium heat                    |                   |
| ≡≡ High heat                     |                   |

## **BASIC HAIR CARE INSTRUCTIONS**

For optimal results, shampoo and condition your hair prior to styling and towel dry to remove excess moisture.

**Note:** This hair dryer is not suitable for use on synthetic wigs or hair extensions.

## **CERAMIC IONIC TECHNOLOGY WITH TOURMALINE**

Tourmalines are precious gemstones with highly unique properties. Heating crushed tourmalines results in the powerful natural emissions of ions and far-infrared heat. The Styling Pro Hair Dryer features Ceramic Ionic Technology with Tourmaline to provide a natural source of ions to reduce frizz and create a smooth and shiny finish.

## **COOL SHOT**

This hair dryer features a cool shot button that is used to hold your hairstyle. Squeeze and hold the cool shot button to rapidly cool and hold your hair once it has been styled.

## **QUICK DRYING**

Select the high heat and high speed setting and roughly dry hair. Use the round brush or your hand to shake out excess moisture whilst drying and keep the dryer in constant motion.

## **FITTING THE ACCESSORY ATTACHMENTS**

Fit the styling concentrator or diffuser attachment by pushing it on to the front of the hair dryer.

## **USING THE CONCENTRATOR**

To create a smooth style, use the styling concentrator and a round hair brush (not included) whilst drying. For best results, dry your hair partially before styling.

**Tip:** This concentrator is convenient for styling your fringe.

**Tip:** Dry your roots upwards to create a lift and add some volume.

## **USING THE DIFFUSER**

To enhance natural curls and waves, turn your head upside down and gently place your hair into the diffuser bowl slightly rotating the dryer as you style.

To create extra volume at the roots of the hair, keep your head upright and place the diffuser against the top of the head. Gently rotate the hair dryer allowing the diffuser fingers to gently massage the scalp being careful not to burn the scalp. Dry gently on a medium heat/low speed setting.

**CAUTION:** Do not use the diffuser on the highest heat setting.

## **STRAIGHTENING**

Select the high heat and high speed setting and roughly dry the hair. When the hair is nearly dry, attach the concentrator nozzle (which minimises frizz) and reduce the heat/speed. Section the hair according to thickness and begin with straightening bottom layers first. Using the a round brush (not included), follow the brush with the concentrator from above, while slowly gliding down each section of hair from roots to tips. Once the bottom layers have been straightened, then straighten the mid-section and complete by straightening the top layers.

## **NATURAL WAVY TEXTURE**

Using the low heat and high speed setting, 'scrunch' sections of hair with your fingers into the palm of your hand while directing airflow through your fingers. For more volume, lean forward and dry the hair in the upside down position.

## **STYLING**

Set the dryer to the low heat and low speed setting and attach the concentrator nozzle for precision drying. Section the hair, and style using the round brush. Concentrate the airflow directly on the hair while styling in the direction you desire. If necessary, hold the airflow for 2-5 seconds on each section while curling under or over for additional hold.

## **USER INSTRUCTIONS**

This hair dryer is equipped with a thermostat that will cycle 'OFF' if the temperature exceeds the comfort level due to partially blocked air inlet or air outlet grilles. In the event that the hair dryer stops during use, turn off all switches and allow the hair dryer to cool down, at which time the thermostat will automatically reset. Before using again, check that the air inlet and air outlet grilles are not blocked. Unplug the hair dryer and clean the openings if necessary. During use, do not block the air openings or let your hair be drawn into the hair dryer.

## **MAINTENANCE**

Your hair dryer is designed for household use and is virtually maintenance free. When cleaning becomes necessary, turn all switches off and disconnect the hair dryer from the power outlet.

To maintain peak product performance, it is important to clean the air inlet grille and filter at the back of the dryer. To access the air inlet grille and filter, grasp the air inlet grille retaining ring with your hand and twist it anti-clockwise until it unlocks. Pull it away from the hair dryer. The filter can now be cleaned with a soft brush or a vacuum cleaner. Take the air inlet grille retaining ring and position it so the lugs on the ring are aligned with the notches on the side of the dryer. To lock, turn the air inlet grille retaining ring clockwise. The exterior of the hair dryer can be cleaned by wiping it with a damp cloth.

## **STORAGE**

When not in use, unplug the unit. Allow the appliance to cool and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at plug connections. If the cord becomes twisted in use, periodically straighten it.

You may also use the hang loop to store the hair dryer within convenient reach, ensuring that water cannot be splashed on to it when it is hung up.

## **DISPOSAL/RECYCLING**

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.



**WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**

**As with all electrical appliances, the power cord must be regularly checked for wear and tear. Immediately cease using this product if the power cord shows any signs of damage.**

This product conforms to radio frequency interference requirements.  
Any product purchased and used commercially carries a limited 90 Day Warranty.  
We suggest you use local waste management centres to recycle this product at end of life.



# Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

## WARRANTY AGAINST DEFECTS

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We or us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

### Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

#### **Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

#### **Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)

**REMINGTON**  
EST. NEW YORK 1937

#### **REMINGTON SERVICE HOTLINE**

☎Australia 1800 623 118 (toll free)

☎New Zealand 0800 736 776 (toll free)

#### **AUTHORISED REPAIR CENTRES**

Visit [www.remington-products.com.au](http://www.remington-products.com.au) for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

©2021 Spectrum Brands Inc.

Rev. 05/21

Part No. T22-7002015

Type: D5950

