

REMINGTON®

EST. NEW YORK 1937

PRO SHINE HOT ROLLERS

USE & CARE
MANUAL

PLEASE READ
PRIOR TO USE



To register your product go to
www.remington-products.com.au
www.remington.co.nz

2 YEAR WARRANTY

H5600AU

IMPORTANT SAFEGUARDS

Warning: When the hot rollers are used in a bathroom, unplug them after use since the proximity of water presents a hazard even when the hot rollers are switched off.

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, and FIRE, OR INJURY TO PERSONS.

- Your appliance should never be left unattended when plugged in to a power outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given close supervision or instruction concerning use of the appliance by a person responsible for their safety. This appliance is not a toy. Children should be supervised to ensure they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Never operate your appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of this appliance is damaged it must only be replaced by a qualified electrical tradesperson.
- Keep the power cord away from heated surfaces.
- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors, where aerosol (spray) products are being used or where oxygen is being administered.
- The appliance will be hot during use. Do not let bare skin touch heated surface.
- Do not place the heated unit on any soft surface such as a bed, carpet or a towel. Place only on a hard, flat, heat resistant surface.

SAVE THESE INSTRUCTIONS

H5600AU PRO SHINE HOT ROLLERS

USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your Remington® Pro Shine Hot Rollers. For maximum styling versatility, your hot rollers are in 3 sizes: 6 large, 10 medium and 4 small. Also included are 20 colour coded pins in 3 sizes and 20 clips in 3 sizes to secure your hair on the roller when in use.



KEY PARTS

- | | |
|--|-------------------------------|
| 1. 20 rollers in 3 sizes <ul style="list-style-type: none">• 6 large• 10 medium• 4 small | 4. On indicator light |
| 2. 20 plastic clips in 3 sizes | 5. Stay cool outer rims |
| 3. 20 pins in 3 sizes | 6. Ready to use dot indicator |
| | 7. Storage case |

BASIC HAIR CARE INSTRUCTIONS

For optimal results, shampoo and condition your hair prior to styling. Dry your hair thoroughly before using your Pro Shine Hot Rollers and make sure that it is tangle free. The hot rollers are suitable for all types of hair although the length of time for which they should be kept in the hair will depend on individual hair types, and also the type of curl that you wish to achieve.

Note: The Pro Shine Hot Rollers are not suitable for use on synthetic wigs or hair extensions.

HOW TO USE YOUR REMINGTON® PRO SHINE HOT ROLLERS

Place the unit on a flat, hard, heat resistant surface. Plug the unit into a household (230/240V AC) power outlet. Switch power on. The on indicator light will illuminate. Allow the rollers to heat up with the lid closed, the rollers will be ready to use in about 10 minutes. When the rollers are ready to use, the ready to use dot indicator will change to light pink and the rollers will feel warm to the touch.

Each roller has an exclusive wax core that retains heat for longer, creating curls that last. The rollers are thermostatically controlled and cannot overheat.

Note: The wax core turns to liquid when the rollers are heated and the liquid may be heard moving inside the rollers until the rollers have cooled.

Section the hair and make sure it is smooth and tangle free before beginning to style. Wrap a section of hair around the roller from the ends and keeping the hair taut, wind the roller up all the way to the roots or to mid length, depending on desired results.

Secure the roller in place with an appropriate size metal pin or easy to use clip. The pins and clips are colour coded by size and match the stay cool outer rim of the roller – white pins and clips are small to use on the small rollers, pink pins and clips are medium to use on the medium rollers and silver pins and clips are large to use on the large rollers. Place the pin or clip across the roller as close to the roots as possible.

Use the small size rollers for tight curls, the medium rollers for loose curls and the large rollers for volume and waves.

Because hair types vary from person to person, it is advised to perform a curl test on your hair to determine how long the rollers should be left in the hair. Usually after a short time of about 5-10 minutes, there will be a soft curl in the hair. The longer the time the rollers are left in your hair, the more curly the effect. If your hair curls easily it may need only a few minutes, but hard to curl hair may need 10 minutes or until the rollers have cooled.

If you wish to reuse the rollers, return them to the unit and wait until the ready dot indicator lightens (approximately 10 minutes). Remove the rollers from your hair by gently unwinding. Wrap the curl around your finger and secure with a bobby pin and leave the hair to cool fully. When the curl has cooled remove the bobby pin. For a very curly look comb with your fingers and loosen curls. To create waves brush out with a soft brush.

Unplug the unit when you have finished styling your hair.

MAINTENANCE

Your appliance is designed for household use and is virtually maintenance free. If cleaning becomes necessary, disconnect the appliance from the power source and wipe the exterior with a damp cloth.

STORAGE

When not in use, unplug the unit. Allow it to cool and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. Handle the cord carefully for long life, and avoid jerking, twisting or straining especially at plug connections.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

As with all electrical appliances, the power cord must be regularly checked for wear and tear. Immediately cease using this product if the power cord shows any signs of damage.

This product conforms to radio frequency interference requirements. Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON®
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

①Australia 1800 623 118 (toll free)

②New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2020 Spectrum Brands Inc.

Rev. 04/20

Part No. T22-0004524-C

Type: H5600

