

REMINGTON®

EST. NEW YORK 1937

HAIRCUT KIT



**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE

To register your product go to
www.remington-products.com.au
www.remington.co.nz

2 YEAR WARRANTY

HC2000 Series

IMPORTANT SAFETY INSTRUCTIONS

When using an electric appliance, basic safety precautions should always be observed, including the following. Read all instructions before using this hair clipper.

KEEP POWER ADAPTOR AWAY FROM WATER

- Always unplug it immediately after using.
- Do not place or store the appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- Remington strongly recommends that an approved Safety Switch (residual current device) be fitted to protect all bathroom power outlets. Ask an electrical contractor for advice.

WARNING – TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a bath or sink.
- Always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- This appliance is for household use only.
- Do not leave the appliance unattended when it is plugged in.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep the appliance and the power cord away from the edge of table or countertops

and out of reach of children and persons with reduced physical, sensory or mental capabilities.

- This appliance is not a toy. Children shall be supervised to ensure they do not play with this appliance.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. If any of these things happen, return the appliance to an authorised service centre for examination and repair.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Make sure the cord is disconnected from the electrical outlet while storing this appliance in a moisture-free area. Do not store it in temperatures exceeding 60°C (140°F).
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- To disconnect, turn all controls to OFF, then remove the cord from the electrical outlet.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.

SAVE THESE INSTRUCTIONS

HC2000 SERIES REMINGTON 21 PIECE HAIR CUT KIT

USE AND CARE MANUAL

Thank you for purchasing your new Remington® Haircut Kit. Your hair clipper is designed to help you maintain a range of hairstyles for years to come.

For best cutting performance we recommend you read these instructions thoroughly and keep them in a safe place.



KEY PARTS

- | | |
|-----------------------------|-------------------------|
| 1. Clipper | 13. 16mm Trimming Guide |
| 2. Left Ear Trimming Guide | 14. 12mm Trimming Guide |
| 3. Right Ear Trimming Guide | 15. 9mm Trimming Guide |
| 4. Neck Brush | 16. 6mm Trimming guide |
| 5. Sectioning Clip | 17. 3mm Trimming Guide |
| 6. Sectioning Clip | 18. Cape |
| 7. Sectioning Clip | 19. Storage Case |
| 8. Sectioning Clip | 20. Cleaning Brush |
| 9. Scissors | |
| 10. Styling Comb | |
| 11. 25mm Trimming Guide | |
| 12. 18mm Trimming Guide | |

Also Included
Blade Guard

HC2000 SERIES SPECIFICATIONS

Power System	Cord
Voltage Type	Single 220-240V

BEFORE CUTTING HAIR

The blades of this clipper are designed to remain permanently lubricated. They do not need oiling. We have aligned the blades on your hair clipper prior to shipment. It is possible the blades may be bumped out of alignment whilst in transit. Correct blade alignment is essential for effective cutting. If the blades are out of alignment they can be easily adjusted.

1. The end of the top blade should be closer to the body of the hair clipper than the bottom blade. This is important so that the clipper doesn't cut too close or allow the moving (top) blade to touch the skin.
2. The bottom blade should be as closely aligned as possible to the centre of the top blade.
3. If the blades are not correctly aligned, turn the clipper on for a few moments, turn off and unplug. Loosen the two screws slightly and manually adjust the bottom blade until it is aligned.
Re-tighten the screws.
4. Ensure the hair clipper is running smoothly, with a slight vibration, before attempting to cut any hair.

GETTING STARTED

1. Make sure your clipper is operating correctly.
2. Place a cape around the neck of the person whose hair is being trimmed or cut.
3. This person should be seated so that the top of their head is at your eye level.
4. Comb the hair as it is normally styled.
5. Comb out all knots and tangles.
6. Hold the hair clipper in the palm of one hand and with your thumb resting firmly on the top of the hair clipper. This grip proves comfortable cutting control. Although the hair clipper may be used left or right handed, using it right handed allows you to access the taper lever more easily.
7. Ensure the hair is dry. Hair clippers perform best with dry hair, making it easier to see how much hair is being cut.

TO ATTACH TRIMMING GUIDES

1. Select an appropriate length trimming guide to match the desired length of hair to remain after the cut. The trimming guides are numbered and marked with 3mm, 6mm, 9mm, 12mm, 16mm, 18mm and 25mm.
2. Hold comb with teeth up, slide the attachment firmly onto the bottom clipper blade.

FOR UNIFORM CUTTING

Allow the clipper to cut through the hair without forcing it at a faster rate, as this may create a pulling sensation.

Use short strokes when cutting and initially use the longest trimming guide. You can always use a closer trimming guide later if you want a closer cut.

HOW TO GIVE A HAIRCUT

1. Start at the back of the head. Holding the clipper as shown, lightly stroke upwards making sure you are taking off the desired amount of hair. Work your way up to the crown of the head in layers. When completed, comb the area to remove any loose hair and determine if you need any further cutting.
2. Repeat the same procedure for each side of the head. Make sure the length of the hair is trimmed the same on both sides of the head.
3. To cut the top of the head, hold the hair between your fingers and cut a small amount at a time. Cut from the front to the back.
4. To trim around the ears and short hairs at the nape of the neck, you must remove the trimming guide. Angle the clipper and lightly stroke around each ear to the back of the neck. Be careful not to touch ears or to press too hard.
5. Final trim can be made with the hair clipper or the scissors. Make sure to check over the entire head for any uneven areas. For styled hair or giving quick trims, you may prefer using your hair clipper without the trimming guide.




6. The adjustable taper level allows you to gradually change the closeness of the cut, either with or without a trimming guide. When the lever is fully forward the blades will give the closest cut. Moving the lever gradually backwards increases the cutting length.



SHORT TAPERED STYLES - "FLAT TOPS" & SHORT CUTS

1. Starting with the longest attachment comb (25mm), cut from the back of the neck to the crown. Hold the attachment comb flat against the head and slowly move the clipper through the hair, as shown.
2. Use the same procedure from the lower side to the upper side of the head, as illustrated. Then cut the hair against the direction in which it grows and level with the sides.
3. To give a "flat top" look, the hair on top of the head must be cut over the top of a flat comb.
4. Use closer cutting attachment combs to taper the hair down to the neckline as desired.

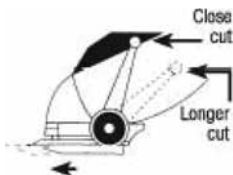

STORAGE

When not in use, unplug it and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life, and avoid jerking, twisting or straining especially at plug connections.



This product is not suitable to use in a bath or shower.

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004
Braeside, VIC 3195
AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817
Newmarket, Auckland 1149
NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON®
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

☎Australia 1800 623 118 (toll free)

☎New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2021 Spectrum Brands Inc.

Rev. 11/21

Part No. T22-0004051-B

Type: RG041A

