

REMINGTON®
Pro Power

PERSONAL GROOMER

USE & CARE
MANUAL

PLEASE READ
PRIOR TO USE



2 YEAR **WARRANTY**

PG008

IMPORTANT SAFETY INSTRUCTIONS

When using appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- To prevent accidents keep the appliance away from your eyelashes as well as clothes, brushes and wire.
- Always remember to turn on the groomer before you insert it into your nose or ear to avoid painfully snagging hairs.
- Never insert the groomer more than 6mm (1/4") into your nose or ear. Foreign objects should not come into contact with your ear drum.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.

- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this groomer with a damaged or broken cutter unit, as injury may occur.
- Always store this appliance in a moisture-free area. Do not store it in temperatures exceeding 60°C (140°F).
- Do not disassemble the cutter assembly.
- Do not submerge in water as damage will occur.
- This appliance is for household use only.

SAVE THESE INSTRUCTIONS

PG008 PERSONAL GROOMER

USE AND CARE MANUAL

Thank you for purchasing your new Remington® Personal Groomer. Inside this manual you will find tips on using and caring for your groomer.

KEY PARTS

1. Detail groomer
2. Linear trimmer
3. Rotary trimmer
4. On/Off switch
5. Battery compartment
6. Detail groomer comb with 5 length settings



INSERTING THE BATTERY

Your Remington® Personal Groomer runs on one “AA” ALKALINE battery.

1. To open the battery compartment, turn the base of the unit approximately 1cm to the left and pull it off.
2. Insert the battery into the unit, positive end first.
3. Replace the base and turn it 1cm to the right to lock it into place.

Battery cautions

- Use of non-alkaline batteries will impair the unit's operating performance.
- The battery should not be left in the unit if the unit is not in use for long periods.
- To prevent battery corrosion, the unit should be stored in a dry environment.
- Dead batteries should be removed immediately and disposed of properly.
- Do not use rechargeable batteries with this appliance. The lower voltage in rechargeable batteries impairs the performance of the cutting unit.

HOW TO USE

Before using your groomer:

- Beard, moustache or sideburn hairs should be dry. Avoid using lotions before using your groomer.
- Be certain that the hair length attachment is at the desired setting. When first using, you may want to begin on the highest setting (longest hair) to prevent trimming off too much hair initially.
- Comb hairs outward so they are at their maximum height and facing in the same direction.

CHANGING THE ATTACHMENT HEADS

This model comes with interchangeable attachments. You may want to use the detail groomer & comb for your beard, moustache, neckline & sideburns. The linear trimmer can be used for eyebrow hair trimming, and the rotary trimmer can be used for nose and ear hair grooming.

To change heads:

1. Turn the groomer off.
2. Detach cutting head by turning it to the right to the unlocked position and pulling it off.
3. Once the previous head is removed, attach the other head by placing it on top of the unit and turning it to the left to the locked position.

Turning on your groomer:

Use the ON/OFF switch to turn your groomer on and off.

Note: Always remember to turn on the groomer before you insert it into your nose or ear to avoid painfully snagging hairs.

TO TRIM BEARDS OR MOUSTACHES

1. Before you begin, comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
2. Place the adjustable 5 position comb attachment on the detail groomer's head and determine how much hair you wish to cut off. Remember, until you are familiar with using the groomer, it is better to select a longer hair setting initially in order not to trim too much hair.
3. Turn the groomer's power switch ON and begin trimming.
4. Start trimming under your chin and following your jawbone line, work toward your ear and upper beard line using an upward motion. Allow the adjustable 5 position comb attachment to follow the contour of your face.
5. When finished trimming, turn the power to OFF.

TO TRIM THE EDGE OF A MOUSTACHE

1. Remove the adjustable 5 position comb attachment.
2. Moustache hairs should be dry and avoid any waxes or lotions before using the groomer.
3. Use a styling comb or a small comb to comb the hairs straight for trimming.
4. Hold the groomer with the cutter blade facing you.
5. Trim hairs using a downward motion following the direction of your hair growth or trim against your hair growth, whichever is preferred.
6. After achieving the desired length, use a downward motion to blend moustache hairs.
7. Turn groomer OFF.

Note: Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards or across). Practice is best for optimum results.

Note: Use slow light pressure. Too much pressure may trim off more hair than desired.

TO TRIM SIDEBURNS

1. Comb sideburns following the direction of your hair growth.
2. Be certain that the adjustable 5 position comb attachment is placed on the detail groomer and set to length.
3. Hold groomer vertically with the front of the groomer facing you.
4. Trim sideburns using a downward motion.
5. Turn groomer OFF.

TO TRIM THE NAPE OF YOUR NECK

1. You will need a hand mirror for this operation if performing alone. The mirror is not necessary if trimming is performed by a second person.
2. Remove the adjustable 5 position comb attachment.
3. Use your fingers to lift the hair at the base of your head up off your neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by the groomer.
4. Using your other hand, hold the groomer horizontally to the base of your neck with the cutting unit facing up and move the groomer along the length of the neck until it touches your finger covering the roots at the base of your head. Repeat this procedure for the entire area of the neck. Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the groomer.
5. Use the hand mirror to inspect the results of the operation and ensure that all hairs along the nape of the neck have been trimmed.

TO DEFINE THE BEARD LINE

1. Remove the adjustable 5 position comb attachment.
2. Hold the groomer with the trimmer cutting blade facing you.
3. Start with the edge of the beard line and with the cutting blades resting lightly against your skin.
4. Use motions towards the edge of the beard line to trim the beard line to the desired shape in the facial areas and around the neck.

TO REMOVE HAIR FROM THE NOSE

1. Select the rotary trimmer.
2. Turn the groomer on.
3. Insert the cutting unit gently into the nostril.
4. Rotate the groomer in a circular motion around the opening of the nostril.
5. For best cutting efficiency, gently move trimmer in and out of the nostril as you rotate the groomer.
6. Do not insert the rotary trimmer more than 6mm into your nostril.

TO REMOVE HAIR FROM EYEBROWS

1. Select the linear trimmer.
2. Turn the groomer on.
3. Gently guide the cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.
4. Move the unit slowly and carefully, so as not to accidentally cut any hairs you do not intend to trim.

Note: Do not apply excessive pressure as this damages the groomer and may cause skin injury.

CLEANING & MAINTENANCE

Your groomer is designed to give you years of comfortable use. To ensure that you get optimal performance from your groomer, follow these simple cleaning and lubricating tips:

- After each use, brush or blow accumulated hair from the cutting unit.

Rinsing Your Groomer

- Your groomer can be rinsed with cool or warm water. Just hold the unit's head under the faucet - it is not necessary to remove the head first. Do not use hot water.
- If the groomer needs additional cleaning, the cutting head can be removed by turning it 1cm to the right and pulling it off. Then blow out the accumulated hair or rinse it more thoroughly under running water.
- Afterwards, shake excess water from the cutter head, making sure that all parts are held together.
- Replace the head in the same position as it was removed, turning it 1cm to the left until it locks into place.

Lubricating the cutters

- After rinsing the unit, apply a drop or two of mineral oil or baby oil to the cutting teeth.
- Don't apply too much oil, or it may spray.
- Finally, point the groomer down and away from you, and turn it on. This spreads the oil evenly and expels any excess.

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd
ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited,
as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Exhaustible components (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Chifley Business Park

1 Chifley Drive

Mentone, VIC 3194 Australia

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

Building C, Ground Floor

600 Great South Road,

Greenlane, Auckland 1051 New Zealand

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington-products.com.au

REMINGTON®

REMINGTON SERVICE HOTLINE

📞 Australia 1800 623 118 (toll free)

📞 New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc. (SBI), or one of its subsidiaries

© 2012 SBI

Rev. 11/12

Part No. T22-0000948