

# REMINGTON®

EST. NEW YORK 1937

## COLOURCUT HAIR CLIPPER KIT

USE & CARE  
MANUAL

PLEASE READ  
PRIOR TO USE



To register your product go to  
[www.remington-products.com.au](http://www.remington-products.com.au)  
[www.remington.co.nz](http://www.remington.co.nz)

2 YEAR WARRANTY

HC5035AU

## **IMPORTANT SAFETY INSTRUCTIONS**

**When using an electric appliance, basic safety precautions should always be observed, including the following. Read all instructions before using this hair clipper.**

### **WARNING – TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS:**

- Do not reach for an appliance that has fallen into water. Immediately switch off the wall power outlet and then remove the plug from the wall outlet.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a bath or sink.
- Always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- This appliance is for household use only.
- Do not leave the appliance unattended when it is plugged in.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Keep the appliance and the power cord away from the edge of tables or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
- Cleaning and user maintenance should not be made by children without supervision.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Keep the cord away from heated surfaces.

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. The supply cord cannot be replaced. If the cord is damaged the appliance should be discarded.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Make sure the cord is disconnected from the electrical outlet while storing this appliance in a moisture-free area. Do not store it in temperatures exceeding 60°C (140°F).
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- To disconnect, turn all controls to OFF, then remove the cord from the electrical outlet.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.

**Remington strongly recommends that an approved Safety Switch (residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.**

**SAVE THESE INSTRUCTIONS**

## HC5035AU COLOURCUT HAIR CLIPPER

### USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® ColourCut hair clipper. Inside this manual you will find tips on using and caring for your hair clipper.



### KEY PARTS

1. Taper Lever  
(6 positions: 0.5-2mm)
2. On/Off Switch
3. 9 Attachment Comb Guides  
(1.5-25mm)
4. Right & Left Ear Guides
5. Styling Comb

6. Scissors
7. Neck Brush

#### Also Includes

- Cleaning Brush
- Blade Guard

## HC5035 SPECIFICATIONS

Power System	Corded
Voltage Type	Single 220 - 240V

## HOW TO USE

### Before Starting to Cut

- Inspect the clipper making sure that it is free from hair and dirt.
- Seat the person so that their head is approximately at your eye level.
- Before cutting, always comb the hair so it is tangle free and dry.

### To Attach a Comb

1. Hold the comb with its teeth upward.
2. Slide it onto and along the clipper blade until the front of the comb firmly sits against the clipper and click into position.
3. To remove, holding the clipper with the blades facing away from you, firmly push the comb upward and away from the blades.

### Comb Settings

- Each comb attachment is marked accordingly on its outside middle surface.
- Please note a 0.5mm cutting length can be achieved from holding the clipper, with no comb attachment, perpendicular to the skin. A 1.0mm cutting length is achieved from holding the clipper.
- This is with the taper setting set at the closest gap between the blades.

GUIDE COMBS	CUTTING LENGTH
1 (Grade 0)	1.5mm
2 (Grade 1)	3mm
3 (Grade 2)	6mm
4 (Grade 3)	9mm
5 (Grade 4)	12mm
6 (Grade 5)	16mm
7	18mm
8	22mm
9	25mm

## Instructions for Hair Cutting

Note: For even cutting, allow the trimmer comb/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum length trimmer comb, until you know how short you would like your hair to be.

Note: The comb guide lengths described for use in the steps below are an example only. If you want a longer or shorter hair cut you will need to adjust the comb guide lengths to suit your requirements.

### Step 1 – Nape of the Neck

1. Use 3mm or 6mm guide comb.
2. Hold the clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
3. Slowly lift the clipper, working upwards and outwards through the hair, trimming just a little at a time.

### Step 2 – Back of the Head

With the 12mm comb attached, cut the hair at the back of the head.

### Step 3 – Side of the Head

With the 3mm or 6mm guide comb attached, trim sideburns. Then change to the longer 9mm or 12mm guide comb and continue to cut up to the top of the head.

## **Step 4 – Top of the Head**

- With the 16mm or 18mm guide comb attached, cut hair on top of the head against the direction in which the hair normally grows.
- For longer hair on top, use without a guide comb. Lift the hair on top of the head with a small hand comb. Cut over the hand comb with the hair lifted or hold the hair between the fingers to lift it and cut it to the desired length.
- Always work from the back of the head.

## **Step 5 – The Finishing Touches**

- Use the clipper without an attachment comb for close trimming around the base and sides of the neck. Use the ear comb guides to get a clean line around each ear. For the required ear comb guide, angle the clipper and lightly stroke around each ear to the back of the neck.
- To produce a clean straight line at the sideburns, reverse the hair clipper.
- Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

## **Taper Lever**

The taper lever adjusts the length of cut when not using comb attachments. It is suggested to set the blades closest together when using the comb attachments. Half grade sizes can be achieved by using the taper lever with comb attachments.

## **CLEANING & MAINTENANCE**

- Your clipper is fitted with high quality blades.
- To ensure long lasting performance of your clipper, clean the blades and unit regularly.

## **After Each Use**

- Ensure the clipper is switched off and unplugged from the mains before cleaning.
- Brush the accumulated hair from the blades and body of the clipper. Do not submerge the clipper in water.
- To clean unit, wipe with a damp cloth and dry immediately.
- Place a few drops of cutter or sewing machine oil onto the blades. Wipe off excess oil.

## Every Six Months

- At regular intervals the blade set should be removed and cleaned.
- The blade set can be removed and reinstalled by using a screwdriver.
- Brush out hair and do not use water or cleaners on the blade set or internal body housing.

**CAUTION:** Do not use liquid cleaners on the blades or harsh or corrosive chemicals on the blade casing.

- Always use a soft brush to remove the accumulated hairs.
- Always store this appliance and cord in a moisture-free area.
- Do not wrap the supply cord around the appliance.

## STORAGE

When not in use, unplug the appliance and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance as this will cause the cord to wear prematurely and break. Handle the cord carefully for long life, and avoid jerking, twisting or straining especially at plug connections.

At the end of the product's life, please dispose of the product responsibly.

We recommend using local waste management centres to recycle this product at end of life.



**This product is not suitable to use in a bath or shower.**

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.



# **Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited**

## **WARRANTY AGAINST DEFECTS**

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (Warranty Period). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

### **Warranty Conditions**

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

#### **Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

#### **Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)

**REMINGTON®**  
EST. NEW YORK 1937

#### **REMINGTON SERVICE HOTLINE**

①Australia 1800 623 118 (toll free)

②New Zealand 0800 736 776 (toll free)

® Registered Trade Mark of Spectrum Brands Inc., or one of its subsidiaries

Made in China to the Specifications of Spectrum Brands, Inc.

©2020 Spectrum Brands Inc.

Rev. 07/20

Part No. T22-7001473

Type: HC06A

