

REMINGTON®

EST. NEW YORK 1937

VIRTUALLY INDESTRUCTIBLE HAIR CUT KIT

USE & CARE
MANUAL

PLEASE READ
PRIOR TO USE



To register your product go to
www.remington-products.com.au
www.remington.co.nz

10 Year Motor Life Warranty*

HC5856AU

IMPORTANT SAFETY INSTRUCTIONS

When using an electric appliance, basic safety precautions should always be observed, including the following. Read all instructions before using this appliance.

KEEP THE APPLIANCE DRY

WARNING – TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid.
- Do not place or store this appliance where it can fall or be pulled into a bath or sink.
- Unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- This appliance is for household use only.
- An appliance should never be left unattended when it is plugged in.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. If any of these things happen, return the appliance to manufacturer, its service agent or similarly qualified persons for examination and repair in order to avoid a hazard.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

- Store this appliance in a moisture-free area. Do not store it in temperatures exceeding 60°C (140°F)
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- WARNING: For recharging the battery, only use the adaptor supplied with the appliance.
- WARNING - Unplug the adaptor from the appliance before cleaning.

Remington strongly recommends that an approved Safety Switch (residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

SAVE THESE INSTRUCTIONS

HC5856AU VIRTUALLY INDESTRUCTIBLE HAIRCUT KIT

USE & CARE INSTRUCTION MANUAL

Get the haircut you deserve with the Remington® Virtually Indestructible Haircut Kit! Our innovative Super Power Motor drives more power to the precision ground blades providing superior cutting performance and low noise and vibration all in a compact clipper design. Its high impact polycarbonate casing and industrial strength 3 metre power cord are so durable that this clipper has a 5 year warranty!**

Inside this manual you will find tips on using and caring for your hair clipper.



KEY PARTS

1. Removeable Blade
2. Heavy-Duty Rubber Grip
3. On/Off button
4. High-Impact Polycarbonate Casing
5. 3m industrial power cord

Also Includes:

- 1.5mm comb
- 3mm comb
- 6mm comb
- 9mm comb
- 12mm comb
- 16mm comb
- 18mm comb
- 22mm comb
- 25mm comb
- Left ear guide comb
- Right ear guide comb
- Cleaning Brush (not shown)
- Oil Bottle
- Pouch

ABOUT YOUR HAIR CLIPPER

HC5856AU SPECIFICATIONS	
Power System	Cord/Cordless
Full Charge Time	4 Hours
Runtime	120 Minutes
Indicators	LED Charging Indicator
Voltage Type (adaptor voltage type)	Wordwide 100-240V

GETTING STARTED

1. Make sure your clipper is operating correctly. Inspect the hair clipper making sure that it is free from hair and dirt.
2. Place a cape around the neck of the person whose hair is being trimmed or cut.
3. Seat the person so that their head is approximately at your eye level.
4. Before cutting, always comb the hair so it is tangle free and dry.
5. Hold the hair clipper in the palm of one hand and with your thumb resting firmly on the top of the hair clipper. This grip provides comfortable cutting control.

CHARGING

- Before using your hairclipper for the first time, charge for 4 hours.
- Plug the adaptor into your hair clipper and then plug the charging adaptor unit into a 100-240 volt domestic power outlet. Check to ensure that the hair clipper On/Off switch is OFF. The Charging Indicator Light will glow to indicate that it is charging.
- If the product is not going to be used for an extended period of time (2 - 3 months), unplug it from the mains and store. Fully recharge your hairclipper when you would like to use it again.
- The hair clipper will be fully charged in 4 hours.
- Use the hair clipper only with the charging adaptor supplied.

CHARGING VIA STANDARD ELECTRICAL SOCKET

- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.

CORDED USE

- Connect the charging adaptor to the product then to the mains.

Note: Extended mains only use will result in the reduction of the battery life.

CORDLESS USE

- When the product is switched on and fully charged it can be used in cordless mode for up to 120 minutes

TO ATTACH TRIMMING GUIDES

1. Select an appropriate length trimming guide to match the desired length of hair to remain after the cut. The trimming guides are numbered and marked with 1.5mm, 3mm, 6mm, 9mm, 12mm, 16mm, 18mm, 22mm and 25mm.
2. Hold comb with teeth up, slide the attachment firmly onto the bottom clipper blade

INSTRUCTIONS FOR HAIR CUTTING

NOTE: For even cutting, allow the guide comb/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum guide comb, until you know how short you would like your hair to be.

NOTE: The comb guide lengths described for use in the steps below are an example only, if you want a longer or shorter hair cut you will need to adjust the comb guide lengths to suit your requirements.

STEP 1 - NAPE OF THE NECK

1. Use 3mm or 6mm guide comb.
2. Hold the hair clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
3. Slowly lift the hair clipper, working upwards and outwards through the hair, trimming just a little at a time.

STEP 2 - BACK AND SIDE OF THE HEAD

With the 9mm or 12mm guide comb, cut the hair at the back of the head.

STEP 3 - SIDE OF THE HEAD

1. With the 9mm or 12mm guide comb, trim sideburns.
2. Then change to the longer 22mm guide comb and continue to cut to the top of the head.

STEP 4 - TOP OF THE HEAD

1. Using the 25mm guide comb, cut the hair on top of the head against the direction in which the hair normally grows.
2. For longer hair on top, use scissors. Lift the hair on top of the head with your fingers. Cut the hair between your fingers to the desired length.
3. Always work from the back of the head.

STEP 5 - THE FINISHING TOUCHES

1. Use the hair clipper without an attachment comb for close trimming around the base and sides of the neck.
2. To produce a clean straight line at the sideburns, reverse the clipper. Place the reversed hair clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

CLEANING AND MAINTENANCE

DO NOT SUBMERGE THE HAIR CLIPPER IN WATER.

- Your clipper is fitted with high quality blades.
- To ensure long lasting performance of your clipper, clean the blades and unit regularly.

AFTER EACH USE

- Ensure the appliance is switched off and unplugged from the charging adapter before cleaning.
- Brush the accumulated hair from the blades and body of the clipper. Do not submerge the clipper in water.
- To clean unit, wipe with a damp cloth and dry immediately.
- Place a few drops of cutter or sewing machine oil onto the blades. Wipe off excess oil.

WASHABLE BLADE CLEANING

- The blades are washable under a running tap but must be removed before they are cleaned in this way. Keep the body of the device dry at all times.
- To remove the blades ensure the unit is switched off. Push the blade set away from the clipper body using your thumb.
- To reattach once the blades are cleaned and dry, align the bottom of the blade with the bottom blade housing tab and slide the cartridge back into place until you hear a click.

CLEANING CAUTIONS

- Do not use harsh or corrosive cleaners on the units or their blades.
- Ensure the appliance is switched off and disconnected from the power adaptor before cleaning.

Storage: Always store this appliance and cord in a moisture-free area. Do not wrap the cord around the appliance. Do not store in temperatures above 60°C.

REPLACING YOUR BLADES

It is very important to replace your Virtually Indestructible blades when necessary to maintain the top performance of your Virtually Indestructible hair clipper, ensuring a great haircut every time. When the blades are worn you may feel a sense of pulling while trimming your hair. This is an indication that it is time to replace your blades. We recommend the blades be replaced every 24 months.

Replacement Virtually Indestructible blades may be obtained directly from Remington®. Simply order over the phone via the Remington® Service Hotline - refer to page 12.

DISPOSAL/RECYCLING

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.



This product is not suitable for bath or shower.

This product conforms to radio frequency interference requirements
Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

5 YEAR WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of five (5) years and ten (10) years of motor life from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge. **Blades, heads and cutters are not included in the lifetime warranty.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON®
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

①Australia 1800 623 118 (toll free)

②New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2022 Spectrum Brands Inc.

Rev. 01/22

Part No. T22-7002641

Type: RG007A

