

**REMINGTON®**  
EST. NEW YORK 1937

# **BARBER'S BEST PRO ALL-IN-ONE GROOMING KIT**

**USE & CARE  
MANUAL**

PLEASE READ  
PRIOR TO USE



To register your product go to  
[www.remington-products.com.au](http://www.remington-products.com.au)  
[www.remington.co.nz](http://www.remington.co.nz)

**5 YEAR WARRANTY**

**MB4373AU**

## **IMPORTANT SAFETY INSTRUCTIONS**

**When using electrical appliances, basic precautions should always be observed, including the following.**

### **READ ALL INSTRUCTIONS BEFORE USING**

**For additional protection, the installation of a residual current device (rCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.**

### **KEEP AWAY FROM WATER**

**WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS**

**DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.**

- Do not place or store the appliance or charging adaptor where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- Unplug the charging adaptor from the electrical outlet immediately after fully charging.
- Do not use while bathing or in the shower.
- Unplug and switch off this appliance before cleaning it.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Keep the cord away from heated surfaces.
- Do not use this appliance with a damaged or broken trimming unit as injury may occur.
- Always store the charging adaptor in a moisture-free location.
- For household use only.

- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance. Cleaning and use maintenance shall not be made by children without supervision.
- Keep the appliance and the power cord away from edge of tables or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- Do not use on people who are asleep.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if the charging adaptor has been damaged or dropped into water.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- This appliance should be supplied with approved safety isolating adaptor PA-0510A (AUS version) with the output capacity of 5Vd.c, 1A; 200mA (adaptor output).
- Remington strongly recommends that an approved Safety Switch (residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

**WARNING - KEEP THE APPLIANCE DRY**

**SAVE THESE INSTRUCTIONS**

# MB4373AU BARBER'S BEST PRO ALL-IN-ONE PERSONAL GROOMER

## USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your Remington® Barber's Best Pro All-In-One Personal Groomer. Inside this manual you will find instructions on using and caring for your groomer.



### KEY PARTS

1. T-Blade
2. On/Turbo/Off Switch
3. Adjustable Stubble Comb (1.5mm - 5.0mm)
4. 20mm Detail Head
5. 7mm Detail Head
6. Full Size Foil Shaver Head

7. 9 x Trim Guides (1.5 - 25mm)

#### Also Includes:

- Power Adaptor
- Charging Stand
- Premium Storage Pouch
- Lubricating Oil

Note: The trimming guide attachments supplied are of various lengths (1.5 - 25mm). When first becoming familiar with your Barber's Best Pro All-In-One Personal Groomer, begin with a longer numbered setting. Adjust cutting length, as desired.

MB4373AU SPECIFICATIONS	
Power System	Cord/Cordless (Rechargeable)
Full Charge Time	4 Hours
Run Time	Up to 60 Minutes
Quick Charge	Yes (5 Minutes)
Indicators	LED Charging Indicator
Voltage Type (adaptor voltage type)	Worldwide 100-240V

**Quick Charge:** A 5 minute quick charge will allow you for 3 minutes of trimming.

**Voltage Type:** Worldwide Voltage – personal groomer automatically adapts to an outlet voltage between 100V and 240V.

Note: Some countries will require the use of a plug adaptor that is not included with your shaver.

## CHARGING

- Before using your groomer for the first time, charge it for 4 hours. The groomer will be fully charged in 4 hours.
- Plug the adaptor into your groomer and then plug the charging adaptor unit into a 100-240V domestic power outlet. Check to ensure that the groomer On/Off switch is set to OFF (the power switch will be flush with the bottom of the groomer). The Charging Indicator Light will illuminate to indicate that it is charging. When the battery is full the Charging Indicator will remain illuminated until disconnected from the power outlet.
- The batteries cannot be overcharged, but it is recommend that charging be discontinued and the groomer stored away if it will not be used for an extended period of time (2-3 months).
- To preserve the life of the batteries, discharge them by running the groomer until the blades move slowly. Switch off and recharge for 4 hours. Do this every 6 months.
- Use the groomer only with the charging adaptor supplied.

## INSTRUCTIONS FOR USE

- Switch the product on by sliding the on/off button upwards for standard mode, and once more for turbo mode.
- Turbo mode is intended for thick beards or heavier areas of facial hair.
- Turbo function provides a boost in motor speed to power through thick beards.

## HOW TO USE YOUR PERSONAL GROOMER

What attachments to use:

	T-Blade	Foil Shaver Head	Adjustable Stubble Comb	Trimming Guides	7mm Detail Head	20mm Detail Head
Beard	X	X	X	X		
Beard line	X	X			X	X
Moustache	X	X	X	X	X	X
Nape of neck	X			X		
Sideburns	X		X	X		X
Nose					X	
Ear					X	
Eyebrow					X	
Body	X	X	X	X		
Head				X		

## ATTACHING THE GROOMING ATTACHMENTS

Note: Ensure the groomer is switched off before changing any attachments.

### To Attach & Remove the Attachment Heads:

- To attach any of the attachment heads, slide the selected head onto the body until it clicks into place.
- To remove the T-Blade & the Detail Heads, press on the eject symbol on the back of the head and slide forward. Make sure the blade is facing away from you.
- The foil shaver attachment has a release button on the back. To remove, press then slide off.

## **Trimming Guides:**

**Note:** Make sure the T-Blade is on the groomer.

- To attach trimming guides, ensure the trimmer blade is facing away from you. Hook the trim guide on the front of the trimmer blade and push down to click into place.
- To remove, pull the tab on the back of the trim guide upwards and away from the trimmer blade.

## **Adjustable Stubble Comb:**

- The stubble comb can be adjusted to give you length settings between 1.5 - 5.0mm by turning the wheel to the desired length.
- Turn the wheel clockwise for longer length and counterclockwise for shorter lengths. The wheel has an indicator that points to the length setting selected.

## **GROOMING TIPS**

### **Beard / Moustache:**

- Use a small comb to straighten hairs for trimming.
- When TRIMMING, first select a Trimming Guide and attach to the T-Blade. If you are trimming for the first time start with the maximum length. Adjust the trim guide length as desired once you are familiar with using the groomer.
- Starting under the chin, follow the jaw line back towards the ear. Trim in multiple directions to capture all stray hairs.
- When THINNING or TAPERING, use a small comb to hold beard in place. In your opposite hand, hold the Groomer with the cutting system facing outward while slowly moving through the hair.
- If hair builds up in the trimmer comb during the process, switch the unit off, pull the comb off and remove excess hair by pulling out.
- The Adjustable Beard Comb Attachment can also be used to achieve the desired look.

### **Foil Shaver:**

- Use the Foil Shaver attachment to clean-up detailed areas. For best results, avoid holding at an angle.

**Note:** The foil shaver is designed to shave the detailed areas around your beard, moustache and sideburns. It is not designed to shave your entire face. Ensure to trim your facial hair before shaving.

## **Nape Of Neck:**

- Using a hand-held mirror is necessary if self-trimming.
- Lift hair off neck, using index finger to cover & protect hairs NOT needing trimming.
- Carefully touch cutting blade to neck, slowly moving the groomer in an upward direction until stopped by index finger.

## **Eyebrows:**

- Attach the 7mm detail head trimmer.
- Guide cutting edges to stray hairs along eyebrows.
- For best results, do not use the trimmer to define entire eyebrow.

## **Nose:**

- Attach the 7mm detail head trimmer.
- Carefully insert groomer no more than 1/4" into nostril.
- Rotate the groomer in a circular motion while gently moving in and out of nose.

## **Ears:**

- Attach the 7mm detail head trimmer.
- When trimming inner ears, avoid inserting the groomer more than 1/4" into ear canal.
- Rotate the groomer in a circular motion while gently moving in and out of ear canal.

## **CLEANING, CARE & MAINTENANCE**

Note: Always clean the groomer attachments regularly to ensure maximum performance and a proper operating life. Do not rinse the groomer with water. Ensure to fully remove any attachments from the unit before rinsing these separately.

### **Cleaning Attachments With Water**

Remove attachment.

Rinse ONLY the attachment under warm running water. Do NOT use hot water as this might cause damage.

### **Cleaning Attachments With Brush**

After first removing attachment, thoroughly brush and blow out hair clippings from cutting system, attachment, and top of groomer handle.



## **Cleaning Foil Shaver Attachment**

The foil shaver attachment has a release button at the back to remove it from the groomer. To remove, press the button then slide off.

## **Oiling Blades & Cautions**

- Rinsing attachments under water (above) requires lubricating the cutting blades 1x monthly. Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with fingertip. Wipe away all excess.
- Use only light-grade oils as these will not evaporate nor slow down speed of cutting blades.
- Do not use hair oil, grease, or any oil mixed with kerosene or solvent as these too will evaporate.

## **TROUBLESHOOTING**

### **Q: What if the cutters don't move when turned on?**

**A:** The cutting unit may be dirty or clogged. Clean and lubricate the groomer as described previously.

### **Q: What if the groomer doesn't work at all when turned on?**

**A:** The groomer might simply need charging. Follow instructions for charging as described previously - refer to page 4. Should charging prove unsuccessful, contact the REMINGTON SERVICE HOTLINE for assistance - refer to page 12.

### **Q: What if the groomer fails to hold a charge?**

**A:** Fully discharge the groomer by running it until it completely stops. Next, follow recharging instructions described previously. If time between recharging cycles fails to increase, the battery might require replacement. Contact the REMINGTON SERVICE HOTLINE for assistance - refer to page 12.

## BATTERY DISPOSAL

Note: The battery is not intended to be removed or replaced under normal use. The only time the battery should be removed or the unit opened or dis-assembled, is at the end of the product's useful life before it is discarded.

- The MB4373AU contains a lithium-ion battery. Once the groomer has reached the end of its life, to ensure proper disposal of the product, please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.
- For more information about recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

**Caution:** Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns.

We suggest you use local waste management centres to recycle this product at end of life.



**This product is not suitable for use in the bath or shower.**

This product conforms to radio frequency interference requirements

Any product purchased and used commercially carries a limited 90 Day Warranty.

# Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

## WARRANTY AGAINST DEFECTS

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We or us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of five (5) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

### Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

#### **Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

#### **Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)

**REMINGTON®**  
EST. NEW YORK 1937

#### **REMINGTON SERVICE HOTLINE**

☎Australia 1800 623 118 (toll free)

☎New Zealand 0800 736 776 (toll free)

#### **AUTHORISED REPAIR CENTRES**

Visit [www.remington-products.com.au](http://www.remington-products.com.au) for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2021 Spectrum Brands Inc.

Rev. 02/21

Part No. T22-7001205-B

Type: PG11A



PLEASE  
RECYCLE