

For optimal shaver performance, clean your shaver after each use.

CAUTION!

- Do not remove or replace head assembly while shaver is running as it may cause damage to the unit's foils and cutters.
- To clean the external surfaces of the shaver, use a damp cloth. Do not use strong detergents or other chemicals.
- To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.
- The shaver should not be used until it has dried.
- Lubricate each cutter with household oil.
- This product contains no user serviceable parts.

Daily Cleaning:

1. Pull off Stubble comb/Head guard, if using, and rinse attachment.
2. Grasp the front and back of the cutter assembly and pull away from the shaver body. (Diagram I)
3. Tap the stubble from the foils and cutters.
4. Use the cleaning brush to sweep any loose hairs from the cutters, hairpocket, and trimmer. Pay close attention to cleaning out the corners and crevices inside the hairpocket. (Diagrams J–K)
5. Rinse head under running water.
6. Gently dry with towel or leave disassembled to air dry.
7. Replace hair pocket assembly when dry. (Diagram L)
8. Reattach the Stubble comb/Head guard to protect the shaving head until next use.





Monthly Cleaning:

1. Perform the daily cleaning steps 1-4.
2. Place a drop of liquid soap on each cutter and in the hairpocket. (Diagram M)
3. Brush the soap around vigorously with the supplied cleaning brush. Be sure to work the soap into the

corners of the hairpocket and into any especially dirty cutters. (Diagram N)

4. Add a small amount of water to the cutters.
5. Replace the foil assembly. (Diagram O)
6. Turn on the shaver for approximately 30 seconds.
7. While the shaver is running, rinse the foils under running water. (Diagram P)
8. Turn off shaver.
9. Remove foil assembly.
10. Rinse the cutters, hairpocket, and foil assembly thoroughly. (Diagram Q)
11. Shake off excess water.
12. Replace foil assembly. (Diagram O)
13. Allow shaver to dry before next use and attach the Stubble comb/ Head guard.

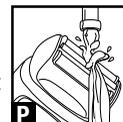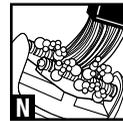

BATTERY DISPOSAL

Note: The battery is not intended to be removed or replaced under normal use. The only time the battery should be removed or the unit opened or disassembled, is at the end of the product's useful life before it is discarded.

- The PF7855AU shaver contains a nickel metal hydride battery. Once the trimmer has reached the end of its life, to ensure proper disposal of the product, please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.
- For more information about recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

Caution: Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns.

DISPOSAL/RECYCLING

Legislation in some localities mandates that e-waste (anything with a plug,

battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.



Suitable for use in bath and shower

This product conforms to radio frequency interference requirements
Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited 5 YEAR WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the 5 year period (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge. **Blades, heads and cutters are not included in the lifetime warranty.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
(a) Retain this warranty with your receipt/proof of purchase; and
(b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
(a) Any serial number or appliance plate is removed or defaced;
(b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

☎Australia 1800 623 118 (toll free)

☎New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2022 Spectrum Brands Inc.

Type: F20A

Rev. 01/22

Part No. T22-7002639

REMINGTON
EST. NEW YORK 1937

VIRTUALLY INDESTRUCTIBLE FOIL SHAVER



USE & CARE
MANUAL
PLEASE READ
PRIOR TO USE

To register your product go to
www.remington-products.com.au
www.remington.co.nz

5 YEAR WARRANTY**



PF7855AU

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.

For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS

- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Never operate this appliance if it has a damaged cord, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the charging cable of the appliance is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. It cannot be repaired.
- Keep the cord away from heated surfaces.
- Charge, use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use this appliance with damaged or broken tracks, foils or cutters, as injury may occur.
- For use on facial hair only. Not intended for shaving the hair on your head.

- Do not plug or unplug the appliance with wet hands.
- For household use only.
- Do not place or store the appliance or charging cable where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid for extended periods of time.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- Unplug the charging cable from the electrical outlet immediately after fully charging.
- WARNING** - Unplug the charging cable from the appliance before cleaning the appliance in water.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Always store the charging cable in a moisture-free location.
- Do not use on people who are asleep.
- Do not wrap the cord around the appliance.
- Remington strongly recommends that an approved Safety Switch (Residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.
- WARNING:** For recharging the battery, only use the charging cable supplied with the appliance.

SAVE THESE INSTRUCTIONS

PF7855AU VIRTUALLY INDESTRUCTIBLE FOIL SHAVER USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® Virtually Indestructible Foil Shaver. Inside this manual you will find tips on using and caring for your shaver.



KEY PARTS

- | | |
|-----------------------|-----------------------------------|
| 1. On/Off button | 8. Pop-up trimmer |
| 2. Foils | 9. Pop-up trimmer button |
| 3. Cutter assembly | 10. Stubble attachment/Head guard |
| 4. Intercept trimmer | 11. Cleaning brush |
| 5. Hairpocket | 12. USB Charge Cable (Not Shown) |
| 6. Charging indicator | |
| 7. Power port | |

ABOUT YOUR SHAVER

PF7855AU SPECIFICATIONS	
Intercept trimmer	Yes
Pivot	Yes
Power system	Cordless/Rechargeable
Battery type	NiMH
Full charge time	2 hours
Cordless shave time	Up to 60 minutes
5 min. quick charge	Yes
Indicators	1 LED
Water resistance	Waterproof
Replacement part no.	SP-PR1855AU FOIL

Intercept Trimmer

Trims longer hairs so they can easily enter foils to shave close.

Pivot

Shaver head pivots to adjust to any angle on the face.

Cordless/Rechargeable

Shaver can only be used without the charging cable.

Quick Charge

Shaver will charge long enough for one shave in 5 minutes.

Water Resistance

Wet/Dry

Shaver can be used in the shower and with shaving gels. Can be cleaned by rinsing under running water.

Indicators

LED

Flashing green light indicates battery needs to be charged. Solid green light will turn on when charging and turn off when full charge reached.

CHARGING

Before using, read the important safety instructions in front of the manual.

- Connect the cord to the shaver and then to the electrical outlet. (Diagram A) The charging indicator light will glow green.
- Your shaver will have a partially charged battery. We recommend giving the battery a full charge prior to your first use.

CAUTION!

- Make sure the shaver and your hands are dry when charging the shaver.
- Always charge the shaver in a cool, dry place.

SHAVE

Before using, read the important safety instructions in front of the manual.

 
 
- Begin by removing the Stubble comb/Head guard from your shaver.
- Press the on/off button to turn on. (Diagram D)
- Stretch the skin with your free hand so the hairs stand upright.
- Hold the shaving head so all screens touch your skin simultaneously. The independently floating foils automatically adjust to the contours of your face. Only apply light pressure on the shaving head while shaving and use short, circular strokes. (Diagram E)
- After shaving, turn the shaver off. (Diagram D)

Remington recommends that you use your new shaver daily for up to three weeks to allow time for your hair and skin to become accustomed to the new shaving system.

SHAVING TIPS (DRY)

Ensure your skin is dry and free of oils.

- Wait at least 15 minutes after getting up before shaving, to ensure your face is free of puffiness that may be present from sleeping.
- Always hold the shaver at a right angle to the skin so the screens are touching the skin with equal pressure.
- Stretch skin with the free hand so hairs stand upright, making it easier for them to enter the cutting chamber.



- Shave with short, circular strokes. The use of short, circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- Do not press hard against the skin in order to avoid damage to the foil heads.

NOTE: To achieve a stubble look instead of a clean shave, affix the Stubble comb/Head guard over the cutter assembly and shave as usual.

SHAVING TIPS WITH GEL OR FOAM (IN SHOWER OR OVER THE SINK)

All models can be used in the shower for optimal performance.

NOTE: In order to ensure optimal performance, thoroughly rinse the shaver head under water during and after shaving.

- Apply water to face and neck area.
- Apply shave gel or foam to applicable shaving area.
- Rinse shaver head under water.
- Shave face and neck using short, circular strokes.
- Throughout the shave, regularly rinse shaver head under water to avoid residue build up.
- When finished shaving, rinse face.
- Thoroughly rinse shaver head of all gel or foam.
- Follow cleaning and care instruction.

TRIM

- Slide trimmer release button up to engage the trimmer. (Diagram F)
- Trim long, difficult hairs and side burns. (Diagram G)
- Close trimmer by sliding the button down. (Diagram H)

CLEANING AND CARE

The shaver is a wet/dry appliance. The shaver may be cleaned under warm water.

NOTE: When cleaning your shaver, make sure the shaver is turned off and disconnected from the power adapter.

