

REMINGTON®
EST. NEW YORK 1937

G5 GRAPHITE SERIES MULTI GROOM KIT

**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE



To register your product go to
www.remington-products.com.au
www.remington.co.nz

3 YEAR WARRANTY

PG5000AU

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.

For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

KEEP AWAY FROM WATER

WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS

- Do not place or store the appliance or charging adaptor where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- Unplug the charging adaptor from the electrical outlet immediately after fully charging.
- Unplug and switch off this appliance before cleaning it.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Keep the cord away from heated surfaces.
- Do not use this appliance with a damaged or broken trimming unit as injury may occur.
- Always store the charging adaptor in a moisture-free location.
- For household use only.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance. Cleaning, use, and maintenance shall not be made by children without supervision.
- Keep the appliance and the power cord away from edge of tables or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- Do not use on people who are asleep.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if the charging adaptor has been damaged or dropped into water.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- **WARNING:** For recharging the battery, only use the adaptor supplied with the appliance.
- Always replace the adaptor with one of the original type.

WARNING - KEEP THE APPLIANCE DRY

Remington strongly recommends that an approved Safety Switch (residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

SAVE THESE INSTRUCTIONS

PG5000AU G5 GRAPHITE SERIES MULTI GROOM KIT

USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your Remington® G5 Graphite Series Multi-Grooming Kit. Inside this manual you will find tips on using and caring for your groomer.



KEY PARTS

- | | |
|---|--|
| 1. 30mm Trimmer Head | 8. 3 Length Body Hair Comb (3, 6, 9mm) |
| 2. On/Off Switch | 9. Body Hair Trimmer Head |
| 3. Charging Indicator Light | 10. Adjustable Beard & Moustache Comb (2-20mm) |
| 4. 2x Clip On Comb Guides (1.5mm & 3mm) | |
| 5. Mini Foil Shaver Head | Also Includes: |
| 6. Micro Stubble & Precision Trimmer | • USB Cable |
| 7. Nose, Ear, Eyebrow Trimmer Head | • Premium Storage Pouch |
| | • Power Adaptor |
| | • Facial cleansing Brush |

Note: The Adjustable Comb Attachments have various length settings. When first becoming familiar with your G5 Graphite Series Multi Groom Kit, begin with a higher numbered setting. Adjust cutting length, as desired.

ABOUT YOUR GROOMER

PG5000AU SPECIFICATIONS	
Power System	Cordless (Rechargeable)
Full Charge Time	2-4 Hours
Run Time	90 Minutes
Indicators	LED
Voltage Type	Worldwide

Voltage Type: Worldwide Voltage - groomer automatically adapts to and outlet voltage between 100V and 240V.

Note: Some countries will require the use of a plug adaptor that is not included with your groomer.

CHARGING

Before using your trimmer for the first time, charge for 4 hours.

1. Ensure the product is switched off.
2. Connect the charging adaptor to the product and then to the mains.

Charging Indicator Light

Charge Level	Indicator
Charging	Blue LED will flash
Fully Charged	Blue LED will light up continuously
Battery charge is low	Red LED will flash

- Your trimmer cannot be overcharged. However, if it is not going to be used for an extended period of time (2-3 months), unplug it from the mains and store.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 4 hours.
- On a full charge, your beard trimmer will run for up to 90 minutes of cordless usage.

HOW TO USE YOUR PERSONAL GROOMER

What attachments to use:

	Nose, Ear, Eyebrow Trimmer	Clip On Combs	Mini Foil Shaver	Adjustable Beard Comb	Body Hair Trimmer & Comb	Micro Stubble & Precision Blade
Beard		X		X		X
Beard Line			X	X		X
Ear	X					
Eyebrow	X					
Moustache		X		X	X	X
Nape of Neck				X		X
Nose	X					
Sideburns		X	X	X		X
Body			X		X	
Back					X	
Hair		X		X		

ATTACHING THE GROOMING ATTACHMENTS

Ensure that the device is switched off before fitting or removing attachments.

- To remove, rotate the attachment anti-clockwise until it unlocks and then lift it off.
- To fit, place the desired attachment on top of the device and rotate the attachment clockwise to lock it into place.

Fitting and Removing Fixed Guide Combs: To Fit

- Hook the front of the guide comb over the teeth of the wide trimmer.
- Press the back of the guide comb down until it clicks into place.

Fitting and Removing Fixed Guide Combs: To Remove

- Lift the tab on the back of the guide comb upwards until it comes free from the wide trimmer head.

Fitting and Removing the Adjustable Comb

- To fit, line up the rails on the comb with the slots on the sides of the groomer and slide the comb downwards onto the groomer.
- To adjust, press and hold the adjustment button on the back of the comb and slide the comb up or down. Release the button to lock the comb at that position. The length of cut is indicated by the scale on the side of the trimmer.
- To remove, press and hold the adjustment button and push the comb up and off the groomer.

GROOMING TIPS

- Comb facial hair with a fine comb before you start trimming.
- Comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- After trimming, lightly go over the trimmed areas with the foil to get a smooth clean finish.
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards or across) for better results.
- Hair should be dry and free from any waxes or lotions.
- If hair builds up during use, switch the unit off, remove any attachment in use and clean any excess hair clippings from the attachment and groomer.

3-Day Stubble, and Body Hair Maintenance: Wide Trimmer with 1.5mm Fixed Comb, Body Hair Attachment

3-Day Stubble Look:

Let your stubble grow to a length that is slightly longer than the look you are trying to achieve.

1. Fit the 1.5mm fixed comb to the wide trimmer attachment.
 2. Run your trimmer through your beard against the direction of hair growth.
 3. Tidy the edges of the stubble using the precision trimmer attachment.
- For more control over the length of your stubble, you can use the adjustable comb and trim your stubble down in increments starting at a longer length setting until you get the desired look.

Body Hair Maintenance: Trimming to Length

1. Fit the body hair attachment.
2. Body hair can be trimmed to 3 different lengths (3, 6 and 9mm). Select the desired length by sliding the comb into one of the three slots on the side of the attachment.
3. Place the flat side of the attachment against the skin.
4. Slowly slide the trimmer through the hair in the direction of hair growth.
5. Use slow, well-controlled movements.

Body Hair Maintenance: Removal

1. Remove the comb from the body hair attachment and go over the areas where you want to remove the body hair.
2. Stretch the skin with your free hand to make the hairs stand upright.
3. Use light pressure and shave against the direction of hair growth.

Hair Clipping: Wide Trimmer with Adjustable Comb

Step 1: Nape of the Neck

1. Fit the wide trimmer and adjustable comb.
2. Set the adjustable comb to 4mm or 6mm.
3. Hold the clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
4. Slowly lift the clipper, working upwards and outwards through the hair, trimming just a little at a time.

Step 2: Back of the Head

- With the comb set at 12 mm or 18 mm, cut the hair at the back of the head.

Step 3: Side of the Head

1. Adjust the comb to a shorter length setting for the areas around the ears.
2. Increase the length setting on the adjustable comb to gradually transition the length of hair on the side of the head to the longer hair on the top of the head.

Step 4: Top of the Head

1. Adjust the comb to the longer length settings (up to 20mm) then cut the hair on top of the head against the direction in which the hair normally grows.
2. Always work from the back of the head.

Trim the Sideburns

- To trim the sideburns, adjust the comb to the desired length setting, or use one of the fixed guide combs.

Short/Long Beard Trimming: Wide trimmer with adjustable comb, Precision trimmer

1. Fit the wide trimmer and adjustable comb.
2. Set the adjustable comb to the desired length.
3. Start trimming under the chin following the line of the jaw.
4. Work upwards towards the ear and upper beard line.
5. Tidy the beard edges using the precision trimmer attachment.

Contour Edging and Close Hair Cutting: Wide Trimmer

Contour Edging:

1. Hold the device with the cutting blade (teeth) facing you and at 90 degrees to the skin.
2. Start with the edge of the beard/moustache line and, with the blade resting lightly against the skin, use slow controlled movements to create contoured lines.

Close Hair Cutting:

1. Use the fingers of one hand to lift the hair at the base of your head up off your neck.
2. Your index finger should be covering the roots of the hairs you are lifting to prevent them from being accidentally cut.
3. Hold the trimmer to the base of your neck with the blade facing up. Move the trimmer up the neck until it touches your index finger which is protecting the hair roots.
4. Move your trimmer slowly and keep the hair roots at the base of your head out of the way of the trimmer.

Detailed Nose, Eyebrow and Ear Hair Trimming: Nose, Ear and Eyebrow Trimmer

Nose and ear:

1. Fit the nose, ear and eyebrow trimmer.
2. Insert the attachment gently into the nostril or ear.
3. Gently move the attachment in and out while rotating the body of the groomer at the same time.
 - Don't insert the attachment more than 6mm.
 - Wash the attachment after each use.

Eyebrow:

1. Carefully guide the attachment to remove any stray or longer hairs from the eyebrow.
2. To completely remove hairs, let the attachment touch the skin then move over the desired area.

Micro Stubble and Precision Trimming: Precision Trimmer

Micro Stubble:

The precision trimmer attachment has Trim Shave Technology which trims hair down to 0.2 mm to leave a micro stubble finish.

1. Fit the precision trimmer.
2. Hold the attachment so that the guide on the lower edge of the blade contacts the skin (the same way you would hold a wet razor). The guide on the lower edge of the blade helps to stretch the skin during trimming.
3. Use motions similar to wet shaving.

Precision Trimming:

1. Hold the precision trimmer attachment perpendicular to the skin.
2. Move it towards or away from the beard hair to achieve the desired result. Use gentle pressure and controlled movements.

Clean Shaven Edging: Mini Foil Shaver

1. Hold the trimmer so the mini foil shaver gently touches your face.
 2. Use short, well-controlled movements to shave around your beard moustache. Use your free hand to stretch your skin. This encourages the hair to stand upright, making it easier to shave.
- Note: The mini foil shaver was designed to shave the detail areas around your beard/ moustache/sideburns. It was not designed to shave your entire face. For a close comfortable shave, guaranteed, use one of Remington's electric shavers.

CLEANING, CARE & MAINTENANCE

Note: Always clean the groomer attachments regularly to ensure maximum performance and a proper operating life. The PG5000AU G5 Multi Grooming Kit is 100% waterproof for convenient use in the shower.

Cleaning Attachments With Water

1. Remove attachment.
2. Rinse the attachment under warm running water. Do NOT use hot water as this might cause damage.

Note: Do not rinse the mini foil shaver.

Cleaning Attachments With Brush

- After first removing attachment, thoroughly brush and blow out hair clippings from cutting system, attachment, and top of groomer handle.

Cleaning Foil Shaver

Note: Do not rinse or lubricate the mini foil shaver with oil, as it is permanently lubricated.

1. Remove attachment by pressing security latches on front of foil shaver.
2. Remove head, shake to remove excess clippings.
3. Replace attachment by gently snapping into place.

Oiling Blades & Cautions

- Rinsing attachments under water requires lubricating the cutting blades 1x monthly. Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with fingertip. Wipe away all excess.
- Use only light-grade oils as these will not evaporate or slow down speed of cutting blades.
- Do not use hair oil, grease, or any oil mixed with kerosene or solvent as these too will evaporate.

Note: Do not lubricate the foil shaver with oil, as it is permanently lubricated.

BATTERY DISPOSAL

Note: The battery is not intended to be removed or replaced under normal use. The only time the battery should be removed or the unit opened or dis-assembled, is at the end of the product's useful life before it is discarded.

- The PG5000AU contains a lithium battery. Once the trimmer has reached the end of its life, to ensure proper disposal of the product, please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.
- For more information about recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

Caution: Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns.

We suggest you use local waste management centres to recycle this product at end of life.

This product conforms to radio frequency interference requirements
Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of three (3) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON®
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

①Australia 1800 623 118 (toll free)

②New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2021 Spectrum Brands Inc.

Rev. 08/21

Part No. T22-0005664-C

Type: PG05A

