

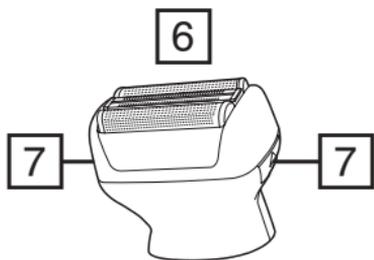
REMINGTON®

EST. NEW YORK 1937



Total Body Multi-Groomer PG780AU

www.remington-products.com.au
www.remington.co.nz



8



4

2

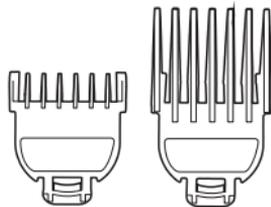
1

9




10





3



11

 

12

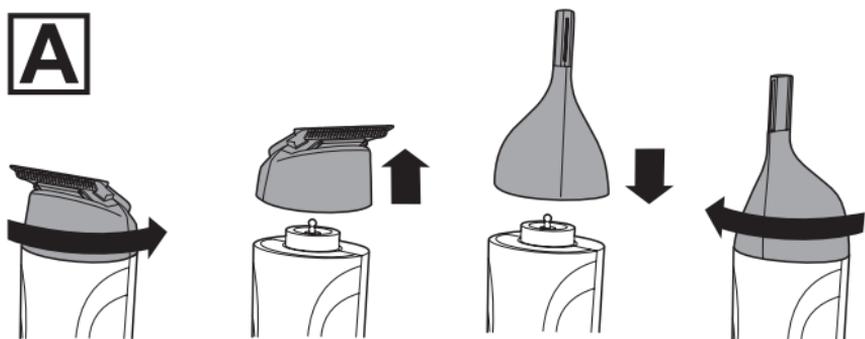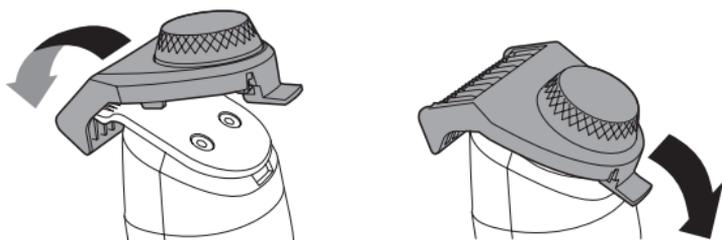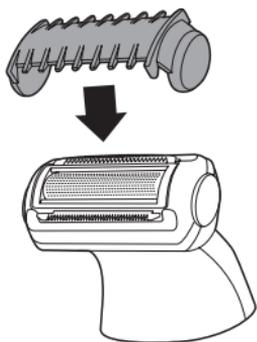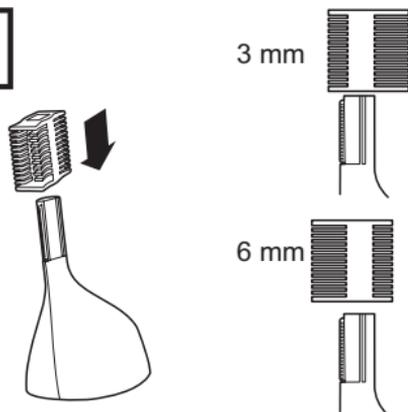A**B****C****D**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.

For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS

- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of the appliance is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. It cannot be repaired.
- Keep the cord away from heated surfaces.
- Use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use this appliance with damaged or broken tracks or cutters, as injury may occur.
- Do not plug or unplug the appliance with wet hands.

- For household use only.
- Do not place in or drop into water or any other liquid.
- Do not place or store the appliance or power adaptor where it can fall or be knocked into a sink or bath.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- Unplug the appliance before cleaning the appliance in water.
- Unplug and switch off this appliance before cleaning it.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Always store the power adaptor in a moisture-free location.
- Do not use on people who are asleep.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.



Suitable for use in bath and shower.

SAVE THESE INSTRUCTIONS

PARTS

- | | |
|---|-------------------------------------|
| 1. On/off switch | 9. Nose, ear, eyebrow trimmer |
| 2. Charging indicator lights | 10. Double sided comb (3 & 6mm) |
| 3. Charger connector | 11. Fixed guide combs (1.5 - 25 mm) |
| 4. Precision T-blade | 12. Body hair combs (1, 3, 5 mm) |
| 5. Adjustable stubble comb (1.0 - 5 mm) | Not shown: |
| 6. Foil shaver attachment | • USB charging cable |
| 7. Foil release buttons | • Storage case |
| 8. Body hair attachment | |

CHARGING YOUR APPLIANCE

Before using your trimmer for the first time, charge for 2 hours.

1. Ensure the product is switched off.
2. Connect the product to the USB cable and then connect the USB end of the cable to a powered USB port.

CHARGING INDICATOR LIGHTS

DURING CHARGING

Charge Level	0-33%	33-66%	66-100%	100% (after 4 seconds)
Lights	● ● ⊙	● ⊙ ○	⊙ ○ ○	● ● ●

○ ON ● OFF ⊙ PULSING

Once fully charged, all three lights will go out after 4 seconds.

DURING USE

Charge remaining	100 - 66%	66 - 33%	33 - 10%	10 - 0%
Lights	○ ○ ○	● ○ ○	● ● ○	● ● ⊙

○ ON ● OFF ⊙ FLASHING

The charge level is shown for 4 seconds after you switch your trimmer on.

- Do not recharge your product after each use as this will shorten the life of the battery.
- Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.
- On a full charge, your trimmer will run for up to 60 minutes of cordless usage.
- The trimmer has a 5 minute quick charge feature that will provide enough charge for 1 grooming session.

ATTACHMENTS

TO FIT AND REMOVE ATTACHMENTS (FIG. A)

Ensure that the device is switched off before fitting or removing attachments.

- To remove, rotate the attachment anti-clockwise until it unlocks and then lift it off.
- To fit, place the desired attachment on top of the device and rotate the attachment clockwise to lock it into place.

FITTING AND REMOVING FIXED GUIDE COMBS

To Fit

- Hook the front of the guide comb over the blade.
- Press the back of the guide comb down until it clicks into place.

To Remove

- Lift the tab on the back of the guide comb upwards until it comes free from the blade.

ADJUSTABLE STUBBLE COMB (FIG. B)

- Fit the adjustable stubble guide comb in the same way as you would fit a fixed guide comb.
- The 1.0 - 5 mm comb can be adjusted in 0.5mm increments simply by turning the wheel to the desired setting. Turn the wheel clockwise for longer length and anticlockwise for shorter length.
- The indicator on the wheel will point to the chosen setting.
- Use the trimmer without the adjustable comb for trimming hair close to the skin. This will trim hair to 1.0 mm, holding the blades perpendicular to the skin will trim hair to 0.5 mm.

BODY HAIR COMB (FIG. C)

- Clip the desired body hair comb over the body hair attachment.

INSTRUCTIONS FOR USE

- Comb facial hair with a fine comb before you start trimming.
- Comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- After trimming, lightly go over the trimmed areas with the foil to get a smooth clean finish.
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards or across) for better results.
- Hair should be dry and free from any waxes or lotions.
- If hair builds up during use, switch the unit off, remove any attachment in use and clean any excess hair clippings from the attachment and groomer.

TO THIN AND TAPER THE BEARD/MOUSTACHE

- Attach the adjustable stubble comb or a fixed guide comb to the T-blade. If you are trimming for the first time start with the maximum trimming length setting.
- Turn the unit on.
- Start trimming under the chin following the line of the jaw.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide through the hair. Work upwards towards the ear and upper beard line. Repeat from different directions as necessary.
- Tidy the beard edges using the T-blade. Use slow controlled movements to create contoured lines.
- If hair builds up in the trimmer comb during the trimmer process, switch the unit off, pull the comb and brush the hair off.

FINE DETAILING AND EDGING

1. Hold the device with the cutting blade (teeth) facing you and at 90 degrees to the skin.
2. Start with the blade resting lightly against your skin, use motions towards edge of beard line to trim to desired locations in facial area.
3. Shape as desired.

CONTOUR EDGING AND CLOSE HAIR CUTTING

Contour edging:

1. Hold the device with the cutting blade (teeth) facing you and at 90 degrees to the skin.
2. Start with the edge of the beard/moustache line and, with the blade resting lightly against the skin, use slow controlled movements to create contoured lines.

Close hair cutting:

1. Use the fingers of one hand to lift the hair at the base of your head up off your neck.
2. Your index finger should be covering the roots of the hairs you are lifting to prevent them from being accidentally cut.
3. Hold the trimmer to the base of your neck with the blade facing up. Move the trimmer up the neck until it touches your index finger which is protecting the hair roots.
4. Move your trimmer slowly and keep the hair roots at the base of your head out of the way of the trimmer.

BODY HAIR TRIMMING

Body hair maintenance: Trimming to length

1. Select the desired comb.
2. Place the flat side of the attachment against the skin.
3. Slowly slide the trimmer through the hair in the direction of hair growth.
4. Use slow, well-controlled movements.

Body hair maintenance: Removal

1. Remove the comb and go over the areas where you want to remove the body hair.
2. Stretch the skin with your free hand to make the hairs stand upright.
3. Use light pressure and shave against the direction of hair growth.

HAIR CLIPPING

Step 1: Nape of the neck

- Attach the 3mm or 6mm fixed comb.
- Hold the trimmer with the blade teeth pointing upwards. Start at the centre of the head at the base of the neck.
- Slowly lift the trimmer, working upwards and outwards through the hair trimming just a little at a time.

Step 2: Back of the head

- With the 12mm or 18mm guide comb attached, cut the hair at the back of the head.

Step 3: Side of the head

- With the 3mm or 6mm guide comb attached, trim sideburns. Then change to the longer 9mm guide comb and continue to cut the top of the head.

Step 4: Top of the head

- Use the longer length fixed combs of 18mm or 25mm to cut hair on top of the head against the direction in which the hair normally grows.
- Always work from the back of the head.

Step 5: The finishing touches

- Use the trimmer without a comb for close trimming around the base and sides of the neck.
- To produce a clean straight line at the sideburns, place the trimmer at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

USING THE FOIL SHAVER

- Fit the foil shaver attachment.
- Use short, well-controlled linear movements. Use your free hand to stretch your skin. This encourages the hair to stand upright, making it easier to shave.
- Note: always trim your facial hair before shaving.

CLEANING AND MAINTENANCE

Care for your appliance to ensure a long lasting performance. We recommend that you clean it after each use.

AFTER EACH USE

- Brush any accumulated hairs from the trimmer and attachment heads.
- The easiest and most hygienic way to clean the trimmer is under the tap.
- Place one or two drops of oil on the blades. Turn the appliance on to distribute the oil evenly, wipe off any excess oil.

REPLACING THE FOILS AND CUTTERS

To ensure continued high quality performance from your shaver, we recommend the foils and cutters are replaced regularly.

Signs that your foils and cutters need replacing

- Irritation: as foils get worn, you may experience skin irritation.
- Pulling: as the cutters wear, your shave may not feel as close and you may feel the cutter pulling your hair.
- Wear through: you may notice that the cutters have worn through the foils.

TO REPLACE THE FOIL/CUTTERS

- Remove the shaver head (pull the head up and off).
- Fit the new head assembly over the hair pocket and press down to click into place.

BATTERY DISPOSAL

Note: The battery is not intended to be removed or replaced under normal use. The only time the battery should be removed or the unit opened or disassembled, is at the end of the product's useful life before it is discarded.

- This appliance contains a lithium ion battery. Once the appliance has reached the end of its life, to ensure proper disposal of the product, please take it to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.
- For more information about recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

Caution: Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns.

We suggest you use local waste management centres to recycle this product at end of life.

DISPOSAL/RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of three (3) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004
Braeside, VIC 3195
AUSTRALIA

Customer service in Australia: 1800 623 118
E-mail: consumer.enquiry@remington-products.com.au
Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817
Newmarket, Auckland 1149
NEW ZEALAND

Customer service in New Zealand: 0800 736 776
E-mail: info@remington.co.nz
Website: www.remington.co.nz



Ref. No. PG780AU

Type No. RG036A

23/AU/ PG780AU T22-7003129 Version 08 /23

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

REMINGTON SERVICE HOTLINE

┆ Australia 1800 623 118 (toll free)

┆ New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

© 2023 Spectrum Brands, Inc.