

REMINGTON®

EST. NEW YORK 1937

VIRTUALLY INDESTRUCTIBLE ROTARY SHAVER

**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE



To register your product go to
www.remington-products.com.au
www.remington.co.nz

5 YEAR WARRANTY**

PR1855AU

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.

For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS

- The appliance should never be left unattended when plugged into a power outlet.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of the appliance is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. It cannot be repaired.
- Keep the cord away from heated surfaces.
- Use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use this appliance with damaged or broken tracks or cutters, as injury may occur.
- Do not plug or unplug the appliance with wet hands.
- For household use only.

- Do not place or store the appliance or power adaptor where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid.
- If an appliance falls into water, "unplug it" immediately. Do not reach into the water.
- Unplug the power adaptor from the electrical outlet immediately after shaving.
- Unplug and switch off this appliance before cleaning it.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Always store the power adaptor in a moisture-free location.
- Do not use on people who are asleep.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- **WARNING** - Unplug the power adaptor from the appliance before cleaning the appliance in water.

Remington strongly recommends that an approved Safety Switch (residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

SAVE THESE INSTRUCTIONS

PR1855AU VIRTUALLY INDESTRUCTIBLE ROTARY SHAVER

USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® Virtually Indestructible Rotary Shaver. Inside this manual you will find tips on using and caring for your shaver.



KEY PARTS

- | | |
|---|----------------------------------|
| 1. Precision Plus Heads | 6. Pop-up trimmer |
| 2. PowerFlex 360° Pivoting head and cutter assembly | 7. Pop-up trimmer switch |
| 3. Head release button | 8. Power port |
| 4. On/Off push button | 9. Stubble attachment/head guard |
| 5. Charging indicator | 10. Power adaptor (not shown) |

ABOUT YOUR SHAVER

PR1855AU SPECIFICATIONS	
Power System	Cordless
Full Charge Time	4 Hours
Cordless Shave Time	60 min
Indicator	3 stage
Voltage Type	Worldwide
Replacement Part No.	SPR-PR13
Water Resistance	Waterproof

Waterproof

Shaver can be used in the shower and with shaving gels. Can be cleaned by rinsing under running water.

Cordless

Shaver can only be used without the power adaptor cord.

3 Stage Charging Indicator

- Blinking green signals low battery.
- Solid green signal during charging.
- Light will turn off at full charge.

 
 
Worldwide Voltage

Shaver automatically adapts to an outlet voltage between 100V and 240V.

CHARGING

Before using, read the important safety instructions in front of the manual.

1. Plug power adaptor into shaver. (Diagram A)
2. Plug adaptor into wall outlet. (Diagram B)
3. For charge times, see full charge time for your model.
4. Use shaver until recharge is required.

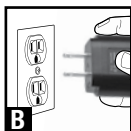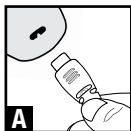


CAUTION!



- Make sure the shaver and your hands are dry when charging the shaver.
- Always charge the shaver in a cool, dry place.

SHAVING

 1. Press power button to turn on. (Diagram C)
2. Shave face and neck using short, circular strokes. (Diagram D)
3. Use light pressure against your skin.
4. Using other hand to pull skin taut will help low lying hairs to stand up and enter the cutters more easily.

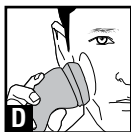

TRIM

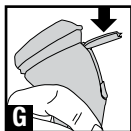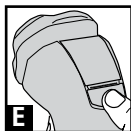  

1. Press trimmer release button to engage trimmer. (Diagram E)
2. Trim long, difficult hairs and side burns. (Diagram F)
3. Close trimmer by pressing down. (Diagram G)

STUBBLE

To achieve a stubble look instead of a clean shave, affix the Stubble attachment over the cutter assembly and shave as usual.

SHAVING TIPS WITH GEL OR FOAM (IN SHOWER OR OVER THE SINK)

NOTE: In order to ensure optimal performance, thoroughly rinse the shaver head under water during and after shaving.

 
 
 
 
1. Apply water to face and neck area.
2. Apply shave gel or foam to applicable shaving area.
3. Rinse shaver head under water.
4. Shave face and neck using short, circular strokes.
5. Throughout the shave, regularly rinse shaver head under water to avoid residue build up.
6. When finished shaving, rinse face.
7. Thoroughly rinse shaver head of all gel or foam.
8. Follow cleaning and care instructions.

CLEANING AND CARE

NOTE: When cleaning your shaver, make sure the shaver is turned off and disconnected from the power cord.

CAUTION!

- To clean the external surfaces of the shaver, use a damp cloth. Do not use strong detergents or other chemicals.
- To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.

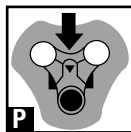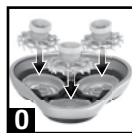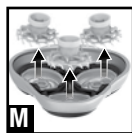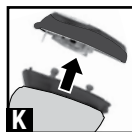

Daily:

1. Pull off Stubble attachment/Head guard, if using, and rinse attachment.
2. Press the release button on front of shaver and open head assembly. (Diagram H)
3. Tap out excess hair shavings. (Diagram I)
4. Rinse the head of the shaver in running water.
NEVER submerge the shaver in water!
5. Leave head open for drying.
6. Snap head closed before using the shaver again. (Diagram J)
7. Reattach Stubble attachment/Head guard to protect shaving head until next use.

Weekly:

1. Perform the daily cleaning steps 1 and 2.
2. Remove the cover from the hair pocket assembly. (Diagram K) Place the body of the shaver aside to ensure that it will not get wet.
3. Slide the blue inner cutter carrier down to release it from the assembly. (Diagram L)
4. Remove the inner cutter carrier away from the cutters.
5. Remove the cutters. (Diagram M)
6. Thoroughly rinse away any debris from inner and outer cutters. (Diagram N)
7. Replace the inner cutters. Match the hub colors of the inner and outer cutters (Diagram O)
8. Place the inner cutter carrier back into position and lock into place. (Diagram P)
9. Lubricate each cutter with household oil.
10. Align the spring hinge into the slot at the back of the hair pocket and press into place. Snap the head assembly closed. (Diagram J)

Trimmer: Lubricate teeth with oil every six months.

It is very important to replace your head and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 12 months. Here are some signs of head and cutter wear, indicating that replacement is needed:

- **Irritation:** As the heads get excessively worn you may experience some skin irritation. This would be especially noticeable when you apply moisturizing lotion.
- **Pulling:** When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace your heads and cutters.

PRODUCT DISPOSAL

When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver and be recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the shaver with the batteries.

To Remove the Rechargeable Battery:

1. Unplug the shaver.
2. Run shaver until motor stops.

3. Remove head from shaver (Press release button and pull head straight away from shaver body)
4. Using a small screwdriver pry front cover from shaver body.
5. Remove five screws located on front of shaver.
6. Remove rear cover from inner housing to expose batteries.
7. Pry batteries free from circuit board and cut wires.
8. Dispose of batteries.

This device uses the following types of rechargeable batteries: nickel metal hydride (NiMH).

DISPOSAL/RECYCLING

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.



Suitable for use in bath and shower.

This product conforms to radio frequency interference requirements
Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

5 YEAR WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of five (5) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge. **Blades, heads and cutters are not included in the lifetime warranty.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON®
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

☎Australia 1800 623 118 (toll free)

☎New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2021 Spectrum Brands Inc.

Type: R27A

Rev. 12/21

Part No. T22-7002638



PLEASE
RECYCLE