

IMPORTANT SAFETY INSTRUCTIONS FOR THE TRIMMERS

When using appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- To prevent accidents keep the appliance away from your eyelashes as well as clothes, brushes and wire.
- Always remember to turn on the trimmer before you insert it into your nose or ear to avoid painfully snagging hairs.
- Never insert the trimmer more than 6mm (1/4") into your nose or ear. Foreign objects should not come into contact with your ear drum.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance. Cleaning and use maintenance shall not be made by children without supervision.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this appliance.
- Do not use the trimmers with damaged or broken cutters, as injury may occur.
- Always store the appliances in a moisture-free area. Do not store it in temperatures exceeding 60°C (140°F).
- Do not disassemble the detail trimmer cutter assembly.
- Do not submerge the units in water as damage will occur.
- This appliance is for household use only.

SAVE THESE INSTRUCTIONS

R2200AU PRECISION SHAVER PACK

USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® Precision Shaver Pack. Inside this manual you will find tips on using and caring for your Detail Trimmer and Nose & Ear Trimmer.

Detail Trimmer



Nose & Ear Trimmer



KEY PARTS

Detail Trimmer

1. Detail Trimmer Head Attachment
2. On/Off Switch
3. Battery Compartment

Nose & Ear

4. Linear Head Attachment
5. On/Off Switch
6. Battery Compartment

ABOUT YOUR DETAIL TRIMMER

Inserting The Battery

Your Remington® Precision Shaver Pack detail trimmer is powered by one “AA” alkaline battery (not included).

1. To open the battery compartment, turn the base of the unit approximately 1cm clockwise and pull it off.
2. Insert the battery into the unit, positive end first.
3. Replace the base and turn it 1cm anti-clockwise to lock it in place.

Battery cautions

- Using non-alkaline batteries will impair the unit's operating performance.
- The battery should not be left in the unit if it is not in use for long periods.
- To prevent battery corrosion, the unit should be stored in a dry environment.
- Dead batteries should be removed immediately and disposed of properly.
- Do not use rechargeable batteries with this appliance. The lower voltage in rechargeable batteries impairs the performance of the cutting unit.

HOW TO USE

To trim sideburns

1. Turn the trimmer on.
2. Gently guide the cutting unit to your sideburns holding the unit horizontally at a 90 degree angle to the sideburns.
3. Trim the sideburns moving the trimmer slowly and carefully, to ensure that you do not accidentally cut hairs that you do not intend to trim.

Note: It is not recommended that you use the trimmer to define or trim the eyebrows.

CLEANING & MAINTENANCE

Both your detail trimmer and nose & ear trimmer are designed to give you years of comfortable use. To ensure that you get optimal performance from your trimmers, follow these simple cleaning and lubricating tips:

- After each use, brush or blow accumulated hair from the cutting units.

Rinsing Your Trimmer

- The head of your detail trimmer is washable and can be rinsed with cool or warm water. Simply twist the attachment head 1cm anticlockwise, remove the head and rinse it under the tap - do not use hot water. Do not allow water into the body of the handpiece.
- Afterward, shake excess water from the cutter head.
- Replace the head in the same position as it was removed, turning it 1cm clockwise until it locks into place.

Lubricating the Cutters

- After rinsing the attachment heads, apply a drop or two of lubricating oil or sewing machine oil to the cutting teeth &/or blades (nose & ear trimmer).
- Don't apply too much oil, or it may spray.
- Finally, point the trimmer down and away from you, and turn it on. This spreads the oil evenly and expels any excess.

ABOUT YOUR NOSE & EAR TRIMMER

Inserting The Battery

Your Remington® nose & ear trimmer runs on one “AA” alkaline battery (not included).

1. To open the battery compartment, turn the base of the unit approximately 1cm counter-clockwise and pull it off.
2. Insert the battery into the unit, positive end first.
3. Replace the base and turn it 1cm clockwise to lock it into place.

Battery cautions

- Use of non-alkaline batteries will impair the unit's operating performance.
- The battery should not be left in the unit if the unit is not in use for long periods.
- To prevent battery corrosion, the unit should be stored in a dry environment.
- Dead batteries should be removed immediately and disposed of properly.
- Do not use rechargeable batteries with this appliance. The lower voltage in rechargeable batteries impairs the performance of the cutting unit.

HOW TO USE

Turning On Your Nose & Ear Trimmer

The on/off switch is integrated into the battery cap.

1. Rotate the battery cap clockwise to turn on.
2. To turn off, simply rotate the battery cap, counter-clockwise, back to the off position.

Note: Always remember to turn on the trimmer before you insert it into your nose or ear to avoid painfully snagging hairs.

To remove hair from the nose

1. Turn the trimmer on.
2. Insert the trimmer's cutting unit gently into the nostril.
3. Rotate the trimmer in a circular motion around the opening of the nostril.
4. For best cutting efficiency, gently move trimmer in and out of the nostril as you rotate the trimmer.
5. Do not insert the trimmer more than 6mm into your nostril.

To remove hair from the ear

1. Turn the trimmer on.
2. Insert the trimmer's cutting unit gently into the outer ear canal opening.
3. Gently rotate the trimmer in a circular motion.
4. To trim hairs protruding from the surface of the area surrounding the outer ear canal, guide the trimmer around the edge of the ear.
5. Avoid inserting the trimmer more than 6mm into your ear canal.

Note: Do not apply excessive pressure as this damages the trimmer and may cause skin injury.

CLEANING & MAINTENANCE

Your Nose & Ear trimmer is designed to give you years of comfortable use. To ensure that you get optimal performance from your trimmer, follow these simple cleaning and lubricating tips:

- After each use, brush or blow accumulated hair from the cutting unit.

Rinsing Your Trimmer

- Your Remington® Nose & Ear trimmer can be rinsed with cool or warm water. Just hold the unit's head under the tap - it is not necessary to remove the head first. Do not use hot water.
- If the trimmer needs additional cleaning, the cutting head can be removed by turning it 1cm counter-clockwise and pulling it off. Then blow out the accumulated hair or rinse it more thoroughly under running water.
- Afterward, shake excess water from the cutter head, making sure that all parts are held together.
- Replace the head in the same position as it was removed, turning it 1cm clockwise until it locks into place.

Lubricating The Cutters

- After rinsing the unit, apply a drop or two of mineral oil or baby oil to the cutting teeth.
- Don't apply too much oil, or it may spray.
- Finally, point the trimmer down and away from you, and turn it on. This spreads the oil evenly and expels any excess.



THIS PRODUCT IS NOT SUITABLE TO USE IN THE BATH OR SHOWER.

This product conforms to radio frequency interference requirements

Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON®
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

①Australia 1800 623 118 (toll free)

②New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2019 Spectrum Brands Inc.

Rev. 07/19

Part No. T22-7001033



REMINGTON®

EST. NEW YORK 1937

PRECISION SHAVER PACK

USE & CARE
MANUAL

PLEASE READ
PRIOR TO USE



To register your product go to
www.remington-products.com.au
www.remington.co.nz

2 YEAR WARRANTY

R2200AU

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING

For additional protection, the installation of a residual current device (rCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

WARNING - TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS

DANGER - As with most electrical appliances, electrical parts are electrically live even when the switch is off.

- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and the power cord away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of the appliance is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. It cannot be repaired. Keep the cord away from heated surfaces.
- Charge, use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use this appliance with damaged or broken tracks or cutters, as injury may occur.
- For use on facial hair only. Not intended for shaving the hair on your head.
- Do not plug or unplug the appliance with wet hands.
- For household use only.
- Do not place or store the appliance or charging adaptor where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid.
- If an appliance falls into water, "unplug it" immediately. Do not reach into the water.
- Unplug the charging adaptor from the electrical outlet immediately after fully charging.
- Do not use while bathing or in the shower.
- Unplug and switch off this appliance before cleaning it.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Always store the charging adaptor in a moisture-free location.
- Do not use on people who are asleep.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.

Remington strongly recommends that an approved Safety Switch (Residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

SAVE THESE INSTRUCTIONS

R2200AU PRECISION SHAVER PACK

USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your Remington® Precision Shaver Pack. Inside this manual you will find tips on using and caring for your shaver.



KEY PARTS

- | | |
|-------------------------------|---------------------------|
| 1. Shaving Heads | 6. Power Port (not shown) |
| 2. Hair Pocket Release Button | Also Includes: |
| 3. Pop-up Trimmer (not shown) | • Head Guard |
| 4. On/Off Switch | • Cleaning Brush |
| 5. Charging Indicator Light | • Power Adaptor |

ABOUT YOUR SHAVER

SPECIFICATIONS	
Power System	Cordless (Rechargeable)
Initial Charge Time	24 Hours
Full Charge Time	16 Hours
Run Time	30 Minutes
Indicators	Charging Indicator
Voltage Type (adaptor voltage type)	Worldwide 100-240V

Power System: Cordless - shaver can only be used without the power cord. The shaver will not run while it is charging.

Voltage type: Worldwide Voltage - shaver automatically adapts to an outlet voltage between 100V and 240V

NOTE: Some countries will require the use of a plug adaptor that is not included with your shaver.

CHARGING

- Before using your shaver for the first time, charge it for 24 hours. Note during this charge ignore the electronic indicators as they are in “start-up cycle”.
- Plug the adaptor into your shaver and then plug the charging adaptor unit into a domestic power outlet. Check to ensure that the shaver is OFF. The Charging Indicator Light will illuminate to indicate that it is charging. When the battery is full the Charging Indicator will remain illuminated until disconnected from the power outlet.
- The batteries cannot be overcharged, but it is recommend that charging be discontinued and the shaver stored away if it will not be used for an extended period of time (2-3 months).
- The shaver will be fully charged in 16 hours.
- To preserve the life of the batteries, discharge them by running the shaver until the shaver turns off. Do this every 6 months.
- Use the shaver only with the charging adaptor supplied.

SHAVING TIPS

- Always hold the shaver at a right angle to the skin so that all three heads are touching the skin with equal pressure

- Stretch skin with the free hand so hairs stand upright, making it easier for them to enter the cutting chamber.
- Use moderate to slow, circular stroking movement. The use of short, circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- Do not press hard against the skin to avoid skin irritation and/or damage to the rotary heads.

NOTE: As with every shaver, your shave will improve over time. Allow up to four weeks of daily shaving to develop an effective shaving style and for your skin to adjust to the new shaver. The adaptation period might take a little longer if your skin is sensitive, if you are switching from a different method of shaving, or if you alternate between shaving methods.

CLEANING & MAINTENANCE

DAILY CLEANING

1. Open the shaver head by pressing the release button on the front of the shaver (Fig. A) and flipping open the head away from the body of the shaver (Fig. B).
2. Tap out excess hair shavings.
3. Rinse the head of the shaver in running water.

CAUTION: Never submerge the shaver body in water.

4. Close the head assembly.

MONTHLY CLEANING

 
 
 
 
 
 
 
- Perform cleaning steps 1 and 2.
- Hold the shaver upside down so that the open cutter assembly is facing towards you. Slide the blue cutter support frame upwards towards the shaver to release it from the assembly (Fig. C).
- Pull the cutter support frame away from the inner cutters (Fig. D).
- Thoroughly brush hairs from the inner and outer cutters. Rinse out remaining debris (Fig. E).
- Place the cutter support frame back into position and lock into place (Fig. F-G).
- Align the spring hinge into the slot at the back.

WARNING

- Detach the shaver from the power cord before cleaning with water
- Only the shaver head is suitable for rinsing under the tap.

CAUTION

- Do not submerge the entire appliance in water as damage may occur.
- Shaver heads can be rinsed with water. The water temperature should not exceed 70 degrees. Unplug the shaver before cleaning with water.
- Keep the power adaptor dry.

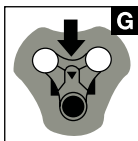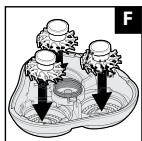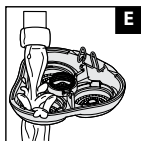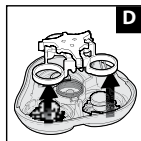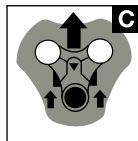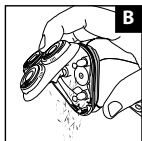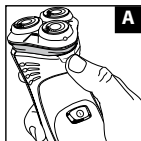

POP UP TRIMMER

Lubricate teeth with oil every six months.

BATTERY REMOVAL FOR DISPOSAL ONLY

Note: The battery is not intended to be removed or replaced under normal use. The only time the battery should be removed or the unit opened or disassembled, is at the end of the product's useful life before it is discarded.

- The R2200AU contains a nickel metal hydride battery. Once the shaver has reached the end of its life, to ensure proper disposal of the product, please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.
- For more information about recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

Caution: Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns.

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day
Warranty.

REPLACING THE HEAD & CUTTERS

It is very important to replace your shaving heads and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 12 months. Here are some signs of head and cutter wear, indicating that replacement is needed:

- **Irritation:** As the heads get excessively worn you may experience some skin irritation. This would be especially noticeable when you apply moisturizing lotion.
- **Pulling:** When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace your heads and cutters.

Replacement head & cutters may be obtained from Remington®. Your order can be processed over the phone via the Remington® Service Hotline - refer to page 18.

MONEY BACK OFFER – AUSTRALIA / NEW ZEALAND ONLY

If within 60 days you are not fully satisfied with your Remington® shaver, just return the shaver with this completed coupon and a copy of your Australian/New Zealand purchase receipt to Remington®. In return, we will send you a cheque for the full purchase price of the shaver. Please allow 6-8 weeks for your cheque to arrive.

Name:

Address:

City:

State: Postcode: DOB:

Contact No: Area Code: Ph:

Product Model number:

Is this the first Remington shaver you have owned/purchased? Yes ☐ No ☐

Why are you returning this shaver?

Skin Irritation ☐ Shave is not close enough ☐ Prefer a rotary/foil shaver ☐

Other:

REMINGTON®
EST. NEW YORK 1937

Spectrum Brands Australia Pty Ltd

Locked Bag 3004
Braeside, VIC 3195
AUSTRALIA

Customer service in Australia: 1800 623 118
E-mail: consumer.enquiry@remington-products.com.au
Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817
Newmarket, Auckland 1149
NEW ZEALAND

Customer service in New Zealand: 0800 736 776
E-mail: info@remington.co.nz
Website: www.remington.co.nz