

REMINGTON®

**360°
Pivot &
Flex
Technology**

R5150AU

 


2 YEAR WARRANTY

Use and Care Instruction Manual

PLEASE READ PRIOR TO USE

Product Features

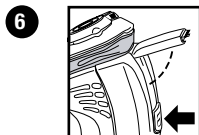

SHAVER PARTS

- | | |
|------------------------------------|-------------------|
| 1. Pivoting head & cutter assembly | 8. Power cord |
| 2. Head release button | 9. Cleaning brush |
| 3. Individual flexing heads | |
| 4. On/Off push button | |
| 5. Power port | |
| 6. Trimmer button | |
| 7. Head guard | |

About Your Shaver

Pivot & Flex Technology

FEATURE	R5150AU
POWER SYSTEM	cord/ cordless
FULL CHARGE TIME	90 min
CORDLESS SHAVE TIME	30 min
QUICK CHARGE	yes
INDICATORS	fuel gauge
VOLTAGE TYPE	worldwide
REPLACEMENT PART NO.	SP-5161AH

Power System

Cord/Cordless – shaver can be used with or without the power cord.

Quick Charge

Shaver will charge long enough for one shave in 5 minutes.

Indicators

Fuel Gauge – displays the amount of battery remaining, including low battery.



Fuel Gauge

Voltage Type

Worldwide Voltage – shaver automatically adapts to an outlet voltage between 100V and 240V.

Adjusting To Your Shaver

 
As with every shaver, your shave will improve over time. Allow up to four weeks of daily shaving to develop an effective shaving style and for your skin to adjust to the new shaver. The adaptation period may take a little longer if your skin is sensitive, if you are switching from a different method of shaving, or if you alternate between shaving methods.

Removing The Protective Head Guard

Before operating your shaver, remove the protective head guard, which protects the head and cutter assembly. It is important to remove it correctly to avoid damaging the clips that hold it to the shaver.

1. Press lightly on the top of the protective head guard.
2. Lift the lower rear edge.
3. Pull the protective head guard away from the shaver. When the shaver is not in use, always keep the protective head guard on the shaver head and keep the trimmer in the OFF position.

Charging

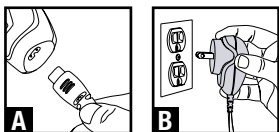



Before using, read the important safety instructions in front of the manual.

1. Plug power adaptor into shaver. (Diagram A)
2. Plug power adaptor into wall outlet. (Diagram B)
3. Charge shaver for duration specified on page 3. **Note:** During initial charge ignore the electronic indicators as they are in "start up cycle".
4. Use shaver until recharge is required. To preserve the life of the batteries, allow the shaver to fully discharge every six months, and then recharge the shaver for a full 24hrs.

CAUTION!

- Make sure the shaver and your hands are dry when charging the shaver.
- Always charge the shaver in a cool, dry place.

  Shaving

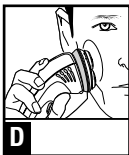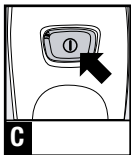

Before using, read the important safety instructions in this manual.


1. Press the On/Off button to activate for shaving (Diagram C).
2. Hold the shaver so that all the heads touch your face together (Diagram D). This allows the shaver to work the way it was designed for the closest shave and minimum wear. Avoid holding the shaver at an angle so that only one head touches the skin.
Use short, circular strokes. Use your free hand to stretch your skin. This encourages your whiskers to stand out, making it easier for them to enter the cutting chamber.
Never press hard when shaving. Pressing hard only flattens the whiskers, which makes it harder for them to enter the cutting chamber. It will also cause the cutting surface to wear out more quickly.
3. Press the On/Off button to turn the shaver off (Diagram C).

Shaving Tips

- Ensure your skin is dry and free of skin oils.
- Wait at least 15 minutes after getting up before shaving, to ensure your face is free of puffiness that may be present from sleeping.
- Always hold the shaver at a right angle to the skin so that all three heads are touching the skin with equal pressure.
- Stretch skin with the free hand so hairs stand upright, making it easier for them to enter the cutting chamber.
- Use moderate to slow, circular stroking movement.
- The use of short, circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- Do not press hard against the skin to avoid skin irritation and/or damage to the rotary heads.

****Remington recommends that you use your new shaver daily for up to four weeks to allow time for your hair and skin to become accustomed to the new shaving system****

 Trim

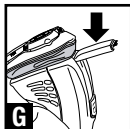

To use the pop-up trimmer, hold the shaver as shown in Diagram E, and simply pull the trimmer release button down to engage the trimmer. The trimmer will pop up, ready for use. To conserve battery power, it is recommended to use the trimmer only when needed for trimming. When you have finished trimming, push the trimmer downward to lock it into the off position (Diagram G).

To Trim Sideburns

Simply touch the edge of the trimmer to the desired line for neat clean sideburns (Diagram F).

To Trim Moustache

Hold the shaver at the desired trim line for a quick, easy and professional trim. The trimmer can also be used to trim the upper edge of your moustache.

Cleaning & Care



 
 
 
 
 
 
The shaver is a washable appliance. The head assembly part may be cleaned under warm water.

NOTE: **When cleaning your shaver, make sure the shaver is turned off and disconnected from the power cord.**

CAUTION!

- To clean the external surfaces of the shaver, use a damp cloth. Do not use strong detergents or other chemicals.
- To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.
- The shaver should not be used until it has dried.
- Do not remove or replace the head assembly while the shaver is running or plugged into an electrical outlet, as it may cause damage to the shaver's cutters.

- Cover the shaver heads with the protective head guard between uses. When removing the head guard or placing it back onto the shaver, do not apply pressure to the floating cutter surfaces, as you damage them.
- Never submerge the shaver completely under water.

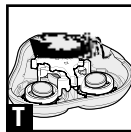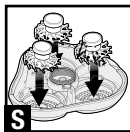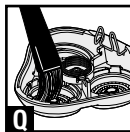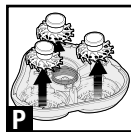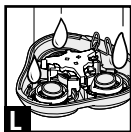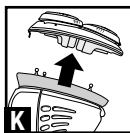

Daily:

1. Press the release button on front of shaver and open head assembly. (Diagram H)
2. Tap out excess hair shavings. (Diagram I)
3. Rinse the head of the shaver in running water.
NEVER submerge the shaver in water!
4. Close head assembly. (Diagram J)

Monthly:

1. Perform the daily cleaning steps 1 and 2.
2. Remove the cover from the hair pocket assembly. (Diagram K) Place the body of the shaver aside to ensure that it will not get wet.
3. Place a drop of liquid soap on each cutter. (Diagram L)
4. Brush the soap around vigorously using the supplied cleaning brush. (Diagram M)
5. Release the inner cutter carrier by rotating the locking arms counter-clockwise. (Diagram N)
6. Remove the inner cutter carrier away from the cutters. (Diagram O)
7. Remove the cutters. (Diagram P)
8. Thoroughly brush any hair off of the inner and outer cutters (Diagram Q) and rinse away any soap and debris from inner and outer cutters. (Diagram R)
9. Replace the inner cutters. (Diagram S)
10. Place the inner cutter carrier back into position and lock into place by rotating the locking arms clockwise until they snap into place. (Diagram T)
11. Lubricate each cutter with household oil.
12. Close the head assembly. (Diagram J)

**** Trimmer:** Lubricate teeth with oil every six months

Lubricate

Remington® Shaver Saver (SP-4) lubricates and cleans your shaver's cutters and head assembly. The lubricant helps remove hair clippings while reducing wear. Spray on the heads and cutters after each shave to keep your shaver operating at peak performance.

Replacing Your Heads & Cutters

Please refer to the shaver comparison and features chart near the front of this manual that lists the correct replacement part number for your shaver.

It is very important to replace your head and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 6 months. Here are some signs of head and cutter wear, indicating that replacement is needed:

- **Irritation:** As the heads get excessively worn you may experience some skin irritation. This would be especially noticeable when you apply moisturizing lotion.
- **Pulling:** When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace your heads and cutters.

IMPORTANT SAFETY INSTRUCTIONS

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS:

When using an electrical appliance, basic precautions should always be observed, including the following. **Read all instructions before using this shaver.**

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Use only when the shaver is in dry condition.
- Do not submerge in water.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children, or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug or if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any of the appliance's openings.
- Household use only.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not plug or unplug this appliance when your hands are wet.
- Do not wrap the cord around the appliance.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not use this appliance with a damaged or broken head or cutters, as facial injury may occur.

Remington strongly recommends that an approved Safety Switch (residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.

SAVE THESE INSTRUCTIONS



This product is not suitable for use in a bath or shower.

Money Back Offer - Australia/New Zealand Only

If within 30 days you are not fully satisfied with your Remington® shaver, just return the shaver with this completed coupon and a copy of your Australian/New Zealand purchase receipt to Remington®. In return, we will send you a cheque for the full purchase price of the shaver. Please allow 6-8 weeks for your cheque to arrive.

Name: _____

Address: _____

City: _____

State: _____

Postcode: _____

This product conforms to radio frequency interference requirements.

Warranty information can be found in the enclosed warranty card.

Any product purchased and used commercially carries a limited 90 Day Warranty

® Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

© 2015 Spectrum Brands Inc.

REMINGTON®

www.remington-products.com.au

REMINGTON SERVICE HOT LINE

Australia ☎1800 623 118 (toll free)

Remington Products Australia Pty Ltd.

Locked Bag 3004

Braeside, VIC 3195 Australia

Customer service in Australia: 1800 623 118

E-mail:

consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

New Zealand ☎0800 736 776 (toll free)

Remington Products New Zealand Ltd

PO Box 9817

Newmarket, Auckland 1149 New Zealand

Customer service in New Zealand: 0800 736 776

E-mail:

info@remington.co.nz

Website: www.remington.co.nz

Part No T22-31679

REV 05/15

