

# REMINGTON®

EST. NEW YORK 1937

## KERATIN & ARGAN OIL NOURISH STRAIGHTENER



**USE & CARE  
MANUAL**

PLEASE READ  
PRIOR TO USE

To register your product go to  
[www.remington-products.com.au](http://www.remington-products.com.au)  
[www.remington.co.nz](http://www.remington.co.nz)

**3 YEAR WARRANTY**

**S7505AU**

## **IMPORTANT SAFEGUARDS**

**Warning: When the straightener is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the straightener is switched off.**

**When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:**

**READ ALL INSTRUCTIONS BEFORE USING**

**KEEP AWAY FROM WATER**

**DANGER – As with most electrical appliances, electrical parts are electrically live even when the switch is off.**

To reduce the risk of death by electric shock:

- Always unplug it immediately after using.
- Do not place or store an appliance where it can fall or be pulled into a bath or sink.
- Do not use while bathing.
- Do not place or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately.  
Do not reach into the water.

For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrical contractor for advice.

**WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, and FIRE, OR INJURY TO PERSONS.**

- Your straightener should never be left unattended when plugged in to a power outlet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Keep the appliance and the power cord away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.

- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agents or similarly qualified persons in order to avoid a hazard.
- Do not use on people who are asleep.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or where aerosol (spray) products are being used or where oxygen is being administered.
- The plates will be very hot during use. Do not let bare skin touch heated surfaces.
- Do not place the heated straightener on any soft surface such as a bed, carpet or a towel. Place only on a hard, flat, heat resistant surface.

## **SAVE THESE INSTRUCTIONS**

## **S7505AU KERATIN & ARGAN OIL NOURISH STRAIGHTENER USE & CARE INSTRUCTION MANUAL**

Thank you for purchasing your new and upgraded Remington® Keratin & Argan Oil Nourish Straightener. The advanced ceramic coated plates infused with Keratin & Argan Oil leave your hair looking and feeling healthy with brilliant shine and super straight results.



### **KEY PARTS**

- |   |                                  |
|---|----------------------------------|
| 1. Advanced ceramic coating infused with Keratin & Argan Oil - 110mm plates | 4. - Temperature decrease button |
| 2. Digital temperature display  | 5. On/off button                 |
| 3. + Temperature increase button  | 6. Hinge lock                    |
|   | 7. Salon swivel cord             |

## **BASIC HAIR CARE INSTRUCTIONS**

For optimal results, shampoo and condition your hair prior to straightening, then dry your hair thoroughly and make sure that it is tangle free.

Note: The Keratin & Argan Oil Nourish Straightener is not suitable for use on synthetic wigs or hair extensions.

## **WHAT IS ARGAN OIL?**

Argan Oil is an organic hair treatment found in the nut of the Moroccan Argan tree. It is known to nourish the hair from the inside out.

## **WHAT IS KERATIN?**

Keratin is a naturally occurring protein found in your hair. Remington uses biotechnological Keratin that has the same Keratin structure as human hair proven to restore & repair your hair and enhance shine.

## **HOW DOES IT WORK?**

The micro conditioners rise to the surface of the straightener plates when heated and transfer to your hair during styling, leaving your hair looking and feeling healthy, with brilliant shine and super straight results.

## **TURBO BOOST FUNCTION**

The Keratin & Argan Oil Nourish Straightener features a turbo boost function which will automatically select the highest temperature of 230°C. To operate the turbo boost function press and hold the '+' temperature increase button for 2 seconds.

## **TEMPERATURE LOCK**

The Keratin & Argan Oil Nourish Straightener has a temperature lock to prevent the selected temperature from being accidentally altered during use. When the selected temperature has been reached, simply press and hold the '-' temperature decrease button for 2 seconds. This will lock the current heat setting and a padlock icon will appear on the digital display.

To unlock the temperature lock, simply press and hold the '-' temperature button for 2 seconds.

## **AUTOMATIC SAFETY SHUT OFF**

If the straightener is not used for a period of 60 minutes (temperature is constant) it will automatically shut off.

## **AUTOMATIC WORLDWIDE VOLTAGE**

The Keratin & Argan Oil Nourish Straightener features automatic voltage adjustment for international use. Plug the unit into any domestic power outlet and it will adjust automatically to the voltage being supplied.

NOTE: Some countries will require the use of a plug adaptor that is not included with your straightener.

## **HINGE LOCK**

Safely store your straightener with the plates locked together.

To lock, slide the switch towards the straightener. To unlock, slide the switch towards the cord.

NOTE: Do not heat the straightener in the locked position.

## **HOW TO USE YOUR REMINGTON® KERATIN & ARGAN OIL NOURISH STRAIGHTENER**

Carefully place the straightener on a flat, hard, heat resistant surface ensuring the sides of the plates do not come into contact with the surface.

Plug in to any household (120/240V AC) power outlet. Press the on/off button.

The digital temperature display will flash indicating that the straightener is heating. When the temperature of the plates has reached the temperature selected the LED indicator light will remain steady. Press the “+” temperature increase button to increase the temperature. Press the “-” to decrease the temperature. The lowest temperature setting is 150°C, and the highest temperature setting is 230°C. The straightener will be ready to use in 30 seconds depending on the temperature selected.

Take extra care when using the straightener, as it can get very hot. It is important to establish the correct temperature for your hair type prior to use to prevent damage to your hair. If in doubt, start with a low temperature setting first using the variable temperature button and increase the heat gradually.

## **RECOMMENDED TEMPERATURES**

<b>Temperature</b>	<b>Hair type</b>
150°C - 170°C	A short bar will be displayed in the right hand corner of the digital display window. Suitable for fine hair.
180°C - 200°C	2 bars will be displayed in the right hand corner of the digital display window. Suitable for medium hair.
210°C - 230°C	3 bars will be displayed in the right hand corner of the digital display window. Suitable for thick hair.

## **TO STRAIGHTEN YOUR HAIR**

- Ensure your hair is completely dry.
- To make styling easier, part the hair either in the middle or to the side and use clips to section your hair; top, sides and back.
- You may need to comb through your hair before straightening to ensure that it is tangle free.
- Start at the nape of the neck and straighten the underneath sections of hair first. When the underneath sections of hair are complete, move to the next layers, finishing with the hair around the part line.
- Take about a 5cm section of hair and pull taut and down and away from the scalp. Holding the straightener with the other hand, start at the roots and clamp the hair firmly between the plates.
- Firmly holding the plates together, run the straightener down through the entire length of the section of hair from roots to ends, in one smooth stroke.
- Repeat until the desired amount of straightening has been achieved.

## **TO CURL YOUR HAIR**

- Section your hair as above.
- Take about a 5cm section of hair and firmly grip it between the plates, close to the roots.  
Note: The smaller the section the tighter the curl.
- Keeping tension firm gently rotate the straightener 180° whilst pulling through the length of the hair section.
- Make sure to keep rotating the straightener.
- Remove the straightener and holding the hair length, allow the curl to spring into shape.

## MAINTENANCE

This straightener is designed for household use and is virtually maintenance free. If cleaning becomes necessary, disconnect the unit from the power outlet, allow it to cool, and then wipe the exterior surface and the plates with a soft damp cloth. Do not immerse the unit in any liquid. Do not use an abrasive cleaning fluid or material to clean the ceramic coated plates as this will scratch the surface.

## STORAGE

When not in use, always unplug the straightener from the power outlet. Allow the straightener to cool and store out of the reach of children in a safe dry place. Never wrap the power cord around the straightener since this will cause the cord to wear prematurely and break. Handle the cord carefully for long life and avoid jerking, twisting or straining especially at the plug connections. If the cord becomes twisted in use, periodically straighten it.



**WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**

**As with all electrical appliances, the power cord must be regularly checked for wear and tear. Immediately cease using this product if the power cord shows any signs of damage.**

This product conforms to radio frequency interference requirements.  
Any product purchased and used commercially carries a limited 90 Day Warranty.



# Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

## WARRANTY AGAINST DEFECTS

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We or us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of three (3) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

### Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

#### **Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

#### **Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)

**REMINGTON®**  
EST. NEW YORK 1937

#### **REMINGTON SERVICE HOTLINE**

①Australia 1800 623 118 (toll free)

②New Zealand 0800 736 776 (toll free)

#### **AUTHORISED REPAIR CENTRES**

Visit [www.remington-products.com.au](http://www.remington-products.com.au) for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

©2019 Spectrum Brands Inc.

Rev. 01/19

Part No. T22-7000221-B

Type: S6500

