

REMINGTON®

EST. NEW YORK 1937

BODY & BIKINI KIT

**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE



To register your product go to
www.remington-products.com.au
www.remington.co.nz

2 YEAR WARRANTY

WPG4021AU

IMPORTANT SAFETY INSTRUCTIONS

When using appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- Always store your trimmer in a moisture-free area.
- Only use the parts supplied with this appliance.
- Use of non Remington® parts with this product may give rise to a hazardous condition.
- Use this shaver only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Ensure that the trimmer is switched off when cleaning.
- Keep away from flammable materials.
- To prevent accidents keep the appliance away from hair on your head, your eyelashes as well as clothes, brushes and wire.
- Never drop or insert any object into any opening of this appliance.
- Do not use on people who are asleep.
- Do not use this shaver with a damaged or broken cutting foils or cutters, as injury may occur.
- For household use only.

SAVE THESE INSTRUCTIONS

WPG4021AU BODY & BIKINI KIT

USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® Body & Bikini Kit. Inside this manual you will find tips on using and caring for your trimmer.



KEY PARTS

- | | |
|--|--|
| 1. Precision Bikini Trimmer Attachment | 5. Shower Hook |
| 2. On/Off Switch | 6. Adjustable Length Comb (For Precision Bikini Trimmer) |
| 3. Trimmer Body | 7. Detail Trimmer Attachment |
| 4. Battery Compartment | 8. Mini Foil Shaver Attachment |

ABOUT YOUR TRIMMER

WPG4021AU SPECIFICATIONS

Power System	Cordless (battery operated)
Voltage Type	1x AA battery (included)

INSERTING BATTERIES

1. Your trimmer requires 1 'AA' alkaline battery. We recommend that you use alkaline batteries for optimal performance.
2. Make sure the product is switched off.
3. Rotate the battery compartment cap approximately $\frac{1}{4}$ turn counter-clockwise and pull.
4. Insert 1 'AA' alkaline battery, so that the (+) and (-) symbols on the battery align with the corresponding mark in the battery compartment.
5. Place cap back on unit using the alignment marks on the rear of the trimmer and rotate clockwise until the cap snaps into place.

Note: Your trimmer will not work if the battery is inserted incorrectly.

Note: Remove battery if the unit is not in use for long periods.

USAGE TIPS

- Skin should be free of lotions when using your trimmer.
- Your trimmer is suitable for bikini area, underarms and fine, downy hair. It can be used dry or in the shower.
- Do not submerge the shaver in water for long periods of time.
- Before using dry, make sure that the area is clean, dry and free from creams or oils.

HOW TO USE

Attachments



Your Body & Bikini Kit has four different attachments (including the adjustable length comb) to meet all your grooming needs. Just place the attachment on the trimmer body and turn it clockwise until the lock symbols align.

Precision Bikini Trimmer Plus Adjustable Length Comb Attachment

You can use the bikini trimmer on the outside of your bikini line or add the 3-position guide attachment for trimming inside your bikini line.

To attach the guide, simply slide it onto the trimmer as shown. (Diagram A)

To adjust the length, grip the sides of the guide, slide the guide off, adjust to align into desired slots and slide back into locked position. (Diagram B)

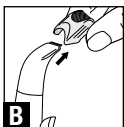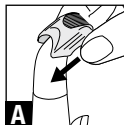

Position	Length
No Comb	0.8mm
1	2mm
2	4mm
3	6mm

NOTE: If you are trimming for the first time, start with the maximum trimming length setting.

Detail Trimmer

You can use this attachment for detail edging and shaping.

Mini Foil Shaver

You can use this attachment for smaller areas such as your bikini line, underarms or the fine, downy hair on your face. It is not designed to shave larger areas such as your legs. Use it dry, or use it wet with soap, foaming gel, or body wash if you prefer.

Hold the trimmer so the foil-shaver screen gently touches your skin. This allows the unit to work the way it was designed for the closest shave and minimum screen wear. Avoid holding the trimmer at an angle. This will distort the screen and may cause some skin irritation.

CLEANING, CARE & MAINTENANCE

Clean Your Trimmer Regularly

Cleaning Cautions:

- Do not use harsh or corrosive cleaners on the units or their cutters.
- Do not apply pressure or hard objects to cutters.
- Do not disassemble cutter assembly.
- There are no user serviceable parts.
- The handheld unit should be turned off before cleaning.

Cleaning With Water

Your trimmer attachments have rust-resistant, stainless-steel cutting blades that permit the cutting assemblies to be rinsed under running water if you choose.

- Remove all attachments by rotating them counter-clockwise to the unlock position and pulling the attachment off.
- Rinse the attachments under warm running water. Do NOT use hot water, which may cause damage to components.
- Rinsing the trimmer under water or using when in the shower may require lubricating the cutter blades periodically. Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with a fingertip. Wipe away all excess.

Cleaning the Foil Shaver

- Press the buttons at the ends of the screen head.
- Remove the head and shake out the clippings or rinse.
- Blow off the cutter assembly or rinse.
- Replace the head, making sure the unit snaps in place.



Suitable for use in bath and shower.

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON®
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

①Australia 1800 623 118 (toll free)

②New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2019 Spectrum Brands Inc.

Rev. 03/19

Part No. T22-0005204-B

Type: WPG4020

