

REMINGTON®

EST. NEW YORK 1937

ULTIMATE BODY & BIKINI KIT

**USE & CARE
MANUAL**

PLEASE READ
PRIOR TO USE



To register your product go to
www.remington-products.com.au
www.remington.co.nz

2 YEAR WARRANTY

WPG4031AU

IMPORTANT SAFETY INSTRUCTIONS

When using appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

WARNING - TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS

To reduce the risk of electric shock:

- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not use while bathing or in the shower if it is plugged in.
- This appliance is for household use only.
- This appliance should not be used by children or other persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and the charging cable away from the edge of table or countertops and out of reach of children and persons with reduced physical, sensory or mental capabilities.
- This appliance is not a toy. Children shall be supervised to ensure they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Keep the cord away from heated surfaces.

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Plug charger directly into outlet - do not use an extension cord.
- Unplug charger before plugging or unplugging appliance.
- Do not store it in temperatures exceeding 60°C (140°F).
- Do not plug or unplug this appliance when your hands are wet.
- Do not wrap the cord around the appliance.
- Always attach the plug to the appliance, then to the outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
- Detach removable power cords from appliances for storage.
- Never drop or insert any object into any of the appliance's openings.
- Always store the appliance and charging adaptor in a moisture-free location.
- Do not use this appliance with damaged or broken heads or cutters, as injury may occur.

SAVE THESE INSTRUCTIONS

WPG4031AU ULTIMATE BODY & BIKINI KIT

USE & CARE INSTRUCTION MANUAL

Thank you for purchasing your new Remington® Ultimate Body & Bikini Kit. Inside this manual you will find tips on using and caring for your trimmer.



KEY PARTS

- | | |
|----------------------------------------|----------------------------------------------------------|
| 1. Precision bikini trimmer attachment | (not shown) |
| 2. On/Off switch | 6. Adjustable length comb (for Precision bikini trimmer) |
| 3. Trimmer body | 7. Detail trimmer attachment |
| 4. Shower hook | 8. Mini foil shaver attachment |
| 5. Charging indicator light | 9. Exfoliating head attachment |

ABOUT YOUR TRIMMER

WPG4031AU SPECIFICATIONS	
Power System	Cordless (rechargeable)
Initial Charge Time	24 Hours
Full Charge Time	14-16 Hours
Run Time	30 Minutes
Indicators	LED Charging Indicator
Voltage Type	AC Adaptor - 220-240V

CHARGING

Always ensure that your hands, trimmer and mains adaptor are dry before charging. Before using your REMINGTON® trimmer for the first time charge for 24 hours. For subsequent uses, charge for 14-16 hours before use. One full charge allows 30 minutes of cordless usage time.

- Ensure the product is switched off and attach the mains adaptor to the trimmer.
- Connect the mains adaptor to the mains. The charging indicator will illuminate.
- Charge for the time indicated above.
- Use the product until the battery is low. This is indicated by the trimmer running distinctly slower.

Note: This product is for cordless use only. Do not use your trimmer whilst it is plugged into the mains.

Your trimmer cannot be overcharged. However, if the product is not going to be used for an extended time period (2-3 months), unplug it from the mains and store. Fully recharge your trimmer when you would like to use it again.

To preserve the life of your batteries, let them run out every 6 months then recharge for 14-16 hours.

Charging Cautions:

- Do not attach the mains adaptor to the mains with wet hands.
- Always charge the trimmer in a cool, dry place.
- Do not charge the trimmer in close proximity to water.
- The trimmer can be attached to an electrical outlet voltage of 220V – 240V.

USAGE TIPS

- Hairs should be free of lotions when using your trimmer.
- Never use trimmer with damaged or broken cutter units.
- Your trimmer is suitable for bikini area, underarms and fine, downy hair. It can be used dry or in the shower.
- Do not rinse with water hotter than 60°.
- Do not completely submerge the trimmer in water.
- Before using dry, make sure that the area is clean, dry and free from creams or oils.

HOW TO USE



Attachments

Your Body & Bikini Kit has five different attachments (including adjustable length comb) to meet all your grooming needs. Just place the attachment on the trimmer body and turn it clockwise until the lock symbols align.

Precision Bikini Trimmer plus Adjustable Length Comb Attachment

You can use the bikini trimmer on the outside of your bikini line or add the 3-position guide attachment for trimming inside your bikini line.

1. To attach the guide, simply slide it onto the trimmer as shown. (Diagram A)
2. To adjust the length, grip the sides of the guide, slide the guide off, adjust to align into desired slots and slide back into locked position. (Diagram B)

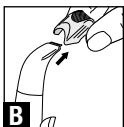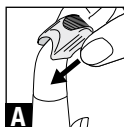

Position	Length
No Comb	0.8mm
1	2mm
2	4mm
3	6mm

Note: If you are trimming for the first time, start with the maximum trimming length setting.

Detail Trimmer

You can use this attachment for detail edging and shaping.

ACCESSORY ORDER FORM

Article	Part No.	Price each AUD	Price each NZD	Qty	Amount
Replacement exfoliator head for WPG4031AU	SPW-PGEAU	\$14.95 AUD	\$19.95 NZD		\$
IMPORTANT: Pricing in effect at time of publication, inclusive of GST. Subject to change without notice. Postage & handling \$7.50 standard for Australia & New Zealand.					
Sub Total					\$
Postage & handling					\$ 7.50
TOTAL					\$

**For help or to place an order on the phone
call Remington Customer Service:**

- ① Australia: 1800 623 118 (toll free)
- ② New Zealand: 0800 736 776 (toll free)

REMINGTON®
EST. NEW YORK 1937

Remington is a Registered Trademark
of Spectrum Brands, Inc., or one
of its subsidiaries.



MAIL YOUR ORDER FORM TO:

AUSTRALIAN RESIDENTS:

Spectrum Brands Australia Pty Ltd
Locked Bag 3004
Braeside, VIC 3195
Australia

NEW ZEALAND RESIDENTS:

Spectrum Brands New Zealand Pty Ltd
PO Box 9817
Newmarket, 1149, Auckland
New Zealand

Exfoliating Head

This attachment is designed to gently exfoliate to prevent ingrown hairs, while leaving skin feeling and looking smoother. Use in continuous a circular motion.

- Do not use near long hair, as the hair may become entangled in the spinning head.

Foil Shaver

You can use this attachment for smaller areas such as your bikini line, underarms or the fine, downy hair on your face. It is not designed to shave larger areas such as your legs. Use it dry, or use it wet with soap, foaming gel, or body wash if you prefer.

Hold the trimmer so the foil-shaver screen gently touches your skin. This allows the unit to work the way it was designed for the closest shave and minimum screen wear. Avoid holding the trimmer at an angle. This will distort the screen and may cause some skin irritation.

CLEANING, CARE & MAINTENANCE

Clean Your Trimmer Regularly

Cleaning Cautions:

- Do not use harsh or corrosive cleaners on the units or their cutters.
- Do not apply pressure or hard objects to cutters.
- Do not disassemble cutter assembly.
- There are no user serviceable parts.
- The handheld unit should be turned off before cleaning.

Cleaning With Water

Your trimmer attachments have rust-resistant, stainless-steel cutting blades that permit the cutting assemblies to be rinsed under running water if you choose.

- Remove all attachments by rotating them counter-clockwise to the unlock position and pulling the attachment off.
- Rinse the attachments under warm running water. Do NOT use hot water, which may cause damage to components.
- Rinsing the trimmer under water or using when in the shower may require lubricating the cutter blades periodically. Using only light-grade oils (e.g. sewing machine oil), simply spread 1-2 drops lightly over cutters with a fingertip. Wipe away all excess.

Cleaning the Foil Shaver

- Press the buttons at the ends of the screen head.
- Remove the head and shake out the clippings or rinse.
- Blow off the cutter assembly or rinse.
- Replace the head, making sure the unit snaps in place.

Cleaning the Exfoliating Head

- Once a week wash with warm soapy water to remove any residue build-up.
- Allow to air dry.
- Replacement Exfoliating head attachment can be obtained from your local retailer, or directly from Remington®. Simply fill out the attached accessory order form - refer to page 7 & 8, or alternatively your order can be processed over the phone via Remington® Service Hotline - refer to page 12. Please reference Part No. SPW-PGEAU.

BATTERY DISPOSAL

Note: The battery is not intended to be removed or replaced under normal use. The only time the battery should be removed or the unit opened or disassembled, is at the end of the product's useful life before it is discarded.

- The WPG4031AU trimmer contains a NiMH (Nickel Metal Hydride) battery. Once the trimmer has reached the end of its life, to ensure proper disposal of the product, please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.
- For more information about recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

Caution: Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns.



Suitable for use in the bath and shower.

This product conforms to radio frequency interference requirements.

Any product purchased and used commercially carries a limited 90 Day Warranty.

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

WARRANTY AGAINST DEFECTS

In this warranty:

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

Warranty Conditions

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:
 - (a) Retain this warranty with your receipt/proof of purchase; and
 - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
 - (a) Any serial number or appliance plate is removed or defaced;
 - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

Spectrum Brands Australia Pty Ltd

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: consumer.enquiry@remington-products.com.au

Website: www.remington-products.com.au

Spectrum Brands New Zealand Limited

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: info@remington.co.nz

Website: www.remington.co.nz

REMINGTON®
EST. NEW YORK 1937

REMINGTON SERVICE HOTLINE

☎Australia 1800 623 118 (toll free)

☎New Zealand 0800 736 776 (toll free)

AUTHORISED REPAIR CENTRES

Visit www.remington-products.com.au for Authorised repair centre details.

® Registered Trade Mark of Spectrum Brands Inc., (SBI) or one of its subsidiaries

© 2019 Spectrum Brands Inc.

Rev. 03/19

Part No. TT22-0005205-B

Type: WPG4030

