


# REMINGTON®

EST. NEW YORK 1937



## **Rechargeable Detail Multi-Shaver WFS200AU**

[www.remington-products.com.au](http://www.remington-products.com.au)  
[www.remington.co.nz](http://www.remington.co.nz)

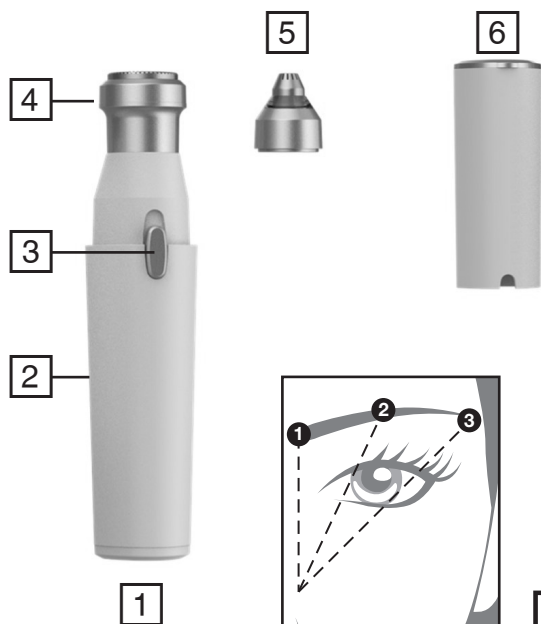

---

## IMPORTANT SAFEGUARDS

---

**When using electrical appliances, basic precautions should always be observed, including the following.**



### **READ ALL INSTRUCTIONS BEFORE USING**

**DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.**

**WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS**

- Before using your product, we recommend that you carefully read the user manual, which indicates the term of this warranty and the proper use you should give the product.
- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not put in fire or mutilate your batteries when disposing as they may burst and release toxic materials.
- Do not short circuit as it may cause burns.
- Keep the cord away from heated surfaces.
- Use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use this appliance with damaged or broken tracks, foils or cutters, as injury may occur.
- For use on facial hair only. Not intended for shaving the hair on your head.
- Do not plug or unplug the appliance with wet hands.
- For household use only.
- Do not place or store the appliance or charging cable where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid for extended periods of

time.

- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Do not use on people who are asleep.
- Turn off when cleaning or applying oil.



Suitable for use in a bath or shower

- For Household use only
- The battery is a type Li-ion, 300mAh. The normal temperature range for charging the battery is from 5°C to 40°C.
- Do not expose the appliance or battery to excessive temperatures.

## SAVE THESE INSTRUCTIONS

---

### PARTS

- |                            |                           |
|----------------------------|---------------------------|
| 1. Charging connector      | 6. Integrated storage cap |
| 2. Handle                  | Not shown:                |
| 3. On/off switch           | • USB-C charging cord     |
| 4. Gentle facial shaver    | • Cleaning brush          |
| 5. Precision brow sculptor |                           |

---

### CHARGING

Charge the device for 90 minutes before first use.

1. Ensure the device is switched off.
2. Connect the device to the USB-C cable and then connect the USB end of the cable to a powered USB port.

### CHARGING INDICATOR LIGHTS

- When charging: LED blinks continuously
- When fully charged: LED stays on
- When shaver is on/in use and sufficiently charged: LED stays on
- When shaver is on/in use and battery is low: LED will blink 5 times then turn off

---

### INSTRUCTIONS FOR USE

### ONLY USE ON CLEAN, DRY SKIN

If skin is very dry or sensitive to irritation, you can apply a small amount of a gentle, non-comedogenic facial oil.

**Test a small area on an arm or leg before using your groomer on your face.**

**Discontinue use immediately if any sensitivity or allergic reaction occurs. Do not use on sensitive or irritated skin.**

NOTE: Hairs may grow in different directions. Moving your shaver against the direction of hair growth will be most effective.

### TO TURN THE UNIT ON:

1. Remove the storage protection cap.
  2. Push on/off switch up towards the trimming head.
- NOTE: When using the precision eyebrow sculptor, the LED ring light will automatically light up.

### CHANGING ATTACHMENTS

1. Remove any attachment by rotating it to the left (counter-clockwise) and pulling it off.
2. Place another attachment on the unit and rotate it to the right (clockwise) until it locks into place.

---

## WHAT ATTACHMENTS TO USE

---

|                 | Gentle Facial Shaver | Precision Brow Sculptor |
|-----------------|----------------------|-------------------------|
| Cheeks          | X                    |                         |
| Chin / Lip      | X                    |                         |
| Forehead        | X                    |                         |
| Temple/Sideburn | X                    |                         |
| Neck            | X                    |                         |
| Eyebrow         |                      | X                       |

### USING THE GENTLE FACE SHAVER

Suggested use: Removing peach fuzz or general facial hair.

Recommended area(s) of use: Cheek, Upper lip, Forehead, Temple/sideburn, Chin, and Neck.

1. Clean and dry the face before use.
2. If your skin is very dry or sensitive to irritation, you can apply a small amount of a gentle, non-comedogenic facial oil.

3. Fit the gentle face shaver attachment to the handle.
4. Turn the unit on.
5. Using your free hand, gently stretch your skin taut in the area you will be shaving. This will aid in making the hairs stand up, and enter the cutting slots more easily.
6. Press the shaving head lightly against your skin and move it in slow, small circular motions.

### **USING THE PRECISION BROW SCULPTOR**

Suggested use: Shaping eyebrows and precision detail hair removal.

Recommended area(s) of use: Around eyebrows.

1. Clean and dry the face before use.
2. Fit the precision brow sculptor attachment to the handle.
3. Turn the unit on.
4. Using your free hand, gently stretch your skin taut in the area you will be shaving. This will aid in making the hairs stand up, and enter the cutting slots more easily.
5. Press the shaving head lightly against your skin and move it in slow, small circular motions.
6. To create the perfect eyebrow (Fig. A), start shaping at the front of the brow (1), continue to the highest point or arch of the brow (2), and finish at the outer end of the brow (3).
7. Do not apply excessive pressure, doing so may damage the trimmer head or result in skin injury.

---

### **CARE FOR YOUR SHAVER**

- After each use, brush or blow accumulated hair from the cutting unit & shaving head(s) used.
- Your shaver can be rinsed with cool or warm water. For best results, turn shaver on while rinsing under water.
- Shake off excess water from shaver and pat dry with cloth.

---

### **BATTERY DISPOSAL**

This appliance contains batteries that are non-replaceable. When the battery is at the end of its life or is no longer working, the appliance and battery must be properly disposed of at an official recycling point. We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver and tools have sharp edges and may cause injury if not handled correctly.

1. Be aware of the risk of terminals of the battery being short-circuited by metal objects
2. The rechargeable battery must be removed from the appliance before it is scrapped.
3. Disconnect the charging adapter before removing the battery.
4. Ensure the device is discharged of all power. To do this, switch it on and allow it to run until stops.

5. Using a small flat screwdriver, carefully pry apart the bottom cover from handle.
6. Remove (2) screws from bottom cover.
7. Take out inner housing to expose circuit board.
8. Remove (1) screw from circuit board and take out circuit board and expose battery.
9. Cut tabs holding battery to circuit board
10. Used batteries must be removed from the appliance and disposed of at an appropriate official recycling point
11. Do not attempt to operate shaver once you have opened it

---

## DISPOSAL/RECYCLING

---

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.

---

## WARRANTY AGAINST DEFECTS

---

Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited  
In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We or us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd  
ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of three (3) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

### **Warranty Conditions**

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the

- electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
  12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

**Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

**Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)



## MONEY BACK OFFER – AUSTRALIA / NEW ZEALAND ONLY

If within 60 days you are not fully satisfied with your Remington® shaver, just return the shaver with this completed coupon and a copy of your Australian/New Zealand purchase receipt to Remington. In return, we will send you a cheque for the full purchase price of the shaver. Please allow 6-8 weeks for your cheque to arrive.

Name:

Address:

City:

State:  Postcode:  DOB:

Contact No: Area Code:  Ph:

Product Model number:

Is this the first Remington® shaver you have owned/purchased? Yes ☐ No ☐

Why are you returning this shaver?

Skin Irritation ☐ Shave is not close enough ☐ Prefer a rotary/foil shaver ☐

Other:

REMINGTON®  
EST. NEW YORK 1937

