


# REMINGTON®




EST. NEW YORK 1937



## **X9 Limitless X Rotary Shaver XR1795AU**

[www.remington-products.com.au](http://www.remington-products.com.au)  
[www.remington.co.nz](http://www.remington.co.nz)

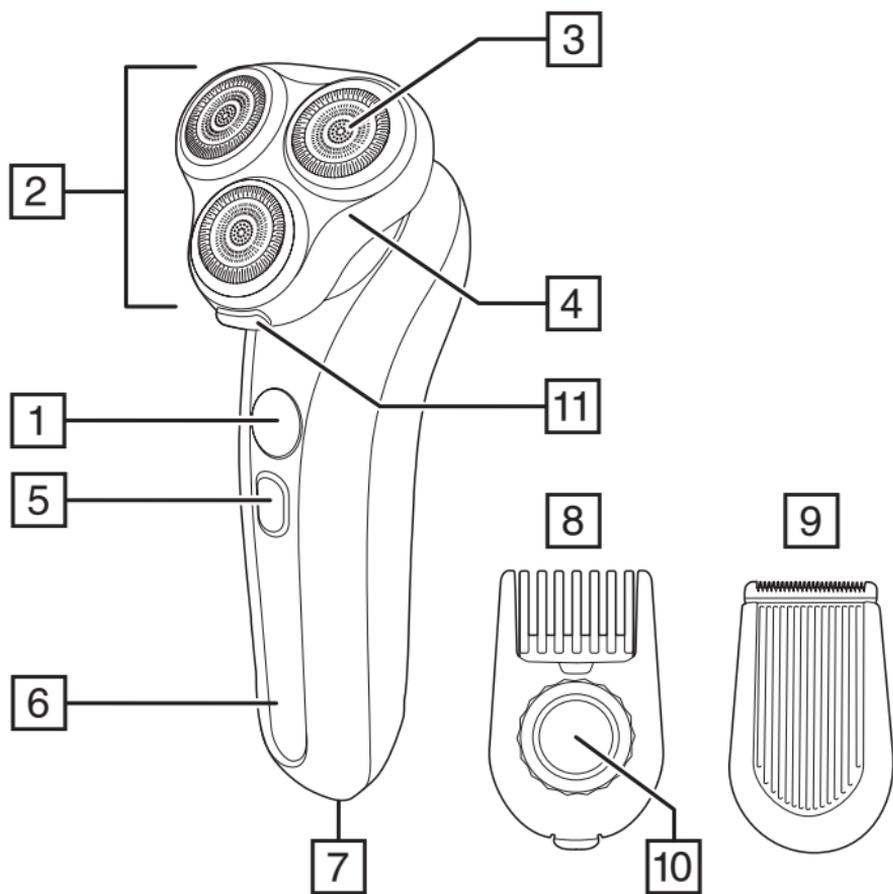

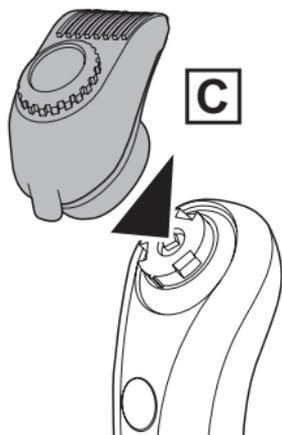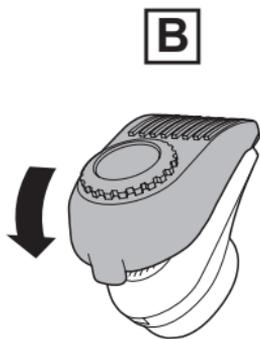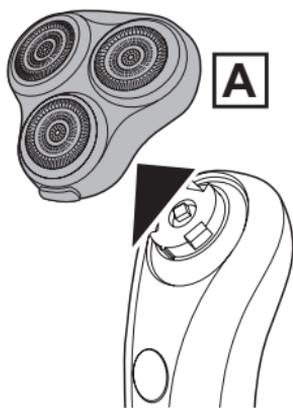

---

## IMPORTANT SAFEGUARDS

---

**When using electrical appliances, basic precautions should always be observed, including the following.**

**READ ALL INSTRUCTIONS BEFORE USING**

**DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.**

**For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.**

**WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS**

- Before using your product, we recommend that you carefully read the user manual, which indicates the term of this warranty and the proper use you should give the product.
- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of the appliance is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. It cannot be repaired.
- Keep the cord away from heated surfaces.
- Charge, use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use this appliance with damaged or broken tracks, foils or cutters, as injury may occur.

- For use on facial hair only. Not intended for shaving the hair on your head.
- Do not plug or unplug the appliance with wet hands.
- For household use only.
- Do not place or store the appliance or charging cable where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid for extended periods of time.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.
- Unplug the charging cable immediately after fully charging.
- **WARNING:** Detach the hand-held part from the supply cord before using or cleaning it in water.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by Remington.
- Never drop or insert any object into any opening of this appliance.
- Always store the cable and shaver in a moisture-free location.
- Do not use on people who are asleep.
- Do not wrap the cord around the appliance.
- Remington strongly recommends that an approved Safety Switch (Residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.



Suitable for use in bath and shower.

## **SAVE THESE INSTRUCTIONS**

---

### **PARTS**

---

- |                                      |                          |
|--------------------------------------|--------------------------|
| 1. On/off switch                     | 9. Detail trimmer        |
| 2. Pivoting head and cutter assembly | 10. Comb adjustment dial |
| 3. Individual flexing heads          | 11. Head release button  |
| 4. Hairpocket                        | <i>Not shown</i>         |
| 5. Turbo button                      | • USB charging cable     |
| 6. Shave - Learn LEDs                | • Cleaning brush         |
| 7. Power connector                   | • Head guard             |
| 8. Adjustable stubble comb (1-5mm)   | • Travel case            |

---

## GETTING STARTED

---

### CHARGING

- It is recommended to fully charge your appliance before using it for the first time.
- Ensure the product is switched off.
- Connect the product to the USB cable and then to the USB end of the cable to a powered USB port.

### SHAVE-LEARN LEDS

#### Number of shaves remaining

During use, your shaver continuously analyses the average time it takes you to shave. The LEDs are all lit when the battery has enough charge for 5 shaves or more. When it senses that there are only 5 shaves remaining before the battery needs to be recharged, the LEDs will show each remaining shave left when you turn on your shaver. All 5 LEDs means you have 5 or more shaves left, 4 LEDs, 4 shaves, etc. The LEDs will fade out after 5 seconds.

#### Charging

During charging, the 5 LEDs act as a fuel gauge with each LED representing 20% of the battery charged. When your shaver is fully charged, all of the LEDs will switch off.

- Run time from fully charged is up to 60 mins.
- Charge time from empty is 90 minutes.
- Do not recharge your product after each use as this will shorten the life of the battery.
- Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

### QUICK CHARGE FEATURE

- Your shaver has a 5 minute quick charge feature that will provide enough charge for 1 shave (3 minutes).

---

## INSTRUCTIONS FOR USE

---

### SHAVING

1. Switch the shaver on by pressing the on/off button.
2. Stretch the skin with your free hand so the hairs stand upright.
3. Only apply light pressure on the shaving head while shaving (pressing too hard can cause skin irritation).
4. Use short, circular strokes.

### SHAVING WITH SHAVING GEL

- Follow the same instructions as dry shaving if using shaving gel.
- CAUTION After use with shaving gel, please rinse the head and cutters under warm water to clean away any excess gel and debris.

## **TURBO FEATURE**

Use the Turbo feature to shave thick stubble. Press the turbo button to operate the shaver in Turbo mode. The turbo button will light up white. Press the turbo button again to deactivate turbo mode.

## **DETAIL TRIMMER AND COMB ATTACHMENT**

To fit the detail trimmer and comb attachment:

1. Switch off your shaver.
2. Grasp the head and cutter assembly and pull it away from the body of your shaver (Fig A).
3. If using, clip the adjustable comb over the trimming attachment (Fig. B)
4. Clip the detail trimmer onto the body of your shaver (Fig. C).

## **TRAVEL LOCK**

The travel lock feature prevents the shaver from turning on and discharging accidentally while stored away or travelling. To lock, press and hold the turbo button for 3 seconds until the  icon comes on. To unlock, press and hold the turbo button for 3 seconds until the  icon switches off.

---

## **TIPS FOR BEST RESULTS**

---

- Always hold the shaver at right angles to the skin so that all three heads are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid skin irritation.

---

## **CARE FOR YOUR SHAVER**

---

Care for your shaver to ensure a long lasting performance. We recommend you clean your shaver after each use.

- Ensure your shaver is switched off before cleaning.
1. Open the shaver head by pressing the release button (Fig. C).
  2. The head assembly will open (Fig. D).
  3. Rinse under a tap to wash away hair trimmings.
  4. Carefully brush away any hairs from the cutters.
  5. Snap the head assembly closed.

Note: The individual cutters are designed to be permanently retained in the shave head and flushed out with water. Do not remove the individual cutters for cleaning.

## **DETAIL TRIMMER**

Lubricate the teeth of the detail trimmer every six months with a drop of sewing machine oil.

---

## BATTERY DISPOSAL

---

Note: The battery is not intended to be removed or replaced under normal use. The only time the battery should be removed or the unit opened or disassembled, is at the end of the product's useful life before it is discarded.

- The appliance contains a lithium nickel manganese cobalt oxide battery. Once the shaver has reached the end of its life, to ensure proper disposal of the product, please take the appliance to a recycling centre, where the internal rechargeable battery should be removed by a professional and recycled separately.
- For more information about recycling of electrical and battery operated appliances, please contact your local council office or your household waste disposal service.

**Caution:** Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns.

We suggest you use local waste management centres to recycle this product at end of life.

---

## DISPOSAL/RECYCLING

---

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.

### Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Limited

## WARRANTY AGAINST DEFECTS

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We** or **us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd  
ACN, 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Limited, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for the period of three (3) years from the date of purchase (**Warranty Period**). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

#### **Warranty Conditions**

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
6. The warranty granted under clause 3 is limited to repair or replacement only.
7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
8. In order to claim under the warranty granted under clause 3 you must:
  - (a) Retain this warranty with your receipt/proof of purchase; and
  - (b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.

9. This warranty is immediately void if:
  - (a) Any serial number or appliance plate is removed or defaced;
  - (b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

**Spectrum Brands Australia Pty Ltd**

Locked Bag 3004  
Braeside, VIC 3195  
AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

**Spectrum Brands New Zealand Limited**

PO Box 9817  
Newmarket, Auckland 1149  
NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)



## MONEY BACK OFFER – AUSTRALIA / NEW ZEALAND ONLY

If within 60 days you are not fully satisfied with your Remington® shaver, just return the shaver with this completed coupon and a copy of your Australian/New Zealand purchase receipt to Remington®. In return, we will send you a cheque for the full purchase price of the shaver. Please allow 6-8 weeks for your cheque to arrive.

Name:

Address:

City:

State:  Postcode:  DOB:

Contact No: Area Code:  Ph:

Product Model number:

Is this the first Remington shaver you have owned/purchased? Yes  No

Why are you returning this shaver?

Skin Irritation  Shave is not close enough  Prefer a rotary/foil shaver

Other:

REMINGTON®  
EST. NEW YORK 1937

