

# REMINGTON®

## Hair Clipper










**HC340**

 [www.remington.co.uk](http://www.remington.co.uk)

**Register online for an EXTRA year guarantee**

       Visit [uk.remington-europe.com/product-registration](http://uk.remington-europe.com/product-registration) You must register within 28 days of purchase.

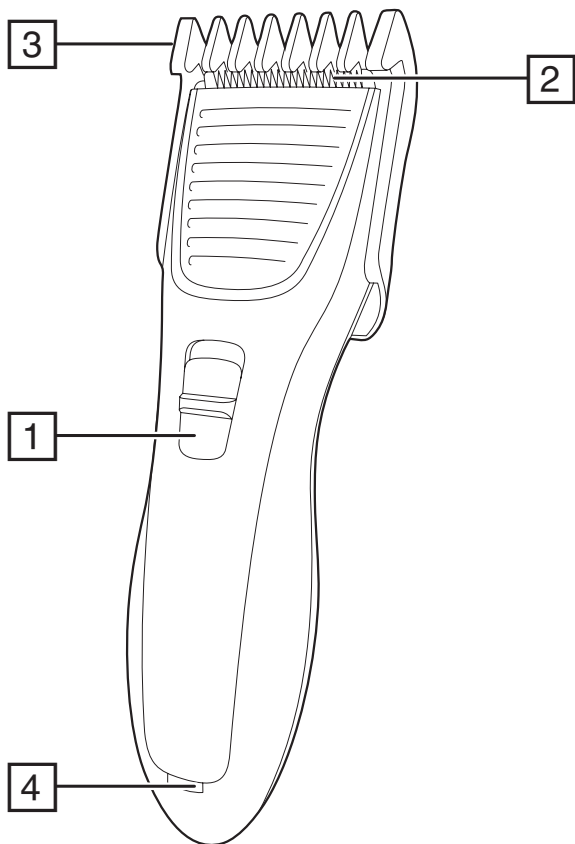

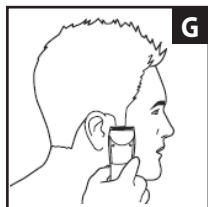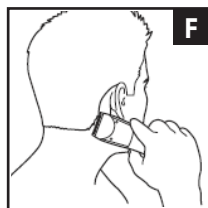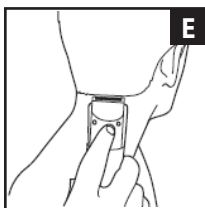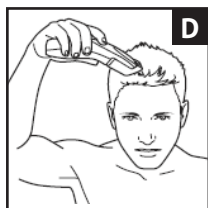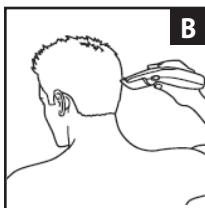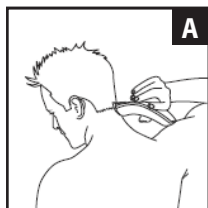

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## **IMPORTANT SAFEGUARDS**

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
- The body of this appliance is not washable or water resistant. Do not put the appliance in liquid.
- Keep the appliance and the adapter dry.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- **WARNING:** For recharging the battery, only use the charger supplied with the appliance - type reference SW-030100BS (UK).
- Always replace a damaged adaptor with one of the original type.
- Do not use the appliance if it is damaged or malfunctions.
- Do not use attachments other than those we supply.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.

---

## PARTS

---

1. On/off switch
2. Blade set
3. 18mm attachment guide comb
4. Charging indicator light

*Not shown:*

- 6-15mm attachment guide comb
- Blade release buttons
- Scissors
- Comb
- Storage case
- Cleaning brush
- Oil bottle
- Adaptor
- Comb lock switch (located on back of clipper)

---

## GETTING STARTED

---

### CHARGING YOUR HAIRCLIPPER

- Before using your hair clipper for the first time, charge for 14-16 hours.
- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.
- The charging indicator will illuminate. The indicator will remain illuminated when the clipper is fully charged.
- Your hair clipper cannot be overcharged. However, if the product is not going to be used for an extended period of time (2-3 months), unplug it from the mains and store. Fully recharge your hair clipper when you would like to use it again.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 14-16 hours.

---

## INSTRUCTIONS FOR USE

---

### BEFORE STARTING THE CUT

- Inspect the clipper making sure it is free from hair and dirt.
- Seat the person so that their head is approximately at your eye level.
- Before cutting, always comb the hair so it is tangle free and dry.

### TO ATTACH A COMB

- Hold the clipper vertically.
- Line the comb rails up with the vertical channels on the sides of the clipper and slide the comb all the way until it stops.
- NOTE: Please make sure that the comb locking mechanism is not activated (the switch on the back of the clipper should be in the down position when attaching a comb).

### TO REMOVE A COMB

- Holding the clipper with the blades facing away from you, firmly push the comb upward and away from the blades.
- NOTE: Please make sure that the comb locking mechanism is deactivated (the switch on the back of the clipper should be in the down position when removing the comb).

### ADJUSTING THE TRIM LENGTH

- The comb attachment can be adjusted to give you 4 different trim lengths.
- Move the comb up or down to the preferred setting and slide the switch on the back of the product up to lock the comb. To unlock, slide the button down.

Comb Position	Short Comb	Long Comb
1	6mm	18mm
2	9mm	
3	12mm	
4	15mm	

- 1mm length is achieved without any combs.
- 0.5mm is achieved without any combs and holding the blades perpendicular to the skin.

### INSTRUCTIONS FOR CUTTING HAIR

- Note: for even cutting, allow the comb attachment/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the highest setting.

#### STEP 1 - NAPE OF THE NECK - DIAGRAM A

- Use setting 1 (6mm).
- Hold the clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
- Slowly lift the clipper, working upwards and outwards through the hair, trimming just a little at a time.

#### STEP 2 - BACK OF THE HEAD - DIAGRAM B

- With setting 3 (12mm), cut the hair at the back of the head.

#### STEP 3 - SIDE OF THE HEAD - DIAGRAM C

- With setting 1 (6mm), trim the sideburns. Then change to setting 2 (9mm) and continue to cut to the top of the head.

#### **STEP 4 - TOP OF THE HEAD - DIAGRAM D**

- With setting 4 (15mm), cut hair on top of the head against the direction in which the hair normally grows.
- For longer hair on top either use the 18mm attachment guide comb or use without a guide comb.
- If using without a guide comb lift the hair on top of the head with a small hand comb. Cut over the hand comb with the hair lifted or hold the hair between the fingers to lift it and cut it to the desired length.
- Always work from the back of the head.

#### **STEP 5 - THE FINISHING TOUCHES - DIAGRAM E, F & G**

- Use the clipper without an attachment comb for close trimming around the base and sides of the neck.
- To produce a clean straight line at the sideburns, reverse the hair clipper.
- Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

---

### **CARE FOR YOUR HAIRCLIPPER**

---

Your clipper is fitted with high quality blades. To ensure long lasting performance of your clipper, clean the blades and unit regularly.

#### **AFTER EACH USE**

- Ensure the clipper is switched off and disconnected from the mains.
- Turn the clipper to the backside.
- Press both buttons located above the lock switch at the same time to open the hair pocket (Diagram H).
- Brush the accumulated hair from the blades and the hair pocket. Do not submerge the clipper in water.
- After cleaning close the hair pocket.
- Place one or two drops of oil on the blades. Turn the clipper on to distribute the oil evenly, wipe off any excess oil. Excess oil will cause damage to the product.
- To clean the unit, wipe with a damp cloth and dry immediately.
- NOTE: Ensure that the clipper is turned off when cleaning.

#### **CLEANING CAUTIONS**

- Cleaning should only be done with a soft brush, such as the brush supplied with the product.
- Only use the light-grade oil supplied or sewing machine oil on the blades.
- Do not use harsh or corrosive cleaners on the units or their blades.
- Do not submerge in water as damage will occur.

---

## BATTERY REMOVAL

---

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Ensure the clipper is discharged of all power.
  1. First remove the comb.
  2. Open the hair pocket (Diagram H).
  3. Unscrew 2 screws in the hair pocket with a screwdriver.
  4. Unscrew the screw on the back housing of the clipper (Diagram I).
  5. Lift or pry the clipper halves apart, exposing the battery.
  6. Cut the wires on both ends of the battery and remove it from the clipper.
- Dispose of the batteries safely.

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: **<https://uk.remington-europe.com/product-registration>**

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.


\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

---


## SERVICE CENTRE

---

### UNITED KINGDOM

 0800 212 438 (free call mainland UK)  
Spectrum Brands (UK) Ltd  
Fir Street, Failsworth, Manchester  
M35 0HS, UK  
[www.remington.co.uk](http://www.remington.co.uk)

### IRELAND

 142 951 40  
Remington Consumer Products,  
Unit B12, Ballymount Corporate Park,  
Ballymount, Dublin 12  
<https://ie.remington-europe.com>



**Ref. No. HC340**

**Type No. HC09A**

19/UK/ HC340 T22-7001203 Version 06 /19

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2019 Spectrum Brands, Inc.