 
 




Russell Hobbs

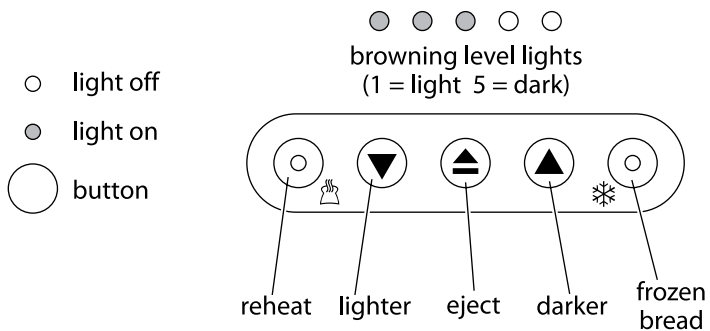

instructions

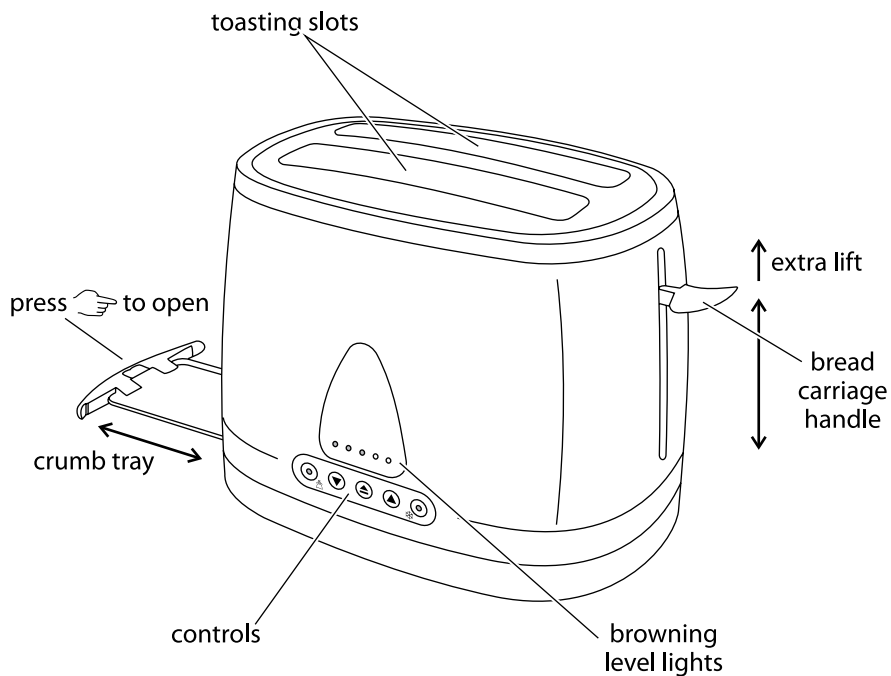

Read the instructions and keep them safe. Pass them on if you pass the toaster on. Remove all packaging, but keep it till you're satisfied the toaster is working.

important safeguards

Follow basic safety precautions, including:

- 1 The toaster must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the toaster in liquid, don't use it in a bathroom, near water, or outdoors.
- 3 Sit the toaster upright, on a stable, level, heat-resistant surface.
- 4 Don't put it on or near anything that could be damaged even by moderate heat.
- 5 Bread may burn. Don't use the toaster near or below curtains or other combustible materials, and watch it while it's hot.
- 6 The area round the toasting slots gets very hot – don't touch!
- 7 Route the cable so it doesn't overhang and can't be caught.
- 8 If you're only using one slot, don't let anything get into the empty slot, as both slots will be "live" when the bread carriage handle is lowered.
- 9 Don't cover the toaster, or put anything on top of it – you'll cause a fire hazard.
- 10 If bread gets jammed, unplug the toaster, let it cool, then carefully remove the bread. Don't use anything sharp, you'll damage the elements.
- 11 Don't toast sandwiches or buttered items, the filling or spread may burn.
- 12 Don't use torn, curled up, oversized, or misshapen slices of bread, as these may jam the toaster.
- 13 Unplug the toaster when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 14 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic, and could cause a fire hazard.
- 15 Don't use the toaster unless the crumb tray is fitted and closed.
- 16 Don't connect the toaster to an external timer or remote control system.
- 17 Keep the toaster and cable away from sources of heat.
- 18 Don't use the toaster for any purpose other than those described in these instructions.
- 19 Don't use the toaster if it's damaged or malfunctions.
- 20 If the cable is damaged, return the toaster, to avoid hazard.



 
household use only

before using for the first time

- Set the browning level to maximum (all browning level lights on).
- Run the toaster without bread. This may smell a bit, but it's nothing to worry about. Ensure the room is well ventilated.

toasting bread

- 1 Sit the toaster upright on a stable, level, heat-resistant surface.
- 2 Don't put it on or near anything that could be damaged even by moderate heat.
- 3 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 4 Bread may burn. Don't use the toaster near or below curtains or other combustible materials and watch it while it's hot.
- 5 Put the plug into the power socket (switch the socket on, if it's switchable).
- 6 The left three browning level lights will light up.
- 7 Press and release the ▼ button to reduce the number of lights glowing – to lighten the toast.
- 8 Press and release the ▲ button to increase the number of lights glowing – to darken the toast.
- 9 The more lights showing, the darker the toast.
- 10 Put bread into the toasting slots (maximum thickness 25mm/1").
- 11 Press the bread carriage handle down fully.
- ✱ It won't lock down unless the toaster is connected to the electricity supply.
- 12 The browning level lights will indicate the state of the toast:
 - a) the rightmost of the glowing lights will flash, then go out
 - b) the next glowing light will flash, then go out
 - c) when the last light stops flashing and goes out, the toast will pop up, and the elements will turn off.



extra lift

- 13 After toasting, you may raise the bread carriage handle further, to make it easier to remove small items, like bagels and crumpets.

eject ▲

- 14 To stop the toaster before it's finished, press the ▲ button. The elements will turn off, and the lights will revert to the way they were before you pressed the bread carriage handle, ready to start again.

frozen bread ✱

- 15 This takes the guesswork out of toasting frozen bread.
- 13 Leave the browning control at your favoured setting, insert the frozen bread, lower the bread carriage handle, then press the ✱ button.
- 14 The light in the ✱ button will glow, and the toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.

caution don't try to defrost bread – you'll probably wreck the toaster

- a) toasting frozen bread changes ice to steam, which escapes via the toasting slots
- b) defrosting bread on a low setting changes ice to water, which drips into the toaster, over the electronics and maybe the elements, causing mayhem


reheating toast 🍞

- 15 Leave the browning control at your favoured setting, insert the frozen bread, lower the bread carriage handle, then press the 🍞 button.
- 16 The light in the 🍞 button will glow, the toast will be given a short burst of heat, then it'll pop up, and the lights will go out.
- 17 You must only reheat plain, "unbuttered" toast.

hints and tips

- 18 When toasting more than one slice of bread, use slices of similar size, thickness and freshness.
- 19 Old (yesterday's) bread contains less moisture, so makes crisper toast.
- 20 Old or thin bread cooks faster than fresh or thick bread – use a lighter setting.
- 21 Sweet bread products (tea cakes, fruit loaf, etc.) brown much more quickly than ordinary bread, so should be toasted on a lighter setting.

crumbs

- 22 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic and could cause a fire hazard.
- 23 Unplug the toaster and let it cool down.
- 24 Press and release the crumb tray  to unlock it, slide it out from underneath the side of the toaster, then empty it.
- 25 Wipe the crumb tray with a damp cloth, dry it, then slide it back into the toaster.
- 26 Don't use the toaster unless the crumb tray is fitted and closed.

care and maintenance

 
- 27 Unplug the toaster and let it cool.
- 28 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.
- 29 Don't let anything enter the slots, you might damage the elements.
- 30 Don't put the toaster in liquid.
- 31 Don't use harsh or abrasive cleaning agents or solvents.

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

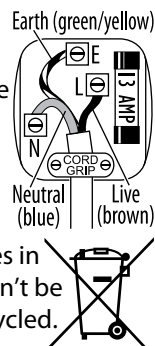

service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

Customer Service

(correspondence only)

Salton Europe Ltd
Failsworth
Manchester
M35 0HS

Customer Returns

Salton Europe Ltd
Heath Mill Road
Wombourne
Wolverhampton
WV5 8AQ

Customer Service (service@saltoneurope.com)
telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.

online

www.russellhobbs.co.uk for more products