


- 27 Turn the filter so that the side with the tabs is towards the kettle body.
- 28 Lower the filter into the spout.
- 29 Slide it down the inside of the spout till it stops.
- 30 From the outside, put a finger inside the spout, and push the top of the filter gently towards the body of the kettle, till the tabs on the top of the filter click into place.
- 31 Close the lid, and press it down, to lock it closed.

### WIRING UK PLUGS

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

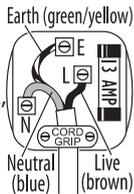

If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

### ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



### SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Ltd  
 Fir Street, Failsworth, Manchester M35 0HS  
 email: [service@russellhobbs.com](mailto:service@russellhobbs.com)  
 telephone: 0845 658 9700 (local rate number)

### GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

### ONLINE

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products

### REGISTRATION AND PRIZE DRAW

Collect your free reward and a chance to win £10,000 visit [www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)




# Russell Hobbs



instructions

**£10,000 prize draw**  
 PLUS Free Rewards Gallery  
 Register online now to  
 collect your reward  
 See back for  
 details

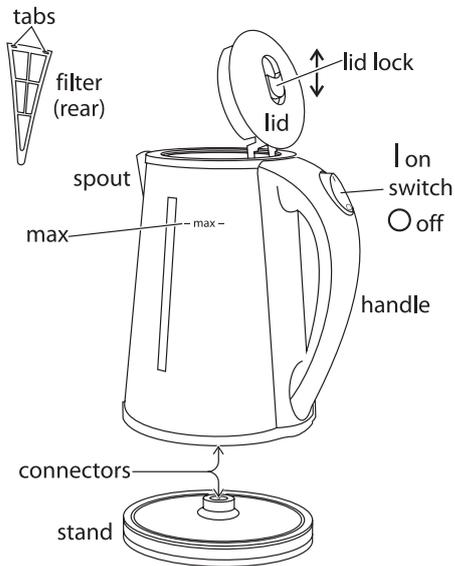

Read the instructions, keep them safe, pass them on if you pass the kettle on. Remove all packaging before use.

### **STOP** IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 The kettle must only be used by or under the supervision of a responsible adult. Use and store the kettle out of reach of children.
- 2 Don't put the kettle, stand, cable, or plug in liquid; don't use the kettle in a bathroom, near water, or outdoors. 
- 3 Keep the kettle, stand, and cable away from the edges of worktops.
- 4 Put the stand on a stable, level surface.
- 5 Wind excess cable beneath the stand.
- 6 Unplug the stand when not in use.

- 7 Don't use the kettle without fitting the filter.
- 8 Use the kettle only with the stand supplied (and vice versa).
- 9 Don't use the kettle for any purpose other than heating water.
- 10 Don't use it with a timer or remote control.
- 11 Don't use the kettle if it's damaged or malfunctions.
- 12 If the cable is damaged, return the kettle, in order to avoid hazard.

### household use only

#### BEFORE FIRST USE

- Fill to **max**, boil, discard the water, and rinse.

#### FILLING

- 1 Squeeze the lid lock into the lid to open it.
- 2 Fill with at least 2 cups of water, but not above **max**.
- 3 If you overfill, it may spit boiling water.
- 4 Close the lid, and press down to lock it.

#### SWITCHING ON

- 5 Plug the stand into the wall socket.
- 6 Put the kettle on the stand.
- 7 Press the top of the switch (|) – the light will glow, and the kettle will heat up.

#### SWITCHING OFF

- 8 When it boils, the kettle will switch off.
- 9 To switch off manually, press the bottom of the switch (○).

#### GENERAL

- 10 Pour slowly and don't over-tilt the kettle.
- 11 Don't tilt the kettle backwards, water might get on to the control area.
- 12 If this happens, sit the kettle somewhere warm for 12 hours to dry before using it.

- 13 Don't worry about moisture on the stand. The steam used to switch the kettle off is condensed and vented under the kettle.
- 14 Don't worry about discolouration on the floor of the kettle. It's due to the bonding of the element to the kettle floor.

#### USING WITH INSUFFICIENT WATER

- 15 This will shorten the life of the element. A boil-dry cut-out will switch the kettle off.
- 16 To avoid cycling on and off, take it off the stand, and leave it to go completely cold.

#### CARE AND MAINTENANCE

- 17 Unplug the stand, and let the kettle cool.
- 18 Wipe inside and outside with a damp cloth.
- 19 Keep all connectors and sockets dry.

#### DESCALE REGULARLY

- 20 Descale regularly, (at least monthly). Use a descaler suitable for use in plastic products (most products have plastic parts). Follow the instructions on the package of descaler.
- ★ Products returned under guarantee with faults due to scale will incur a repair charge.

#### CLEANING THE FILTER

- 21 Switch the kettle off, and let it cool.
- 22 Open the lid.
- 23 From inside the kettle, push the top of the filter out, towards the spout, to disengage the tabs on the top of the filter from the kettle body.
- 24 From outside the kettle, lift the filter out of the spout.
- 25 Rinse the filter under a running tap while brushing with a soft brush.
- 26 Rinse the kettle, in case scale particles have fallen inside.