




Russell Hobbs



instructions


£10,000 prize draw
PLUS Free Rewards Gallery
Register online now to
collect your reward
See back for
details

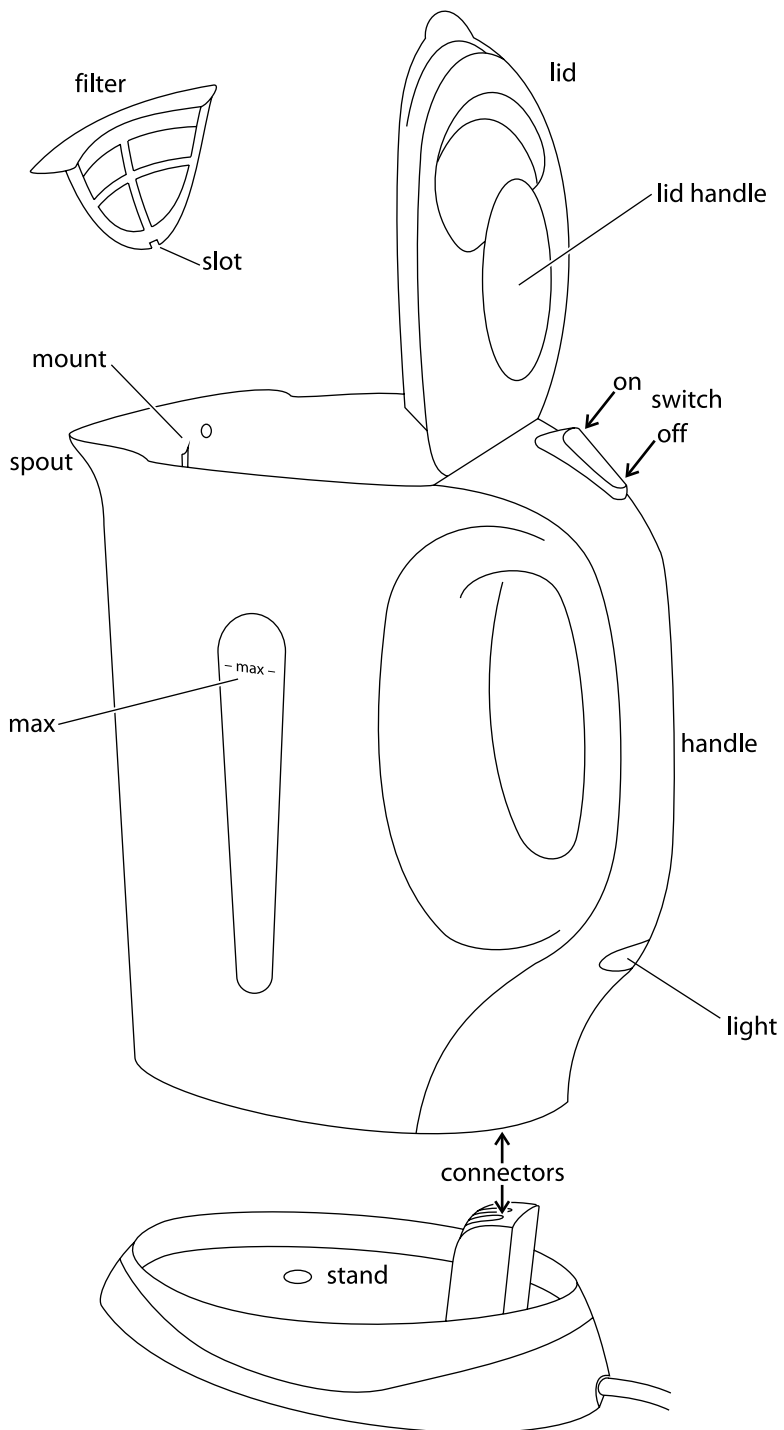

Read the instructions, keep them safe, pass them on if you pass the kettle on.
Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 The kettle must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the kettle, stand, cable, or plug in liquid. Don't use the kettle in a bathroom, near water, or outdoors. 
- 3 The scald hazard lasts long after boiling. Keep the kettle, stand, and cable away from the edges of worktops and out of reach of children.
- 4 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 5 Don't use the kettle without fitting the filter – it'll spit boiling water.
- 6 Don't touch hot surfaces. Use the handle and the lid release button.
- 7 Don't open the lid while the water is heating.
- 8 Take care when pouring – pour slowly, and don't over-tilt the kettle.
- 9 Don't switch on unless the coiled part of the element is covered by water.
- 10 Don't fill past the **max** mark, or it may spit boiling water.
- 11 Remove the kettle from its stand before filling or pouring.
- 12 Unplug the stand when not in use, before moving and before cleaning. Let the kettle cool down before cleaning and storing away.
- 13 Check the lid is fully closed before switching the kettle on, or it may not switch off.
- 14 Keep the kettle, stand, cable, and plug away from sources of heat.
- 15 Don't use the kettle for any purpose other than heating water.
- 16 Use the kettle only with the stand supplied (and vice versa).
- 17 This appliance must not be operated by an external timer or remote control system.
- 18 Don't use the kettle if it's damaged or malfunctions.
- 19 If the cable is damaged, return the kettle, to avoid hazard.

household use only

BEFORE USING FOR THE FIRST TIME

- Fill to **max**, boil, discard the water, then rinse, to remove manufacturing dust, etc.

POSITIONING

- 1 Put the stand on a stable, level surface.
- 2 Route the cable so it doesn't overhang, and can't be caught or tripped over.
- 3 Wind excess cable beneath the stand.

FILLING

- 4 Remove the kettle from the stand.
- 5 Use the lid handle to open the lid.
- 6 Fill with at least enough water to cover the coiled part of the element, but don't fill above **max**.
- 7 If you overfill, the kettle may spit boiling water.
- 8 Close the lid, and press down, to lock it closed.
- 9 Check the lid is closed, or the kettle won't switch off when it boils.

SWITCHING ON

- 10 Check that the kettle is switched off – press the rear of the switch (○).
- 11 Put the kettle on the stand – take care not to spill.
- 12 Plug the stand into a power socket.
- 13 Press the front of the switch (I) – the light will glow, and the kettle will heat up.

SWITCHING OFF

- 14 When the water boils the kettle will switch itself off, and the light will go out.
- 15 To switch off manually, press the rear of the switch.

GENERAL

- 16 Remove the kettle from the stand before pouring.
- 17 To avoid the risk of splashing, pour slowly and don't over-tilt the kettle.
- 18 Don't tilt the kettle backwards – water might get on to the control area.
- 19 If this happens, let the kettle dry before use – sit it somewhere warm for 12 hours.
- 20 When you lift the kettle, you may see moisture on the stand. Don't worry – it's the steam used to switch the kettle off automatically, which then condenses and escapes via vents under the kettle.

USING WITH INSUFFICIENT WATER

- 21 This will shorten the life of the element.
- 22 A boil-dry cut-out will switch the kettle off.
- 23 To prevent the kettle cycling on and off, remove the kettle from the stand.
- 24 Sit the kettle on the work surface till it's cold.
- 25 Don't fill the kettle till it's cold, or it may spit.

CARE AND MAINTENANCE

- 1 Check that the kettle is switched off – press the rear of the switch (○).
- 2 Unplug the stand, and let the kettle cool down fully.
- 3 Wipe the kettle, inside and out, with a damp cloth. You may use a little household detergent, but if you do, rinse well to avoid tainting the water.
- 4 Keep all connectors and sockets dry.
- 5 Don't put the kettle or stand in liquid.
- 6 Don't use harsh or abrasive cleaning agents or solvents.

DESCALE REGULARLY – EVEN IN SOFT WATER AREAS

- 7 **Limescale** may be white, coloured, even rusty-looking, but it's normally visible.
 - 8 **Phosphate scale** isn't generally visible, but it's there, even in soft water areas.
 - 9 **All scale** causes overheating, reduces the kettle's life, and may trigger the boil-dry cut-out.
 - 10 So, even with soft water, descale regularly, to help keep your kettle in working order.
 - 11 Use a descaler suitable for plastic products (all kettles have plastic parts).
 - 12 Follow the instructions provided with the descaler, rinse several times, then fill, boil and discard the water, to ensure no residues are left.
- ★ Products returned under guarantee with faults due to scale will be subject to a repair charge.

WATER FILTER

- 13 Scale particles suspended in the water may give it a cloudy or greasy appearance. The filter will prevent these particles going into your drink. If you see deposits on the filter, clean it, otherwise the performance of your kettle will drop, your drinks may contain scale, and the water inside the kettle may look cloudy.
-

CLEANING THE FILTER

- 14 Check your hands are free from soap, hand cream, or anything which might leave a taint.
- 15 Switch the kettle off, and let it cool.
- 16 Open the lid.
- 17 Grip the top of the filter, and pull it gently up and out of the kettle.
- 18 Rinse the filter under a running tap while brushing with a soft brush.
- 19 Rinse the kettle, in case scale particles have fallen inside.


caution don't use the kettle without fitting the filter – it'll spit boiling water

- 20 Lower the filter into the kettle, so that the slot in the bottom of the filter rests on the mount below the spout, and the mounts on either side of the kettle grip the sides of the filter.
- 21 Close the lid, and press down to lock it.

UK WIRING INSTRUCTIONS


The product must be earthed.

It has a 13A BS1362 fuse in a 13A BS1363 plug.

To replace the plug, fit the green/yellow wire to  or E, the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

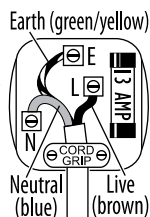

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Limited, Fir Street, Failsworth, Manchester M35 0HS

email: service@russellhobbs.com

telephone: 0845 658 9700 (local rate number)

GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

ONLINE

www.russellhobbs.co.uk for more products

REGISTRATION AND PRIZE DRAW

Collect your free reward, and a chance to win £10,000.

Visit www.productregister.co.uk/rhobbs