




Russell Hobbs



instructions

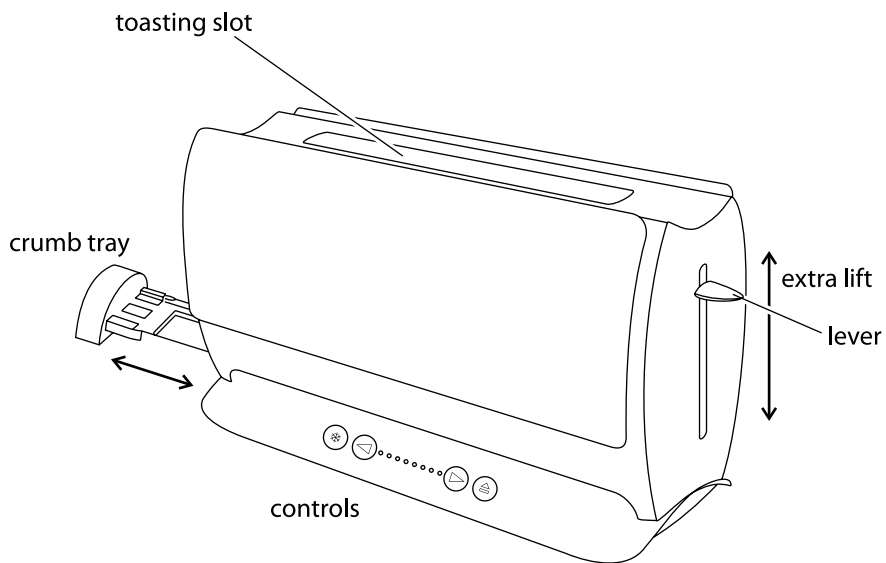

○
❄️
○
frozen bread

◀️
○
lighter

● ● ● ● ● ○ ○ ○
1 —————> 7
browning level lights

▶️
○
darker

○
⬆️
⬆️
○
eject

○ light off
● light on
○ button

Read the instructions and keep them safe. Pass them on if you pass the toaster on. Remove all packaging, but keep it in case you ever need to return the product.

important safeguards

Follow basic safety precautions, including:

- 1 The toaster must only be used by or under the supervision of a responsible adult. Use and store it out of reach of children.
- 2 Don't put the toaster in liquid, don't use it in a bathroom, near water, or outdoors.
- 3 Sit the toaster upright on a stable, level, heat-resistant surface.
- 4 Don't put it on or near anything that could be damaged even by moderate heat.
- 5 Bread may burn. Don't use the toaster near or below curtains or other combustible materials and watch it while it's hot.
- 6 The area round the toasting slot gets very hot – don't touch!
- 7 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 8 Don't cover the toaster or put anything on top of it.
- 9 If bread gets jammed, unplug the toaster, let it cool, and carefully remove the bread. Don't use anything sharp, you'll damage the elements.
- 10 Don't toast "battered" items, they may catch fire.
- 11 Don't use torn, curled, or misshapen bread, you may jam the toaster.
- 12 Unplug the toaster when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 13 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic and could cause a fire hazard.
- 14 Don't use the toaster unless the crumb tray is fitted and closed.
- 15 Don't use the toaster for any purpose other than those described in these instructions.
- 16 This appliance must not be operated by an external timer or remote control system.
- 17 Don't operate the toaster if it's damaged or malfunctions.
- 18 If the cable is damaged, return the toaster, to avoid hazard.



household use only

touch controls

- Don't press ✱, ◀, ▶, △, just touch them.

sleep mode

- If you don't touch the controls for 5 minutes, the lights will go out, to save electricity.
- To wake the toaster, simply touch ◀ or ▶.

before using for the first time

- 1 Set the browning level to maximum (all browning level lights on).
- 2 Operate the toaster empty, to cure the new elements.
- 3 This may smell a bit, but it's nothing to worry about. Ensure the room is well ventilated.

positioning

- 4 Sit the toaster upright on a stable, level, heat-resistant surface.
- 5 Don't put it on or near anything that could be damaged even by moderate heat.
- 6 Bread may burn. Don't use the toaster near or below curtains or other combustible materials and watch it while it's hot.
- 7 Route the cable so it doesn't overhang, and can't be tripped over or caught.

toasting bread

- 8 Put the plug into the power socket.
- 9 The toaster will first run through a self-check routine.
- 10 The left four browning level lights will light up.
- 11 Touch ◁ to lighten, or ▷ to darken the toast.
- 12 The browning level lights will come on/go off to indicate the level chosen.
- 13 The more lights glowing, the darker the toast.
- 14 Put bread into the toasting slot (maximum thickness 28mm).
- 15 Press the lever down fully.
- ★ It won't lock down unless the toaster is connected to the electricity supply.
- 16 The browning level lights will count down:

a) the rightmost light will flash, the lights to its left will glow

b) the rightmost light will go out, the light to its left will flash

c) this will carry on till all the lights are out

d) when they're all out, the toast will pop up.

● ● ● ☀ ○ ○ ○

● ● ☀ ○ ○ ○ ○

● ☀ ○ ○ ○ ○ ○

☀ ○ ○ ○ ○ ○ ○

○ ○ ○ ○ ○ ○ ○

eject △

- 17 To stop the toaster mid-cycle, touch △.
- 18 The △ light will glow, the toast will pop up, then the △ light will go out.

extra lift

- 19 After toasting small items (bagels, crumpets, etc.) the lever may be raised further, to allow them to be removed more easily.

frozen bread ❄

- 20 This takes the guesswork out of toasting frozen bread.
- 21 Leave the browning control at your favoured setting, put the frozen bread into the slot, lower the lever, then touch ❄.
- 22 The ❄ light will come on, and the toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.

reheating toast

- 23 Use the lowest setting (one browning level light glowing).
- 24 You must only reheat plain, "unbuttered" toast.

hints and tips

- 25 If toasting more than one slice, use slices of similar size, thickness and freshness.
- 26 Old (yesterday's) bread contains less moisture, so makes crisper toast
- 27 Old or thin bread cooks faster than fresh or thick bread. Use a lower setting
- 28 Sweet bread products (tea cakes, fruit loaf, etc.) brown much more quickly than ordinary bread, so should be toasted on a lighter setting

crumbs

29 Clean the crumbs out of your toaster frequently, to avoid a build up of crumbs. This is unhygienic and could cause a fire hazard.

30 Unplug the toaster and let it cool down.

31 Slide the crumb tray out from the side of the toaster, and empty it.

32 Wipe the crumb tray with a damp cloth, dry it, then replace it in the toaster.

33 Don't use the toaster unless the crumb tray is fitted and closed.

care and maintenance

34 Unplug the toaster and let it cool down.

35 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.

36 Don't let anything enter the slot, you might damage the elements.

37 Don't put the toaster in water or any other liquid.

38 Don't use harsh or abrasive cleaning agents or solvents.

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is in place. If you remove the plug, dispose of it.

wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Russell Hobbs Ltd, Fir Street, Failsworth, Manchester M35 0HS

email: service@russellhobbs.com

telephone: 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Documentation, packaging, and product specifications may change without notice.

online

www.russellhobbs.co.uk for more products

