




# Russell Hobbs



instructions

**£10,000 prize draw**  
**EXTRA year guarantee**  
**FREE rewards gallery**  
**www.productregister.co.uk/rhobbs**  
Register online now!  
See back for details

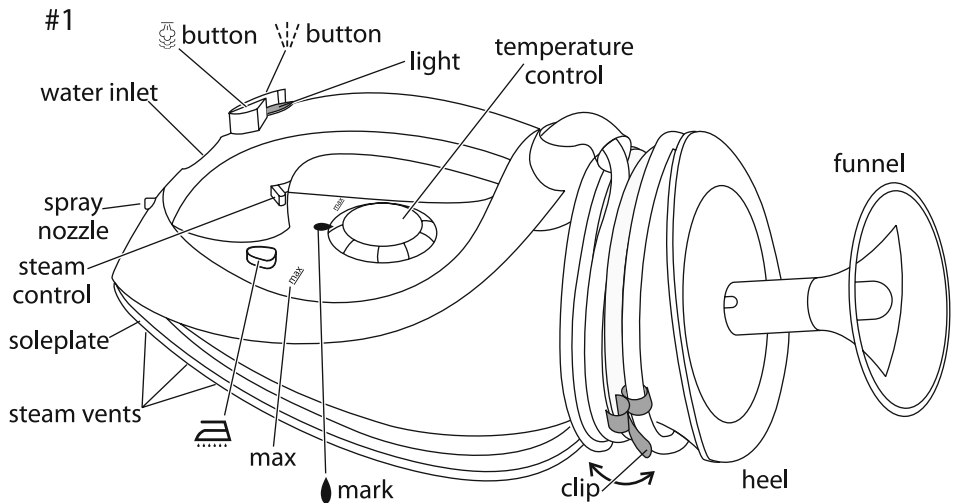

Read the instructions, keep them safe, pass them on if you pass the iron on.  
Remove all packaging before use.

### **IMPORTANT SAFEGUARDS**

Follow basic safety precautions, including:


- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Use and store it out of reach of children.
- 2 Use the iron, or set it on its heel, on a stable, level, heat-resistant surface, preferably an ironing board.
- 3 Don't leave the iron unattended while plugged in or standing on the ironing board. It could be knocked over.
- 4 Unplug the iron before filling, before cleaning, and after use.
- 5 Don't use the iron if it's dropped or damaged, or if it malfunctions or leaks.
- 6 Don't put the iron in liquid, don't use it in a bathroom, near water, or outdoors.
- 7 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 8 Don't iron clothing while it's being worn – you'll burn or scald the wearer (this is not a joke – I've seen it happen).
- 9 Don't touch the soleplate, and keep away from the steam coming from it.
- 10 Don't use the iron in the vicinity of children.
- 11 Don't fill the iron directly from the tap, use the jug.









 
- 12 Don't fill past **max**, or water may escape in use.
- 13 Sit the iron upright when you're not ironing, and when you store it away.
- 14 Leave the iron upright to cool before cleaning.
- 15 Unplug the iron when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 16 Don't fit any attachment or accessory unless we supply it.
- 17 Don't use the iron for any purpose other than those described in these instructions.
- 18 Take care not to scratch the soleplate – avoid buttons, zips, etc.
- 19 The iron has a protective thermal fuse, which will blow if it overheats. If this happens, the iron will stop working, and must be returned for repair.
- 20 If the cable is damaged, return the iron, to avoid hazard.

### household use only


#### **BEFORE USING FOR THE FIRST TIME**


- Don't worry if the iron smokes a bit at first, it'll stop as the element cures.
- Iron an old piece of cotton fabric, to clean the soleplate.
- Press the  and buttons 3 or 4 times, to check them out.

#### **PREPARATION**



- 1 Check for textile care symbols (   ).
- 2 Iron fabrics needing low temperatures  first, then those that need medium temperatures , and finish with those needing high temperatures .

#### **FILLING**

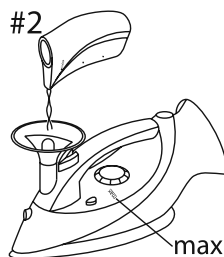- 3 You may use the iron with tap-water, but if you live in a hard water area, you should use distilled water (not chemically descaled or softened water).
- 4 If you buy distilled water, check that it's marketed as suitable for use in irons.
- 5 Unplug the iron.
- 6 Turn the temperature control to ●, turn the steam control to  (#3).
- 7 Pull the funnel out of the heel, and push it into the water inlet.
- 8 Hold the iron with the soleplate horizontal.
- 9 Pour slowly into the funnel, to let the air in the reservoir escape, otherwise you'll cause an air lock and the water will overflow.
- 10 Don't fill past **max**, or water will escape in use.
- 11 Pull the funnel out of the water inlet, and replace it in the heel.
- 12 Wipe up any spillage.
- ★ If you push the funnel too hard, you may jam the valve in the open position:
  - a) Unplug the iron.
  - b) Put a finger into the water inlet.
  - c) Press and release the valve to close it.




#### **SWITCH ON**

- 13 Set the temperature control to ●, set the steam control to .
- 14 Sit the iron on its heel.
- 15 Move the clip to free the cable.
- 16 Put the plug into the power socket (switch the socket on, if it's switchable).
- 17 Turn the temperature control to bring the setting you want next to the  mark (#3).

18 The light will glow.



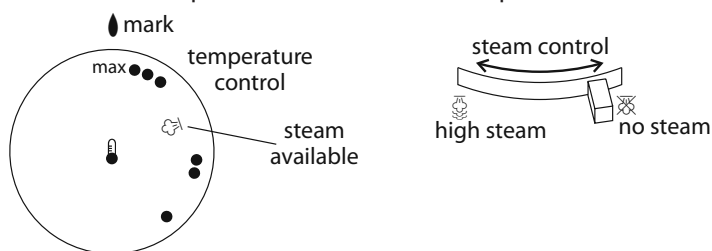

19 When the iron reaches the temperature you set, the light will go off. It'll then cycle on and off as the thermostat operates to maintain the temperature.

#3



## TEMPERATURE SETTING GUIDE

### label marking

-  cool – nylon, acrylics, polyester
-  warm – wool, polyester mixtures
-  hot – cotton, linen
-  do not iron

### temperature dot setting




✳ If the instructions on the fabric label differ from this guide, follow the instructions on the label.



## REDUCING TEMPERATURE

20 This takes a bit longer, as the iron has to lose the heat it has built up, so be patient. It's best to organise your ironing so that you don't need to reduce the temperature.

## STEAM IRONING

21 When steam ironing, you must set the temperature control at  or higher.

22 If you don't, you'll get water on your clothes, not steam.

23 Turn the steam control to the setting you want,  = no steam,  = high steam.

24 Wait till the light goes out, then start ironing.

## SPRAY


✳ Water spotting affects some fabrics. Test this out on a hidden part of the fabric.


25 This works with dry or steam ironing, as long as there's #4 water in the reservoir.

26 Check that there's water in the reservoir.


27 Lift the iron off the fabric.

28 Aim the spray nozzle at the fabric.

29 Press the  button – you may have to press it 2 or 3 times to pump water through the system.

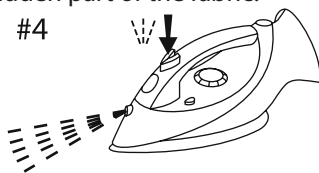


## SHOT OF STEAM

30 This works with dry or steam ironing, as long as there's water in the reservoir, and the temperature is above .

31 Check that the temperature control is at  or higher.

32 Lift the iron off the fabric.

33 Press the  button – you may have to press it 2 or 3 times to pump water through the system.

34 Leave 4 seconds between shots, to let the temperature build up.



---

## DRY IRONING

---

35 If you're going to be dry ironing for 20 minutes or more, empty the reservoir first, to avoid spontaneous bursts of steam.

36 Turn the steam control to .

37 Wait till the light goes out, then start ironing.

---

## VERTICAL STEAMING


---

38 Remove wrinkles from hanging clothes, hanging curtains, and furnishing fabrics.


39 Check that there's adequate ventilation behind the fabric, otherwise moisture may build up, causing mildew.

40 Check that there's nothing behind the fabric that may be damaged by the steam.

41 Check that pockets, turn-ups, and cuffs are empty.

42 Turn the temperature control to **max**, turn the steam control to .


43 Hold the iron close to (but not touching) the fabric.

44 Press the  button (you're using the "shot of steam" function vertically).

45 You may have to press it 2 or 3 times to pump water through the system.

46 Leave 4 seconds between shots, to let the temperature build up.

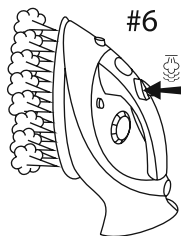

---



---

## AFTER USE

---

47 Turn the temperature control to , turn the steam control to .

48 Unplug the iron.

49 Pull the funnel out of the heel, and push it into the water inlet.

50 Hold the iron over a sink, turn it upside down, and drain the water from the reservoir.


51 Sit the iron on its heel.

52 Leave it to cool down completely.

53 When it's cold, remove the funnel from the water inlet, wipe off any moisture, then replace the funnel in the heel.

54 Store the iron on its heel, to avoid corrosion and damage to the soleplate.

---

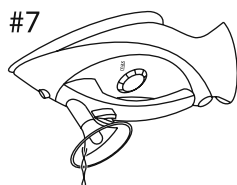

---

## SELF CLEAN


---

56 To prevent scale building up, use the self clean function regularly, at least monthly in normal water areas, more often in hard water areas.

★ Products returned under guarantee with faults due to scale will be subject to a repair charge.

57 You'll need a basin or a large bowl to catch the water coming out of the soleplate.


58 Fill the reservoir to the **max** mark.

59 Turn the temperature control to **max**, turn the steam control to .

60 Sit the iron on its heel.

61 Put the plug into the power socket, and wait till the light goes out.

62 Now hold the iron over the basin or bowl, with the soleplate down.


63 Press , and hold it down.


64 Gently move the iron to and fro, over the basin or bowl.

★ Keep clear of the escaping water and steam.

65 Water and steam will wash scale out of the soleplate, into the sink.

---

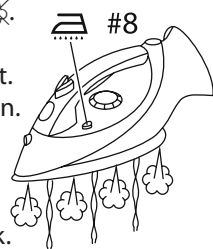

- 66 When the reservoir is empty, release .
- 67 Unplug the iron, and sit it on its heel to cool.
- 68 When it's cold, wipe off any moisture.
- 69 Store the iron on its heel, to avoid corrosion and damage to the soleplate.
- 70 Press the clip over the cable to keep it tight and tidy.

---

## **CLEANING**

---

- 71 Unplug the iron when not in use, before moving and before cleaning. Let it cool down fully before cleaning and storing away.
- 72 Wipe outer surfaces with a damp cloth. If necessary, use a little washing-up liquid.
- 73 Remove spots from the soleplate with a little vinegar – take care not to scratch it.

---

## **LOST THE FUNNEL?**

---


- 74 If you lose the funnel, you may purchase a replacement from Customer Service (see back page).
- 75 While you're waiting for the replacement to be delivered, you may continue to use the iron by manually operating the valve at the bottom of the water inlet.

### **filling**

- 76 Unplug the iron.
- 77 Put a finger into the water inlet.
- 78 Press and release the valve to open it.
- 79 Fill the reservoir (not above max).
- 80 Press and release the valve to close it.

### **emptying**

- 81 Unplug the iron.
- 82 Put a finger into the water inlet.
- 83 Press and release the valve to open it.
- 84 Empty the reservoir.
- 85 Press and release the valve to close it.

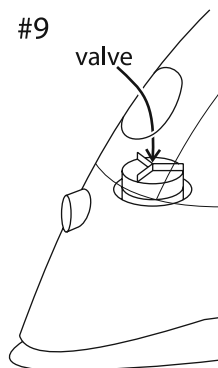





## ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.



## SERVICE

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: [service@russellhobbs.com](mailto:service@russellhobbs.com)

telephone: 0845 658 9700 (local rate number)

## ➔ GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.



## ONLINE

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products



## REGISTER ONLINE FOR –

£10,000 prize draw, **EXTRA** year guarantee, **FREE** rewards gallery

Visit [www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)

You must register within 28 days of purchase.

