

## **DESCALE REGULARLY**

21 Descale regularly, (at least monthly). Use a descaler suitable for use in plastic products (most products have plastic parts). Follow the instructions on the package of descaler.

✱ Products returned under guarantee with faults due to scale will incur a repair charge.

## **CLEANING THE FILTER**

22 Switch the kettle off, and let it cool.

23 Remove the lid.

24 Pull the filter out of its guides.

25 Brush the filter, under a running tap.

26 Rinse the kettle, to remove scale particles.

27 Slide the filter down into the guides.

28 Replace the lid.

## **ENVIRONMENTAL PROTECTION**

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

## **GUARANTEE**

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions.

551-894

Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

## **CUSTOMER SERVICE**

If you ring, have the Model No. to hand, as we won't be able to help without it. It's on the rating plate (usually underneath the product). The product isn't user-serviceable. If it isn't working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem, ring Customer Service for advice.

If they tell you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Ltd,  
Fir Street, Failsworth, Manchester M35 0HS  
email: [service@russellhobbs.com](mailto:service@russellhobbs.com)  
telephone: 0845 658 9700 (local rate number)

## **ONLINE**

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products

## **REGISTER ONLINE FOR –**

**£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery**

Visit [www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)

You must register within 28 days of purchase.




# Russell Hobbs



instructions

**£10,000 prize draw**  
**EXTRA year guarantee**  
**FREE rewards gallery**  
[www.productregister.co.uk/mobbs](http://www.productregister.co.uk/mobbs)  
Register online now!  
See back for details

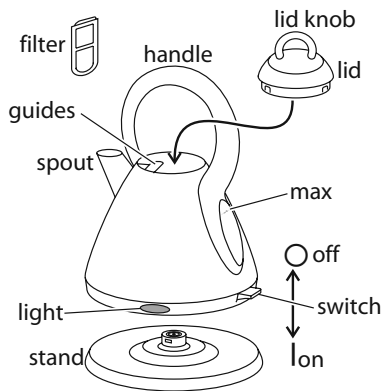

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.



## IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

**1** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

**2** Cleaning and user maintenance shall not be done by children unless over 8 and supervised.


**3** Keep the appliance and its cord out of reach of children under 8.

**4** If you overfill, the kettle may spit boiling water.

**5** Don't remove the lid while the water is heating.

**6** Use the kettle only with the stand supplied (and vice versa).

**7** If the cable is damaged, return the kettle, to avoid hazard.

 Don't put the kettle, stand, cable, or plug in liquid; don't use the kettle in a bathroom, near water, or outdoors.

**8** Keep the kettle, stand, and cable away from the edges of worktops.

**9** Put the stand on a stable, level surface.

**10** Wind excess cable beneath the stand.

**11** Unplug the stand when not in use.

**12** Don't use the kettle for any purpose other than heating water.

**13** Don't use it if it's damaged or malfunctions.

## household use only



## BEFORE FIRST USE

- Fill to **max**, boil, discard the water, and rinse.



## FILLING

**1** To minimise exposure to steam, grip the rear of the handle with one hand.

**2** Grip the lid knob with the other hand.

**3** Pull the lid up and away from the kettle.

**4** Fill with at least 2 cups of water, but don't fill above **max**.

**5** Replace the lid, press down, to lock it closed.

## SWITCHING ON

**6** Plug the stand into the wall socket.

**7** Put the kettle on the stand.

**8** Move the switch to **I** – the light will glow, and the kettle will heat up.

## SWITCHING OFF

**9** When it boils, the kettle will switch off.

**10** To switch off manually, move the switch to **O**, or simply lift the kettle off the stand.

## GENERAL

**11** Pour slowly and don't over-tilt the kettle.

**12** Don't tilt the kettle backwards, water might get on to the control area.

**13** If this happens, sit the kettle somewhere warm for 12 hours to dry before using it.

**14** Don't worry about moisture on the stand. The steam used to switch the kettle off is condensed and vented under the kettle.

**15** Don't worry about discolouration on the floor of the kettle. It's due to the bonding of the element to the kettle floor.

## USE WITH INSUFFICIENT WATER

**16** This will shorten the life of the element. A boil-dry cut-out will switch the kettle off.

**17** To avoid cycling on and off, take it off the stand, and leave it to go completely cold.

## CARE AND MAINTENANCE

**18** Unplug the stand, and let the kettle cool.

**19** Wipe inside and outside with a damp cloth.

**20** Keep all connectors and sockets dry.