





## REHEATING TOAST

- 14 Leave the browning level at your favoured setting, insert the bread, lower the lever, then press the  button.
- 15 The  light glows, the toast gets a short burst of heat, then pops up.
- 16 Only reheat plain, “unbuttered” toast.

## HINTS AND TIPS

- 17 Old (yesterday’s) bread has less moisture, so makes crisper toast.
- 18 Old bread, thin slices, and sweet bread products (tea cakes, fruit loaf, etc.) brown faster – use a lower setting.

## CARE AND MAINTENANCE

- 19 Unplug the toaster and let it cool.
- 20 Wipe outer surfaces with a damp cloth.



## ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn’t be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

## ➡ GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions.

552-262



Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.



## CUSTOMER SERVICE

If you ring, have the Model No. to hand, as we won’t be able to help without it. It’s on the rating plate (usually underneath the product). The product isn’t user-serviceable. If it isn’t working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it’s still not working, consult your retailer. If that doesn’t solve the problem, ring Customer Service for advice. If they tell you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what’s wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Ltd,  
Fir Street, Failsworth, Manchester M35 0HS  
email: [service@russellhobbs.com](mailto:service@russellhobbs.com)  
telephone: 0845 658 9700 (local rate number)



## ONLINE

[www.russellhobbs.co.uk](http://www.russellhobbs.co.uk) for more products



## REGISTER ONLINE FOR –

£10,000 prize draw, EXTRA year guarantee,  
FREE rewards gallery  
Visit [www.productregister.co.uk/rhobbs](http://www.productregister.co.uk/rhobbs)  
You must register within 28 days of purchase.




# Russell Hobbs



instructions

**£10,000 prize draw**  
**EXTRA year guarantee**  
**FREE rewards gallery**  
[www.productregister.co.uk/mobbs](http://www.productregister.co.uk/mobbs)  
Register online now!  
See back for details

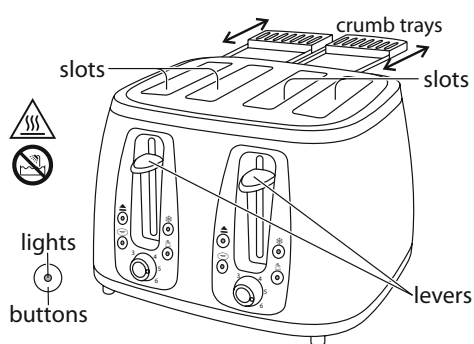

eject ▲ browning level \* frozen bread  
bagel ○ ☞ reheat

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.

### **IMPORTANT SAFEGUARDS**

Follow basic safety precautions, including:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

- 2 Cleaning and user maintenance shall not be done by children unless over 8 and supervised.
- 3 Keep the appliance and its cord out of reach of children under 8.

- 4 Don't use the toaster with a timer or remote control.

⚠ The surfaces get hot in use.

- 5 Bread may burn. Don't use the toaster near or below combustible material, like curtains. Watch it while it's hot.

- 6 Remove the crumb trays, empty, wipe with a damp cloth, dry, then replace.

- 7 If the cable is damaged, return the toaster, to avoid hazard.

⊘ Don't put the toaster in liquid..

- 8 If you're using one slot of a pair, leave the other empty, as both slots will become live.
- 9 Unplug the toaster when not in use.
- 10 Don't put anything on top of the toaster.
- 11 Don't toast or reheat buttered, torn, or misshapen bread.
- 12 If bread gets jammed, unplug the toaster, let it cool, then carefully remove the bread.
- 13 Don't use the toaster for any purpose other than those described in these instructions.
- 14 Don't use it if it's damaged or malfunctions.

**household use only**

### **BEFORE FIRST USE**

- Check the slots are empty, set the browning level to 6, and use the toaster without bread.
- It may smoke a bit, but it's nothing to worry about – ensure the room is well ventilated.

### **TOASTING BREAD**

- \* Treat the left and right pairs of slots as independent 2-slot toasters – his and hers, yours and mine – whatever works for you.
- 1 Sit the toaster upright on a level surface.
  - 2 Put the plug into the wall socket.
  - 3 Set the browning level (1 = light, 6 = dark).
  - 4 Put bread into the slots (max 22mm thick).
  - 5 Press the lever down fully. It won't lock down unless the toaster is connected to the electricity supply.
  - 6 The ▲ light glows, and the elements heat.
  - 7 When the toast pops up, the light and elements go off.

### **EJECT**

- 8 To stop the toaster mid-cycle, press ▲.

### **FROZEN BREAD**

- 9 Leave the browning level at your favoured setting, insert the frozen bread, lower the lever, then press the \* button.
- 10 The \* light glows, and the toasting time is altered automatically to give the same level of browning you get with unfrozen bread.

### **BAGEL**

- 11 Bagels are already half-toasted, so keep the setting to 4 or below.
- 12 Split the bagel, and insert the halves with the brown sides facing the outside elements.
- 13 Leave the browning level at your favoured setting (1-4), lower the lever, then press the ○ button. The ○ light will glow.