

➔ GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

🔍 CUSTOMER SERVICE

If you ring, have the Model No. to hand, as we won't be able to help without it. It's on the rating plate (usually underneath the product). The product isn't user-serviceable. If it isn't working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem, ring

Customer Service for advice.

If they tell you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Ltd,
Fir Street, Failsworth, Manchester M35 0HS
email: service@russellhobbs.com
telephone: 0845 658 9700 (local rate number)

🔍 ONLINE

www.russellhobbs.co.uk for more products

551-775



REGISTER ONLINE FOR –

£10,000 prize draw, EXTRA year guarantee,
FREE rewards gallery

Visit www.productregister.co.uk/rhobbs

You must register within 28 days of purchase.




Russell Hobbs



instructions


£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery
www.productregister.co.uk/mobbs
Register online now!
See back for details

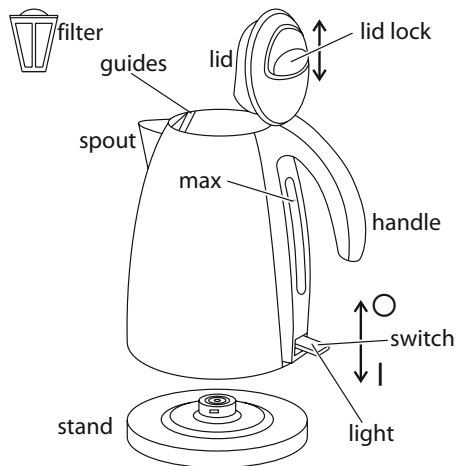

Read the instructions, keep them safe, pass them on if you pass the kettle on. Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 The kettle must only be used by or under the supervision of a responsible adult. Use and store the kettle out of reach of children.
- 2 Don't put the kettle, stand, cable, or plug in liquid; don't use the kettle in a bathroom, near water, or outdoors. 
- 3 Keep the kettle, stand, and cable away from the edges of worktops.
- 4 Put the stand on a stable, level surface.
- 5 Wind excess cable beneath the stand.
- 6 Unplug the stand when not in use.
- 7 Don't use the kettle without fitting the filter.
- 8 Use the kettle only with the stand supplied (and vice versa).

- 9 Don't use it with a timer or remote control.
- 10 Don't use the kettle for any purpose other than heating water.
- 11 Don't use the kettle if it's damaged or malfunctions.
- 12 If the cable is damaged, return the kettle, in order to avoid hazard.

household use only



BEFORE FIRST USE

- Fill to **max**, boil, discard the water, and rinse.



FILLING

- 1 Squeeze the lid lock into the lid to open it.
- 2 Fill with at least 2 cups of water, but not above **max**.
- 3 If you overfill, it may spit boiling water.
- 4 Close the lid, and press down to lock it.



SWITCHING ON

- 5 Plug the stand into the wall socket.
- 6 Put the kettle on the stand.
- 7 Move the switch to **I** – the light will glow, and the kettle will heat up.



SWITCHING OFF

- 8 When it boils, the kettle will switch off.
- 9 To switch off manually, move the switch to **O**, or simply lift the kettle off the stand.



GENERAL

- 10 Pour slowly and don't over-tilt the kettle.
- 11 Don't tilt the kettle backwards, water might get on to the control area.
- 12 If this happens, sit the kettle somewhere warm for 12 hours to dry before using it.
- 13 Don't worry about moisture on the stand. The steam used to switch the kettle off is condensed and vented under the kettle.

- 14 Don't worry about discolouration on the floor of the kettle. It's due to the bonding of the element to the kettle floor.



USING WITH INSUFFICIENT WATER

- 15 This will shorten the life of the element. A boil-dry cut-out will switch the kettle off.
- 16 To avoid cycling on and off, take it off the stand, and leave it to go completely cold.



CARE AND MAINTENANCE

- 17 Unplug the stand, and let the kettle cool.
- 18 Wipe inside and outside with a damp cloth.
- 19 Keep all connectors and sockets dry.



DESCALE REGULARLY

- 20 Descale regularly, (at least monthly). Use a descaler suitable for use in plastic products (most products have plastic parts). Follow the instructions on the package of descaler.
- ★ Products returned under guarantee with faults due to scale will incur a repair charge.




CLEANING THE FILTER

- 21 Switch the kettle off, and let it cool.
- 22 Open the lid.
- 23 Pull the filter up, out of its guides.
- 24 Rinse the filter under a running tap while brushing with a soft brush.
- 25 Slide the filter down into the guides.
- 26 Close the lid.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked  with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.