

HINTS AND TIPS

- 15 Old (yesterday's) bread has less moisture, so makes crisper toast.
- 16 Old bread, thin slices, and sweet bread products (tea cakes, fruit loaf, etc.) brown faster – use a lower setting.

CARE AND MAINTENANCE

- 17 Unplug the toaster and let it cool.
- 18 Wipe outer surfaces with a damp cloth.
- 19 Don't let anything enter the slots.
- 20 Slide the crumb tray out, empty it, wipe it with a damp cloth, dry it, then replace it.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

551-855

CUSTOMER SERVICE

If you ring, have the Model No. to hand, as we won't be able to help without it. It's on the rating plate (usually underneath the product). The product isn't user-serviceable. If it isn't working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem, ring Customer Service for advice. If they tell you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:
Customer Service, Spectrum Brands (UK) Ltd,
Fir Street, Failsworth, Manchester M35 0HS
email: service@russellhobbs.com
telephone: 0845 658 9700 (local rate number)

ONLINE

www.russellhobbs.co.uk for more products

REGISTER ONLINE FOR –

£10,000 prize draw, EXTRA year guarantee,
FREE rewards gallery
Visit www.productregister.co.uk/rhobbs
You must register within 28 days of purchase.




Russell Hobbs



instructions

£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery
www.productregister.co.uk/rhobbs
Register online now!
See back for details

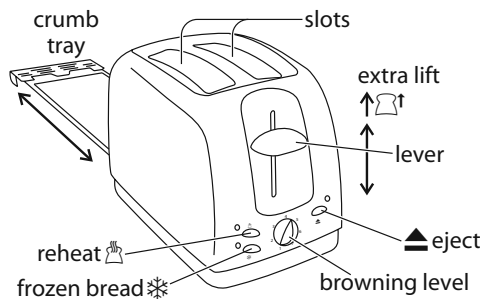

Read the instructions, keep them safe, pass them on if you pass the toaster on. Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- 2 Cleaning and user maintenance shall not be done by children unless over 8 and supervised.

2 Keep the appliance and its cord out of reach of children under 8.


3 Don't use the toaster with a timer or remote control.

4 The surfaces get hot in use. 

5 Bread may burn. Don't use the toaster near or below combustible material, like curtains. Watch it while it's hot.

6 Slide the crumb tray out, empty it, wipe it with a damp cloth, dry it, then replace it.

7 If the cable is damaged, return the toaster, to avoid hazard.

8 Don't put the toaster in liquid, don't use it in a bathroom, near water, or outdoors. 

9 If you're only using one slot, leave the other slot empty, as both slots will become "live".

10 Unplug the toaster when not in use.

11 Don't put anything on top of the toaster.

12 Check that the crumb tray is fitted.

13 Don't toast sandwiches, buttered items, torn, misshapen, or oversized slices of bread. These may jam the toaster and/or catch fire.

14 If bread gets jammed, unplug the toaster, let it cool, then carefully remove the bread.

15 Don't use the toaster for any purpose other than those described in these instructions.


16 Don't use it if it's damaged or malfunctions.

household use only

BEFORE FIRST USE

- Check the slots are empty, set the browning level to 7, and use the toaster without bread.
- It may smoke a bit, but it's nothing to worry about – ensure the room is well ventilated.


TOASTING BREAD

- 1 Sit the toaster upright on a level surface.
- 2 Put the plug into the wall socket.
- 3 Set the browning level (1 = light, 7 = dark).
- 4 Put bread into the slots (max 23mm thick).
- 5 Press the lever down fully. It won't lock down unless the toaster is connected to the electricity supply.
- 6 The  light glows, and the elements heat.
- 7 When the toast pops up, the light and elements go off.



EXTRA LIFT

- 8 To remove small items like crumpets and bagels, you may raise the lever further.



EJECT

- 9 To stop the toaster mid-cycle, press .

FROZEN BREAD

- 10 Leave the browning level at your favoured setting, insert the frozen bread, lower the lever, then press the  button.
- 11 The  light glows, and the toasting time is altered automatically to give the same level of browning you get with unfrozen bread.

REHEATING TOAST

- 12 Leave the browning level at your favoured setting, insert the bread, lower the lever, then press the  button.
- 13 The  light glows, the toast gets a short burst of heat, then it pops up.
- 14 Only reheat plain, "unbuttered" toast.