



 
Russell Hobbs










instructions

£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery
www.productregister.co.uk/hobbs
Register online now!
See back for details

Reservoir

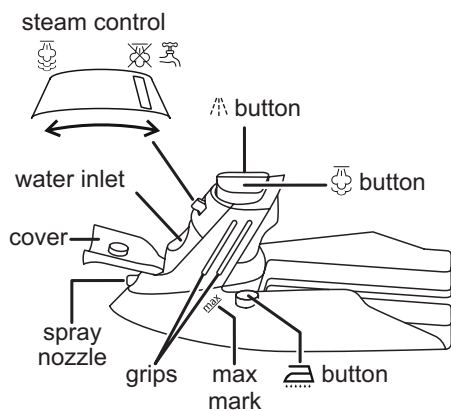

Body

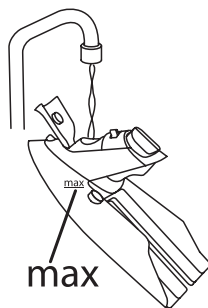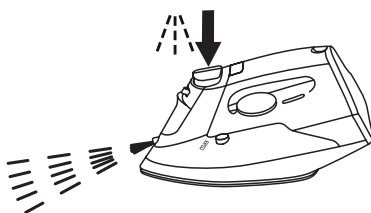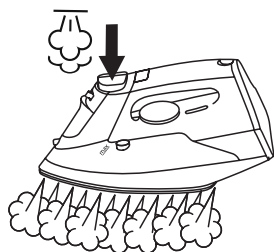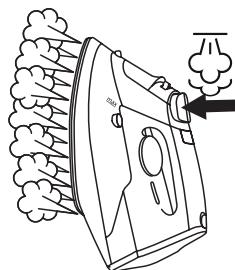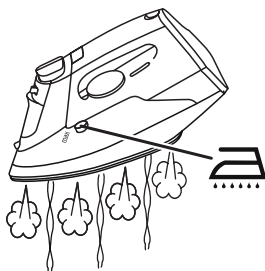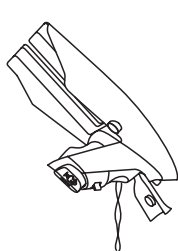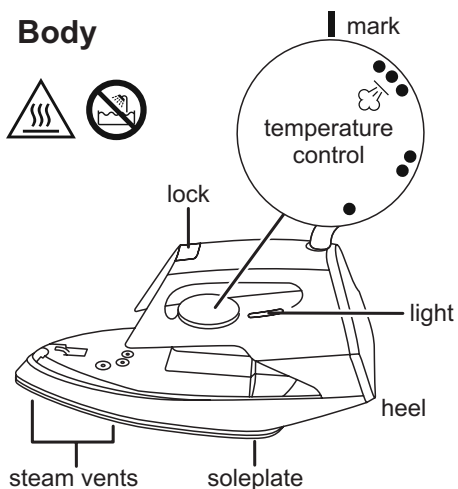       

Read the instructions, keep them safe, pass them on if you pass the iron on.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.

Use and store the appliance out of reach of children under 8 years.

Use the iron, or set it on its heel, on a stable, level, heat-resistant surface, preferably an ironing board.

Don't leave the iron unattended while plugged in, or while it's standing on the ironing board.

Unplug the iron before filling, before cleaning, and after use.

Don't operate the appliance if it's dropped or damaged, or if it malfunctions or leaks.



If the cable is damaged, return the iron, to avoid hazard.

The surfaces of the appliance will get hot.

- Don't put the appliance in liquid, don't use it in a bathroom, near water, or outdoors.
- Don't iron clothing while it's being worn – you'll injure the wearer.
- Don't use the appliance for any purpose other than those described in these instructions.
- Don't scratch the soleplate – avoid buttons, zips, etc.
- Don't wrap the cable round the appliance.
- The appliance has a protective thermal fuse, which will blow if it overheats. If this happens, the appliance will stop working, and must be returned for repair.

HOUSEHOLD USE ONLY




 



BEFORE USING FOR THE FIRST TIME

- Remove any labels, stickers or packaging from the iron and soleplate.
- Don't worry if the iron smokes a bit at first, it'll stop as the element cures.
- Iron an old piece of cotton fabric, to clean the soleplate.
- Press the  and  buttons 3 or 4 times, to check them.


AUTO SHUT-OFF

- If the iron is motionless, it will switch off after about 30 seconds with the soleplate down, or about 8 minutes if it's upright.
- It will beep 6 times
- To switch on again, lift it up, tilt it forward, then sit it upright to return to operating temperature.
- No settings are lost during auto shut-off.


PREPARATION

1. Check for textile care symbols (   ).
2. Iron fabrics needing low temperatures  first, then those that need medium temperatures , and finish with those needing high temperatures .

FILLING





1. The iron may be used with tap-water, but if you live in a hard-water area, you should use distilled water (not chemically descaled water).
2. If you buy distilled water, check that it is marketed as suitable for irons.
3. Don't add anything to the water – you'll damage the iron.
4. Unplug the appliance and let it cool.
5. Set the temperature control to ●. Set the steam control to .
6. Remove the reservoir.
 - a) Press the lock.
 - b) Hold the reservoir by the grips.
 - c) Pull the reservoir away from the body.
 - d) Release the lock.
7. Open the cover.
8. Pour water into the water inlet.
9. Pour slowly, to allow the air in the reservoir to escape, and avoid an airlock.
10. Don't fill past the **max** mark on the reservoir, or water will escape in use.
11. Close the cover. Wipe up any spillage.
12. Push the reservoir into the body till the lock clicks into place.

SWITCH ON

1. Set the temperature control to ●. Set the steam control to .
2. Sit the iron on its heel.
3. Put the plug into the power socket.
4. Turn the temperature control to bring the setting you want (see the guide below) next to the | mark.
5. The light will glow.




- When the iron reaches the set temperature, the light will go off. It will then cycle on and off as the thermostat operates to maintain the temperature.

TEMPERATURE SETTING GUIDE

Label mark	Temperature dot setting
 cool – nylon, acrylics, polyester	•
 warm – wool, polyester mixtures	••
 hot – cotton, linen	•••/max
 Do not iron	


If the instructions on the fabric label differ from this guide, follow the instructions on the label.

 STEAM IRONING



- If you intend to use steam, the temperature setting must be  or higher.
- Set the steam control to the setting you want ( = no steam,  = high).
- Wait till the light goes off, then start ironing.

SPRAY

Water spotting affects some fabrics. Test this on a hidden part of the fabric.


- Lift the iron off the fabric.
- Aim the spray nozzle at the fabric.
- Press the  button.
- You may have to press it 2 or 3 times to pump water through the system.

SHOT OF STEAM

- If you intend to use steam, the temperature setting must be  or higher.
- Lift the iron off the fabric.
- Press the  button.
- You may have to press it 2 or 3 times to pump water through the system.
- Leave 4 seconds between shots, to let the steam build up.



DRY IRONING

If you're going to be dry ironing for 20 minutes or more, empty the reservoir first, to avoid spontaneous bursts of steam.


- Set the steam control to .
- Wait till the light goes off, then start ironing.

VERTICAL STEAMING




- Remove wrinkles from hanging clothes, hanging curtains, and furnishing fabrics.
- Check that there is adequate ventilation behind the fabric, otherwise moisture may build up, causing mildew.

3. Check that there is nothing behind the fabric that may be damaged by the steam.
4. Check that pockets, turn-ups, and cuffs are empty.
5. Set the temperature control to **max**. Set the steam control to .
6. Lift the iron off the fabric.
7. Press the  button.
8. You may have to press it 2 or 3 times to pump water through the system.
9. Leave 4 seconds between shots, to let the steam build up.

AFTER USE

1. Set the temperature control to **•**. Set the steam control to .
2. Unplug the appliance.
3. Remove the reservoir.
4. Open the cover.
5. Hold it over a sink, turn it upside down, and drain the water from the reservoir, via the water inlet.
6. Close the cover.
7. Replace the reservoir.
8. Sit the iron on its heel.
9. Leave it to cool down completely.
10. Wipe up any spillage.
11. Clean the outside surfaces of the appliance with a damp cloth.
12. Remove spots from the soleplate with a little vinegar.
13. Store the iron on its heel, to avoid corrosion and damage to the soleplate.

SELF CLEAN

1. To prevent scale building up, use the self clean function at least monthly in normal water areas, more often in hard water areas.
Products returned under guarantee with faults due to scale will be subject to a repair charge.
2. You'll need a basin or a large bowl to catch the water coming out of the soleplate.
3. Fill the reservoir to the **max** mark.
4. Set the temperature control to **max**. Set the steam control to .
5. Sit the iron on its heel.
6. Put the plug into the power socket.
7. Wait till the light goes off.
8. Hold the iron over the basin or bowl, with the soleplate down.
9. Press the  button, and keep it pressed in.
10. Gently move the iron to and fro.
11. Water and steam will wash scale and dust through the soleplate.
12. Carry on till the reservoir is empty.
13. Release the  button.
14. Follow the instructions under *After Use*.

ANTI-SCALE

The anti-scale agent incorporated in the iron helps prevent the build-up of scale.

Don't use a descaling solution, or you'll destroy the anti-scale agent.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

SERVICE

If you ring Customer Service, please have the Model No. to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: support@russellhobbs.com

telephone: 0845 658 9700 (local rate number)

GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.



ONLINE

www.russellhobbs.co.uk for more products



REGISTER ONLINE FOR –



£10,000 prize draw,

EXTRA year guarantee,

FREE rewards gallery

Visit www.productregister.co.uk/rhobbs

You must register within 28 days of purchase.