 
 
 
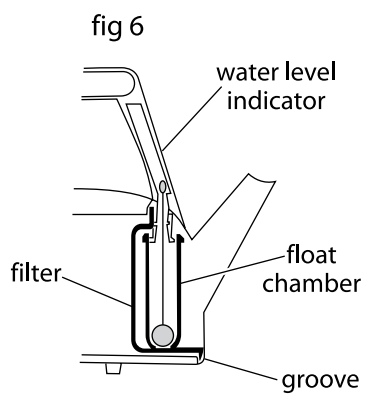 
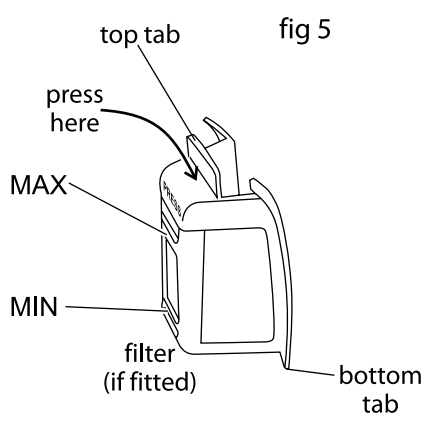 
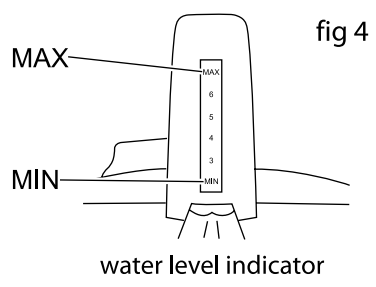 


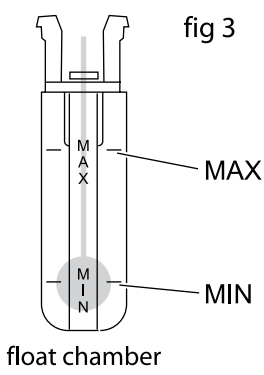

Russell Hobbs

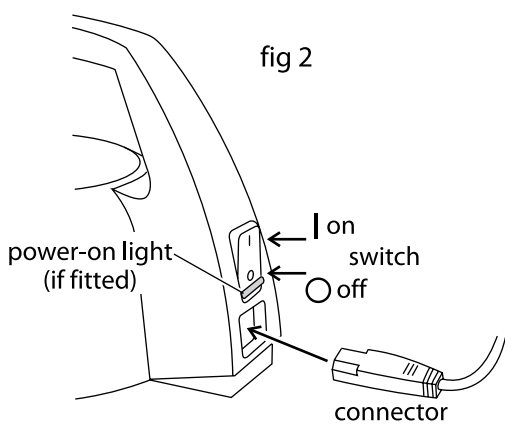


instructions

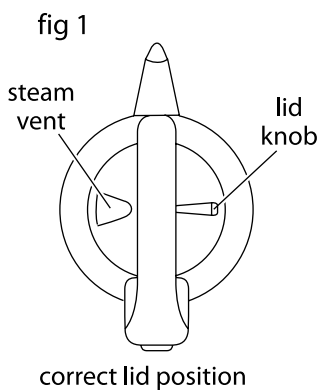

Read the instructions and keep them safe. If you pass the kettle on, pass on the instructions too. Remove all packaging, but keep it till you know the kettle works.

important safeguards

Follow basic safety precautions, including:

- 1 This kettle must only be used by or under the supervision of a responsible adult. Use and store the kettle out of reach of children.
- 2 Don't put the kettle, cable, connector, or plug in liquid. Don't use the kettle in a bathroom, near water, or outdoors. 
- 3 Turn the lid till it's at right angles to the handle, to prevent steam from the vent reaching the handle or your hand (fig 1).
- 4 Don't touch hot surfaces. Use the handle and the lid knob.
- 5 Don't open the lid while the water is heating.
- 6 Take care when pouring – pour slowly, and don't over-tilt the kettle.
- 7 The scald hazard lasts long after boiling. Keep the kettle and cable away from the edges of worktops and out of reach of children.
- 8 Route the cable so it doesn't overhang, and can't be tripped over or caught.
- 9 Attach the connector to the kettle before plugging into the wall socket, and unplug from the wall socket before removing the connector from the kettle.
- 10 Unplug the kettle when not in use, before moving and before cleaning. Let the kettle cool down before cleaning and storing away.
- 11 Fill the kettle with at least enough water to cover the element, but don't fill it above MAX, or it may spit boiling water.
- 12 Check the lid is fully closed before switching the kettle on, or it may not switch off.
- 13 Keep the kettle, cable, connector, and plug away from sources of heat.
- 14 Don't use the kettle for any purpose other than heating water.
- 15 Use the kettle only with the connector and cable supplied (or a replacement supplied by us), and vice versa.
- 16 This appliance must not be operated by an external timer or remote control system.
- 17 Don't use the kettle if it's damaged or malfunctions.
- 18 If the cable is damaged, it must be replaced by a specially prepared cable available from us, in order to avoid hazard.

household use only

before using for the first time

- 1 Fill to the MAX mark, boil, discard the water, then rinse the kettle. Do this three times, to remove manufacturing dust, etc.

positioning

- 2 Sit the kettle on a stable, level surface.
- 3 Route the cable so it doesn't overhang, and can't be caught or tripped over.

filling

caution keep clear, steam may escape from the lid.

- 4 Check the kettle is switched off – press the bottom of the switch (○).
- 5 Unplug the cable from the wall socket, then remove the connector from the kettle.
- 6 Grip the lid knob, then lift the lid up and away from the kettle, to prevent the steam swirling round your hand.

- 7 Fill the kettle via the lid aperture.
- 8 Fill with at least enough water to cover the element, but don't fill above MAX, or it may spit boiling water.

fitting the lid

- 9 Check the lid is fully closed before switching the kettle on, or it may not switch off when it boils:
 - a) there are four latches round the lid
 - b) tilt it slightly, with the steam vent down
 - c) engage the latch beneath the steam vent under the kettle rim
 - d) press the lid forward, towards the steam vent, and downward, towards the kettle, to engage the other three latches
 - e) turn the lid till it's at right angles to the handle (fig 1), to prevent steam from the vent reaching the handle, or your hand

switching on

- 10 Check the kettle is switched off – press the bottom of the switch (○).
- 11 Attach the connector to the kettle, then plug the cable into the wall socket. Switch the socket on, if it's switchable.
- 12 Press the top of the switch (|).
- 13 The power-on light (if fitted) will glow, and the kettle will start to heat up.

switching off

- 14 When the water boils, the kettle will switch off, the switch will revert to 0 (off), and the power-on light (if fitted) will go out.
- 15 To switch off manually, press the bottom of the switch (○).

general

- 16 When you lift the kettle, you may see a little moisture on the work surface. Don't worry – it's the steam used to switch off automatically, which then condenses and escapes via vents under the kettle.
- 17 Don't tilt the kettle backwards – water might get on to the control area. If this happens, let the kettle dry before use – sit it somewhere warm for 12 hours.
- 18 Unplug the cable from the wall socket, then remove the connector from the kettle, before pouring.
- 19 To avoid the risk of splashing, pour slowly and don't over-tilt the kettle.

using with insufficient water

- 20 Don't switch the kettle on unless the horizontal part of the element is covered by water. Misuse of this kind will shorten the life of the element.
- 21 If the kettle is switched on when it doesn't contain sufficient water:
 - a) a boil-dry cut-out will switch the kettle off
 - b) unplug the cable from the wall socket, then remove the connector from the kettle
 - c) leave the kettle to cool down fully
 - d) don't fill it till it's cold, or it may spit

care and maintenance

- 1 Check the kettle is switched off – press the bottom of the switch (○).
- 2 Unplug the cable from the wall socket, then remove the connector from the kettle.
- 3 Leave the kettle to cool down fully.
- 4 Wipe the kettle, inside and out, with a damp cloth. You may use a little household detergent, but if you do, rinse well to avoid tainting the water.
- 5 Don't let the connector, or its socket in the rear of the kettle get wet.
- 6 Don't put the kettle, cable, connector, or plug in liquid.
- 7 Don't use harsh or abrasive cleaning agents or solvents.

descale regularly – even in soft water areas

- 8 **Limescale** may be white, coloured, even rusty-looking, but it's normally visible.
- 9 **Phosphate scale** isn't generally visible, but it's there, even in soft water areas.
- 10 **All scale** causes overheating, reduces the kettle's life, and may trigger the boil-dry cut-out.
- 11 So, even with soft water, descale regularly, to help keep your kettle in working order.
- 12 Use a descaler suitable for plastic products (all kettles have plastic parts).
- 13 Follow the instructions on the descaler, rinse several times, then fill, boil and discard the water, to ensure no residues are left.
- ✳ Products returned under guarantee with faults due to scale will be subject to a repair charge.

water filter (where fitted)

- 14 Scale particles suspended in the water may give it a cloudy or greasy appearance. The filter will prevent these particles going into your drink. If you see deposits on the filter, clean it, otherwise the performance of your kettle will drop, your drinks may contain scale, and the water inside the kettle may look cloudy.

cleaning the filter


- 15 Unplug the cable from the wall socket, then remove the connector from the kettle.
- 16 Leave the kettle to cool down fully.
- 17 Check your hands are free from anything that might leave a taint.
- 18 Remove the lid.
- 19 Press down on the top of the filter, to release the top tab from under the kettle rim.
- 20 Ease the filter away from the kettle wall, and lift it out of the kettle.
- 21 You'll have to jiggle it a bit to get the top past the handle screws, and the bottom past the float chamber.
- 22 Rinse the filter under a running tap, while brushing it with a soft brush.
- 23 To replace the filter, ease the bottom of the filter under the bottom of the float chamber.
- 24 Push the bottom tab into the groove between the bottom and the wall of the kettle.
- 25 Push the top of the filter forward, towards the spout, till the top tab hits the rim.
- 26 Press down on the top of the filter, where it joins the top tab, and ease the top tab under the kettle rim.
- 27 Rinse the kettle out with fresh water and it's ready for use.

connection

The product must be earthed. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the green/yellow wire to ⊕ or E, the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

wheelie bin symbol

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

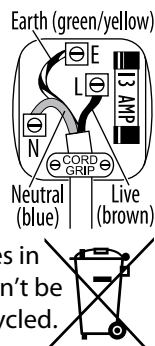

service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer. If that doesn't solve the problem:

Pack carefully, with a note of your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to Customer Returns (address below right).

Customer Service

(correspondence only)

Salton Europe Ltd
Failsworth
Manchester
M35 0HS

Customer Returns

Salton Europe Ltd
Heath Mill Road
Wombourne
Wolverhampton
WV5 8AQ

Customer Service (service@saltoneurope.com)
telephone 0845 658 9700 (local rate number)

guarantee

Defects affecting product functionality appearing within one year of purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

online

www.russellhobbs.co.uk for more products