



Russell Hobbs




20610-1

 www.russellhobbs.com

Register online for an EXTRA year guarantee

Visit uk.russellhobbs.com/product-registration You must register within 28 days of purchase

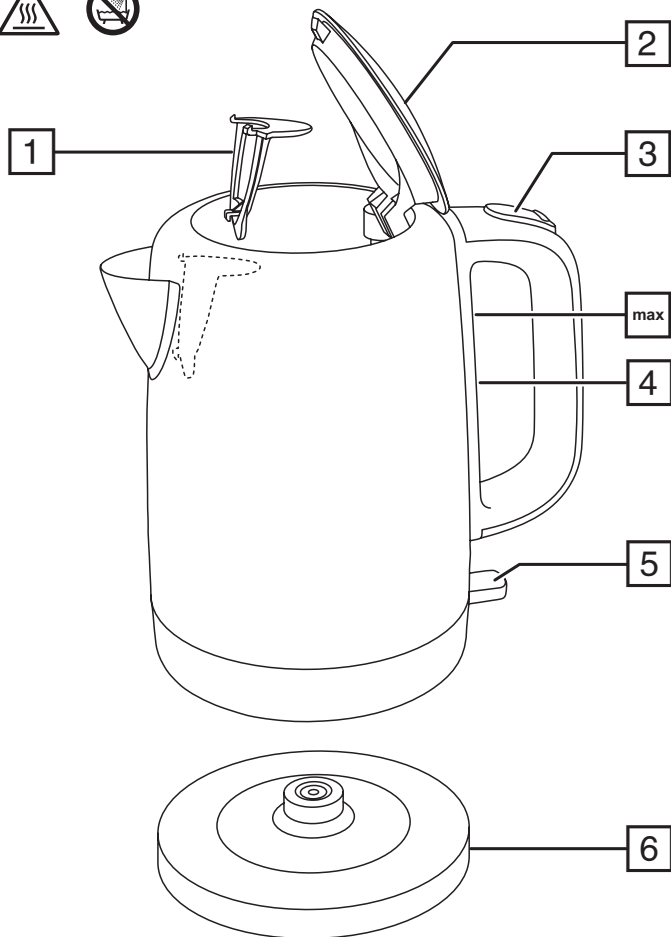

Read the instructions, keep them safe, pass them on if you pass the kettle on.
Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.

 Parts of the appliance will get hot during use.

WARNING: Do not open the lid while the water is boiling.

If you overfill, the kettle may spit boiling water.

Use the kettle only with the stand supplied (and vice versa).


If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.

Avoid spillage on the stand/connector.

The surface of the heating element is subject to residual heat after use.

Use the appliance according to these instructions. Any misuse may cause potential injury, electric shock or other hazards.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - farm houses.
-  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Don't use the kettle for any purpose other than heating water.
 - Don't operate the appliance if it's damaged or malfunctions.

PARTS

- | | |
|-------------|----------------------|
| 1. Filter | 4. Water level gauge |
| 2. Lid | 5. Switch |
| 3. Lid lock | 6. Stand |

BEFORE USING FOR THE FIRST TIME

Fill to **max**, boil, discard the water, then rinse. Do this twice to remove any manufacturing dust, etc.

FILLING

1. Press the lid lock to open the lid.
2. Fill with at least 2 cups of water, but don't fill above the **max** mark.
3. If you overfill, the kettle may spit boiling water.
4. Close the lid, and press it down, to lock it closed.
5. Check the lid is closed, or the kettle won't switch off when it boils.

USING YOUR KETTLE

1. Put the stand on a stable, level surface.
2. Plug the stand into the wall socket.
3. Put the kettle on the stand.
4. Move the switch to the **I** position. The light will come on and the kettle will heat up.
5. When the water boils, the kettle will switch itself off and the light will go out.
6. To switch off manually, move the switch to **O** or lift the kettle off the stand.

GENERAL

- Remove the kettle from the stand before pouring.
- To avoid the risk of splashing, pour slowly and don't over-tilt the kettle.
- Don't tilt the kettle backwards – water might get on to the control area.
- If this happens, let the kettle dry before use – put it somewhere warm for 12 hours.
- When you lift the kettle, you may see moisture on the stand. Don't worry it's the steam used to switch the kettle off automatically, which then condenses and escapes through vents under the kettle.

BOIL DRY PROTECTION

1. This will shorten the life of the element. A boil-dry cut-out will switch the kettle off.
2. You must then remove the kettle from its stand to reset the cut-out.
3. Sit the kettle on the work surface till it's cold.

CARE AND MAINTENANCE

1. Unplug the stand and let the kettle cool before cleaning.
2. Wipe the kettle, inside and out, with a damp cloth. You may use a little household detergent, but if you do, rinse well to avoid tainting the water.
3. Keep all connectors and sockets dry.

4. Don't put the kettle or stand in liquid.
5. Don't use harsh or abrasive cleaning agents or solvents.

CARE AND MAINTENANCE

1. Check that the kettle is switched off – move the switch to **O**, or lift it off the stand.
2. Unplug the stand (switch the socket off first, if it's switchable), and let the kettle cool down fully.
3. Wipe the kettle, inside and out, with a damp cloth. You may use a little household detergent, but if you do, rinse well to avoid tainting the water.
4. Keep all connectors and sockets dry.
5. Don't put the kettle or stand in liquid.
6. Don't use harsh or abrasive cleaning agents or solvents.

DESCALING

Descale regularly, at least monthly

Descale the appliance at least monthly with a proprietary descaler. Use a descaler suitable for plastic products (all kettles have plastic parts). Follow the instructions on the package of descaler.

Products returned under guarantee with faults due to scale will be subject to a repair charge.

WATER FILTER

Scale particles suspended in the water may give it a cloudy or greasy appearance. The filter will prevent these particles going into your drink. If you see deposits on the filter, clean it, otherwise the performance of your kettle will drop, your drinks may contain scale, and the water inside the kettle may look cloudy.

CLEANING THE FILTER

1. Switch the kettle off and let it cool.
2. Open the lid.

3. Push the top of the filter down and back, into the kettle, to release the hooks on the top of the filter from the rectangular holes at the top of the spout.
4. Lift the filter out of the kettle to disengage the bottom hook from the hole at the bottom of the spout.
5. Rinse the filter under a running tap while brushing with a soft brush.
6. Lower the filter into the kettle, and engage the bottom hook in the hole at the bottom of the spout.
7. Press the top of the filter gently down and towards you, to force the hooks on the top of the filter into the rectangular holes on either side of the spout.
8. Close the lid.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

SERVICE

If you ring Customer Service, please have the Model Number to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service, Spectrum Brands (UK) Ltd, Fir Street, Failsworth,
Manchester M35 0HS

email: support@russellhobbs.com

telephone: 0345 658 9700 (local rate number)

Please note: If you have purchased the product within the last 6 months,
please contact the retailer in the first instance to deal with any matters
relating to warranty.

GUARANTEE

Defects affecting product functionality appearing within the guarantee
period will be corrected by replacement or repair at our option provided
the product is used and maintained in accordance with the instructions.
Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other
applicable laws, or where the warranty would be prohibited under any
economic sanctions, export control laws, embargos, or other restrictive
trade measures enforced by the United States or other applicable
jurisdictions. This includes, without limitation, any warranty claims
implicating parties from, or otherwise located in, Cuba, Iran, North Korea,
Syria and the Crimea region.

Guarantee period = 2 years from first retail purchase.

To claim an extra 1 year guarantee, register your product online within 28
days of purchase. Register at: **uk.russellhobbs.com/product-registration**

Consumables are guaranteed only for their recommended lifecycle.

Replacement/Spare parts* are excluded and are only covered by a 1 year
warranty.

* Examples include filters, removable grill plates, drip trays/crumb trays etc.



www.russellhobbs.com for more products